

PERKINS

RG38557

1104C-44T

RG38557

2006/08/22

The information given within this parts book was correct at the time of printing and is subject to change without notice. Always refer to your local Perkins outlet for the latest information. Only fully trained personnel should carry out servicing of engines. Before working on any engine always refer to the correct user service and maintenance manual.

Always refer to your local Perkins outlet before purchasing any parts

Subject to any existing rights of third parties, the information given in this document is the property of Perkins Engines Limited and should not be copied, in whole or part, without the prior written consent of the Company.

REFERENCE ONLY

Contents

1. Introduction	Pg. 4
2. How To Use Your Parts Book	Pg. 4
3. Engine Breakdown	Pg. 5
4. Symbol Descriptions	Pg. 9
5. Parts Lists & Illustrations	Pg. 11
6. Parts Index	Pg. 46

8001 →

18 →

29 →

REFERENCE ONLY

Introduction

The build list of your engine, found on the front page of this parts book, provides a unique reference to the components fitted to your engine; therefore this parts book is only applicable to this particular engine

Always quote your build list and engine serial number when contacting your Perkins outlet.

How to use your Parts Book

This parts book has been designed to provide you with all the information you need to identify parts to service your engine. There are several features within the book to help you to find the parts you require.

Front Page

This lists your build list number and the date of publication of this book.

Symbol Descriptions

Provides a quick reference guide to the symbols used within the book.

Engine Breakdown

Use this to identify all the major sections of your engine and the relevant pages within the book.

Parts Lists & Illustrations

This section shows each major section of your engine broken down into individual part numbers along with an associated illustration for identifying the parts you require.

The illustrations used in this parts book are representational only and should only be used for identification purposes.

For fitting instructions please refer to your engine Service Manual.

Parts Index

Using either the part number or description of the part you require this section will help you locate the page within the **Parts Lists & Illustrations** section where the part appears.

Section	Page	Section	Page
Short Engine ACE40004	11	Atomisers AFHR4286	37
Cylinder Block & Liners ACHR0047	13	Throttle & Stop Controls AFHR4286	39
Crankshaft, Main & Big End Bearings ACHR0047	15	Pick-Up Sensor AFHR4286	41
Pistons & Rings ACHR0047	17	Fuel Leak-Off Pipe AFHR4286	43
Connecting Rods ACHR0047	19	Pick-Up Sensor AFHR4286	45
Rear End Oil Seal ACHR0047	21	Flywheel Housing CHHR0707	47
Cylinder Head Assembly ACHR0047	23	Flywheel & Starter Ring DDHR0755	49
Rocker Shaft Assembly ACHR0047	25	Starter Motor EDHR0847	51
Timing Gear & Camshaft ACHR0047	27	Fan Drive FBHR0896	53
Fuel Injection Pump AFHR4286	29	Sump GBHR2321	55
Fuel Injection Pump AFHR4286	31	Dipstick & Filler Tube GBHR2321	57
Boost Control Pipe AFHR4286	33	Oil Strainer GBHR2321	59
High Pressure Fuel Pipes AFHR4286	35	Cylinder Head Cover HBHR2879	61

Engine Breakdown

Section	Page
Cylinder Head Cover HBHR2879	63
Filler HBHR2879	65
Breather HBHR2879	67
Blanking Plates HBHR2879	69
Oil Cooler JBHR2347	71
Oil Filter JBHR2347	73
Blanking Plates JBHR2347	75
Oil Filter JDHR0023	77
Front End Drive Input KBHR0535	79
Water Pump LBHR2253	81
Water Pump LBHR2253	83
Pipes LBHR2253	85
Water Outlet Housing LDHR0702	87

Section	Page
Water Outlet Housing LDHR0702	89
Fan MDHR1357	91
Alternator NDHR2712	93
Alternator Bracket & Fixings NDHR2712	95
Pulleys NDHR2712	97
Timing Case QCHR0022	99
Timing Cover QCHR0022	101
Timing Cover QCHR0022	103
Blanking Plugs QDHR1368	105
Lubricating Oil Pump & Delivery Housing RBHR0031	107
Turbocharger SBHR1460	109
Feed Pipes SBHR1460	111

Section	Page
Leak-Off Pipes SBHR1460	113
Pipework & Connections SBHR1460	115
Pipework & Connections SBHR1460	117
Exhaust Manifold SBHR1460	119
Pipework & Connections TBHR0886	121
Lift Pump VBHR2178	123
Filter to Injection Pump Pipe VBHR2178	125
Injection Pump to Filter Pipe VBHR2178	127
Heater Plugs WDHR0345	129

Section	Page
Engine Lifting Eyes XBHR0458	131
Engine Mounts ZCHR1178	133
Lubricating Oil Pressure Switch/Gauge ZJHR0546	135
Lubricating Oil Pressure Switch/Gauge ZJHR0546	137
Temperature Gauge & Sender ZJHR0360	139
Miscellaneous & Auxiliaries ZZHR1012	141
Top Service Kit SACR0350	143
Bottom Service Kit SGBR0376	145


Engine Breakdown

REFERENCE ONLY

Symbols and Notes

Symbol	Description
⇐	From Engine Number
⇒	Upto Engine Number
●↻	Repairs and Replaces
👁	See Appropriate Section - Reference Number
⚡	Alternative
🖋	Order
↺	Remanufactured Part
📦	New for Old Part
⚙	Number of Teeth
≡	Thickness
↓	Bottom
↑	Top
↶	Left Hand
↷	Right Hand
⌘	Reference for Detailed Breakdown
Ⓢ	Other Service Options Available
🗿	Cylinder Number
📖	See History Section

 
ACE40004

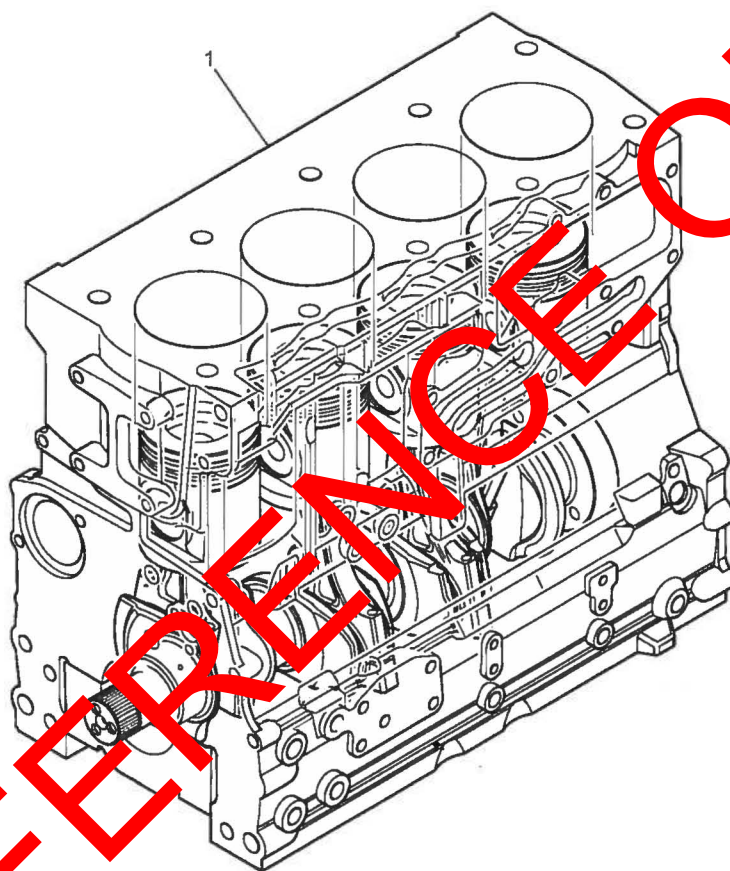

Short Engine		Plate A
		ACE40004

Item	Part No.	References	Qty.	Description	Notes
1	RG40004		1	SHORT ENGINE	
2	—ZZ50311		1	CYLINDER BLOCK KIT	
3	—ZZ90222		1	CRANKSHAFT KIT	
4	—		4	CONROD KIT	
5	—4115P015		4	PISTON AND RING KIT	
6	—2418F704		1	SEAL - REOS HOUSING	
7	—3211C002		10	METRIC BOLT	
Service Options					
3	ZZ90222P		1	CRANKSHAFT KIT - EXCHANGE	
4	4115C311		4	CON ROD ASSEMBLY	GRADE F
4	4115C312		4	CON ROD ASSEMBLY	GRADE G
4	4115C313		4	CON ROD ASSEMBLY	GRADE H
4	4115C314		4	CON ROD ASSEMBLY	GRADE J
4	4115C315		4	CON ROD ASSEMBLY	GRADE K
4	4115C316		4	CON ROD ASSEMBLY	GRADE L
5	4115P016	$\frac{+}{-}$ (+)0.50MM	4	PISTON AND RING KIT	(A)
5	4115P017	$\frac{+}{-}$ (+)1.00MM	4	PISTON AND RING KIT	(A)
Footnotes					
(A)	SERVICE BY COMPLETE ENGINE				

 ACHR0047

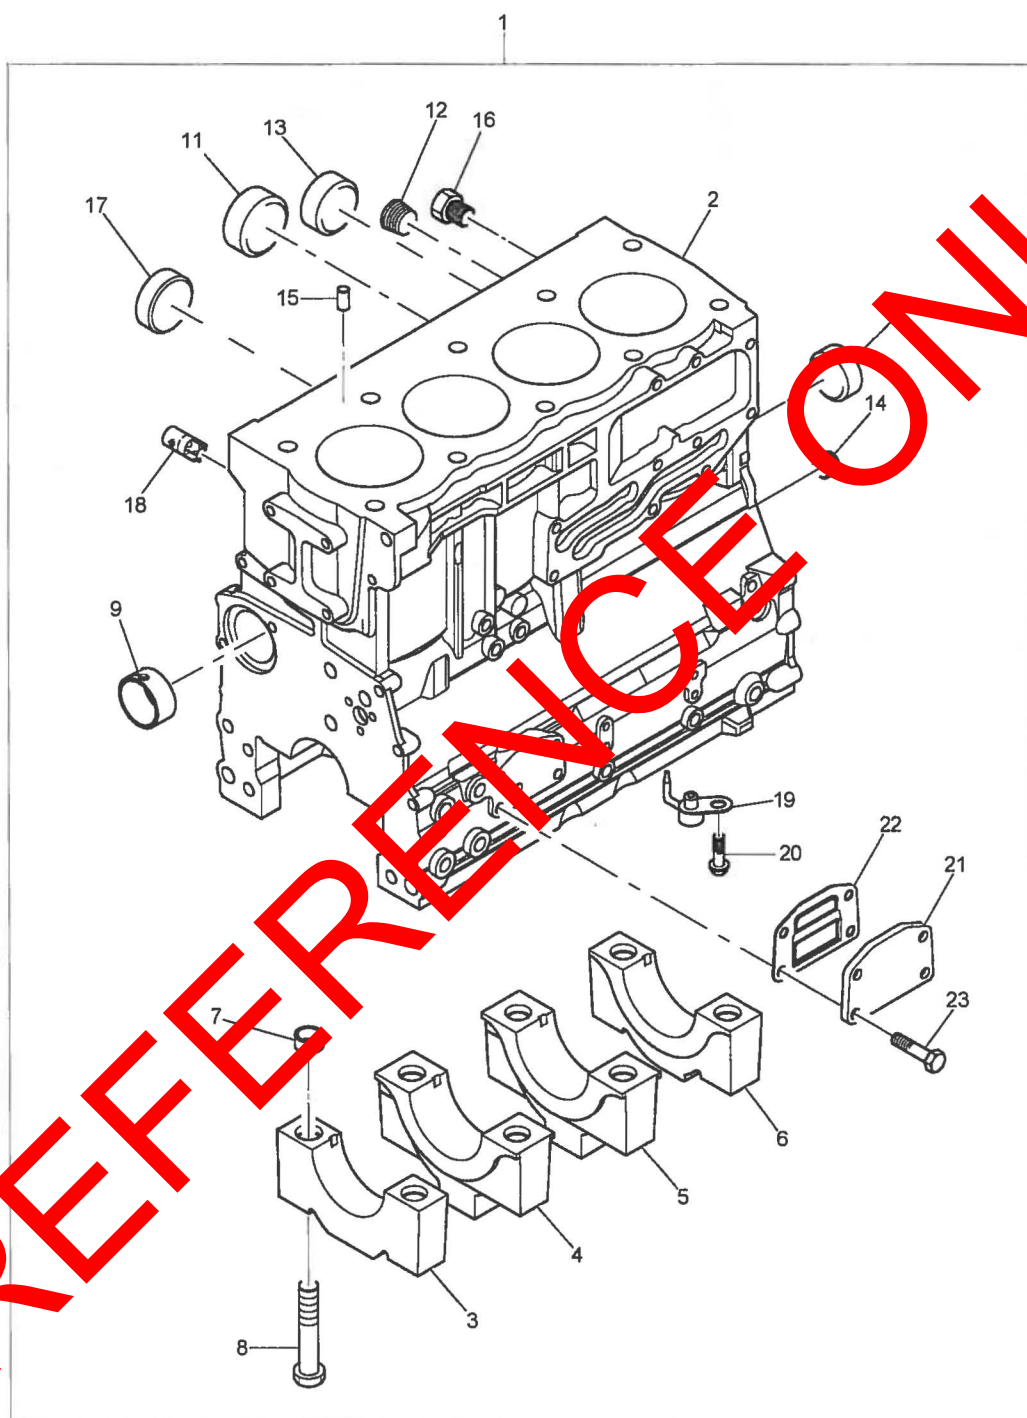


Cylinder Block & Liners	Plate A
	ACHR0047

Item	Part No.	References	Qty.	Description	Notes
1	ZZ50311		1	CYLINDER BLOCK ASSEMBLY	
2	—	⇒ ZZ50311	1	CYLINDER BLOCK	
3	—	⇒ ZZ50311	1	BEARING CAP	
4	—	⇒ ZZ50311	2	BEARING CAP	
5	—	⇒ ZZ50311	1	BEARING CAP	
6	—	⇒ ZZ50311	1	BEARING CAP	
7	—33142111		10	THIMBLE	
8	—32166329		10	SCREW	
9	—3112D071		1	CAMSHAFT BUSH	
10	—3241A012		1	PLUG	
11	—3241A011		2	PLUG	
12	—0650588		1	PLUG	
13	—0650710		1	PLUG	
14	—3212P008		1	PLUG	
15	—3244A009		2	DOWEL	
16	—32141316		2	PLUG	
17	—2485A108		1	PLUG	
18	—3212V006		1	PLUG	
19	—2113A003		1	WATER COOLING JET	
20	—2314F001		4	SCREW	
21	—3623A009		1	BLANKING PLATE	
22	—3688A039		1	GASKET - OIL FILTER HEAD	
23	—2314H033		4	SCREW	

● PPL026421

 ACHR0047

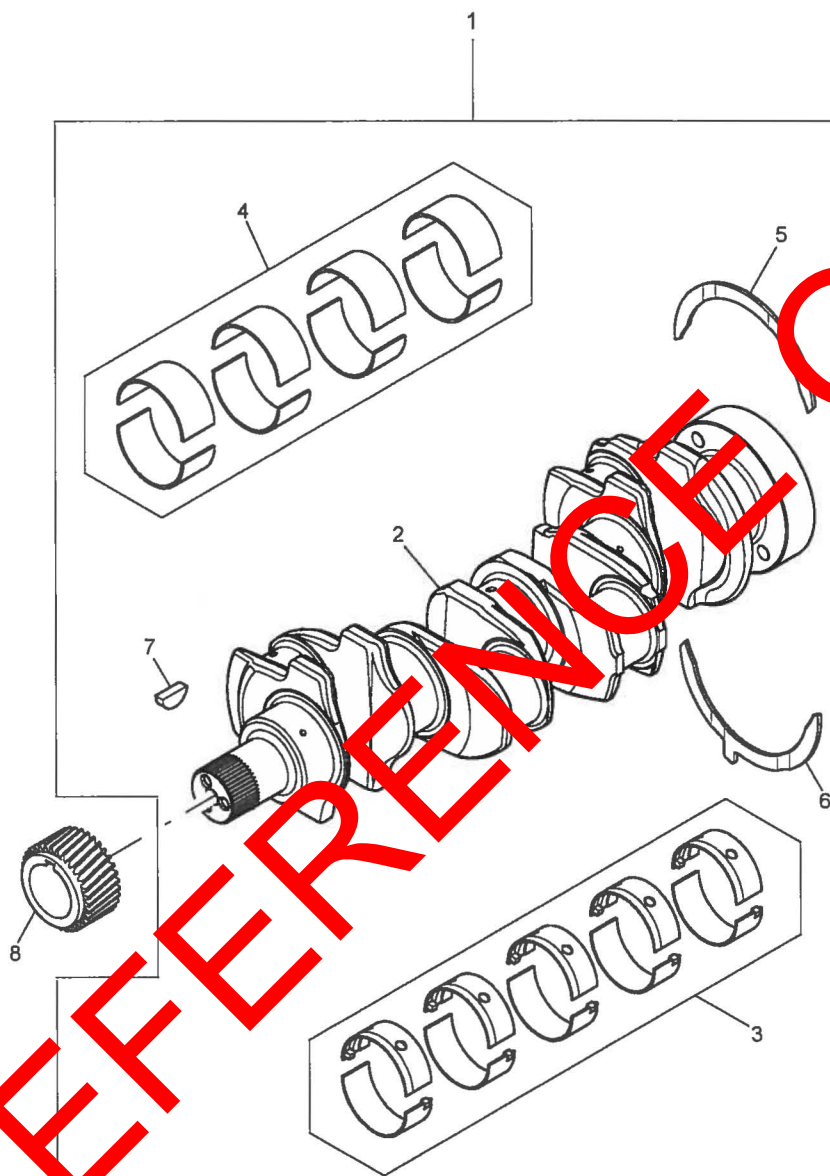

Crankshaft, Main & Big End Bearings		Plate A
● PPL026421	ACHR0047	

Item	Part No.	References	Qty.	Description	Notes
1	ZZ90222		1	CRANKSHAFT KIT	
2	—	 ZZ90222	1	CRANKSHAFT	
3	— U5MB0018		1	MAIN BEARING KIT	
4	— U5ME0013		1	BIG END BEARING KIT	
5	— 31137551		2	THRUST WASHER	
6	— 31137561		2	THRUST WASHER	
7	— 0500012		1	WOODRUFF KEY	
8	3117C221		1	CRANKSHAFT GEAR	
Service Options					
1	ZZ90222P		1	CRANKSHAFT KIT EXCH	
3	U5MB0018A	 (+) 0.010"	1	MAIN BEARING KIT - O/S	
3	U5MB0018B	 (+) 0.020"	1	MAIN BEARING KIT - O/S	
3	U5MB0018C	 (+) 0.030"	1	MAIN BEARING KIT - O/S	
4	U5ME0013A	 (-) 0.25MM	1	BIG END BRG KIT - O/S	
4	U5ME0013B	 (-) 0.50MM	1	BIG END BRG KIT - O/S	
4	U5ME0013C	 (-) 0.75MM	1	BIG END BRG KIT - O/S	
5	31137312	 (+) 0.007"	2	THRUST WASHER	
6	31137322	 (+) 0.007"	2	THRUST WASHER	

ACHR0047




Pistons & Rings	Plate A
	ACHR0047

Item	Part No.	References	Qty.	Description	Notes
1	4115P015	Ⓢ	4	PISTON AND RING KIT	
2		⇒ 4115P015	1	PISTON	
3		⇒ 4115P015	1	PISTON PIN	
4	2721332		2	CIRCLIP	
5	UPRK0002		1	PISTON RING KIT	
Service Options					
1	4115P016	⚖ (+)0.50MM	4	PISTON AND RING KIT	(A)
1	4115P017	⚖ (+)1.00MM	4	PISTON AND RING KIT	(A)
Footnotes					
(A)	SERVICE BY COMPLETE ENGINE				

REFERENCE ONLY

 ACHR0047

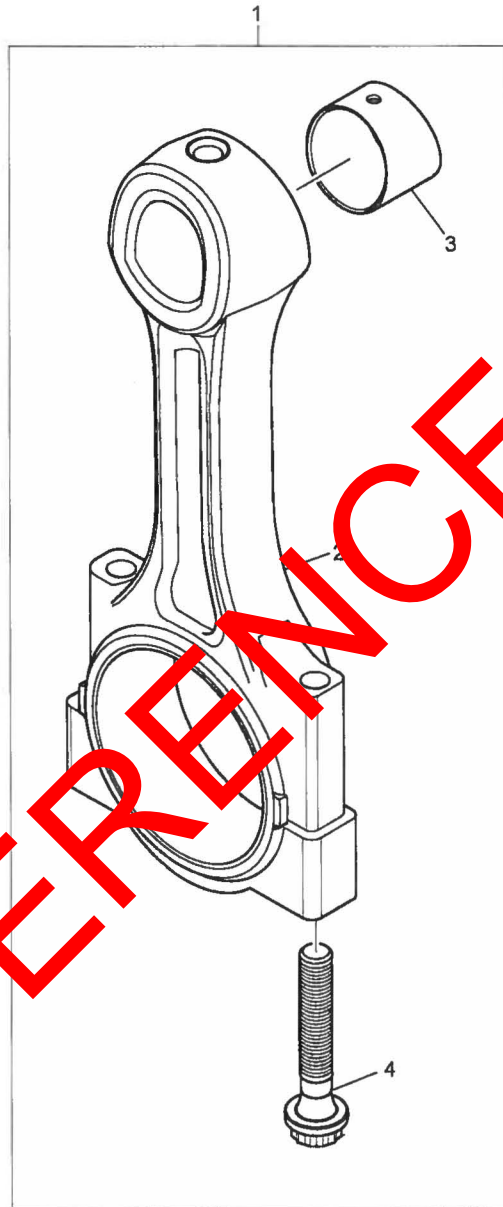


Connecting Rods		Plate A
		ACHR0047

Item	Part No.	References	Qty.	Description	Notes
1		Ⓢ	4	CONROD KIT	
2		⇒ SERVICE OPTION	1	CON ROD	
3	3112A005		1	SMALL END BUSH	
4	3212V003		2	CON ROD BOLT	
Service Options					
1	4115C311		4	CON ROD ASSEMBLY	GRADE F
1	4115C312		4	CON ROD ASSEMBLY	GRADE G
1	4115C313		4	CON ROD ASSEMBLY	GRADE H
1	4115C314		4	CON ROD ASSEMBLY	GRADE J
1	4115C315		4	CON ROD ASSEMBLY	GRADE K
1	4115C316		4	CON ROD ASSEMBLY	GRADE L

REFERENCE ONLY

 ACHR0047

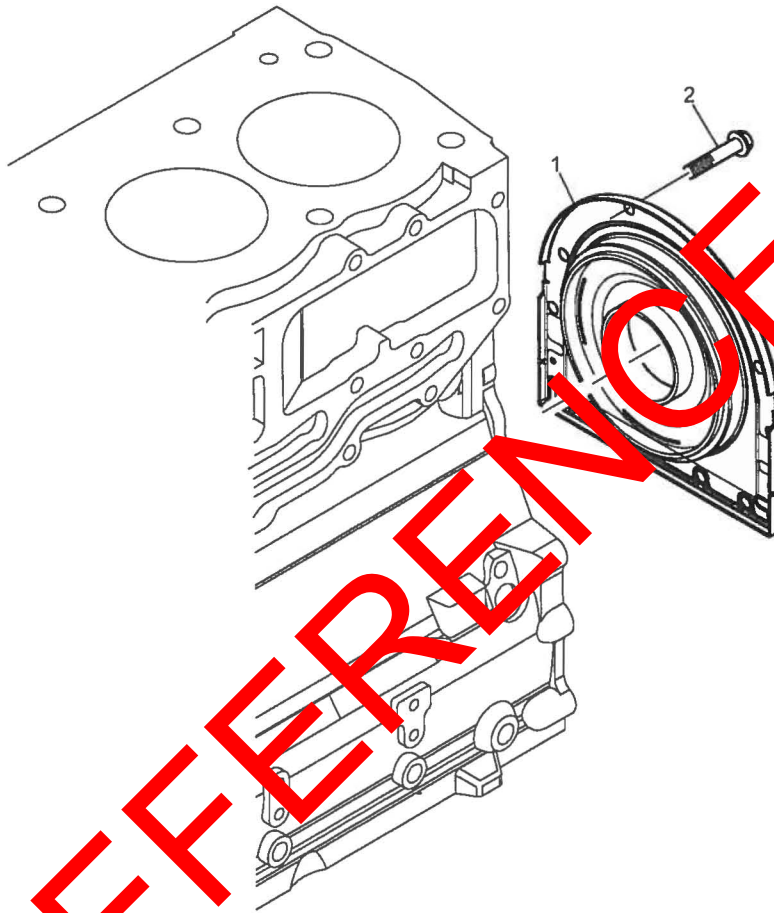


Rear End Oil Seal		Plate A
		ACHR0047

Item	Part No.	References	Qty.	Description	Notes
1	2418F704		1	SEAL - REOS HOUSING	
2	3211C002		10	METRIC BOLT	

REFERENCE ONLY

 
ACHR0047

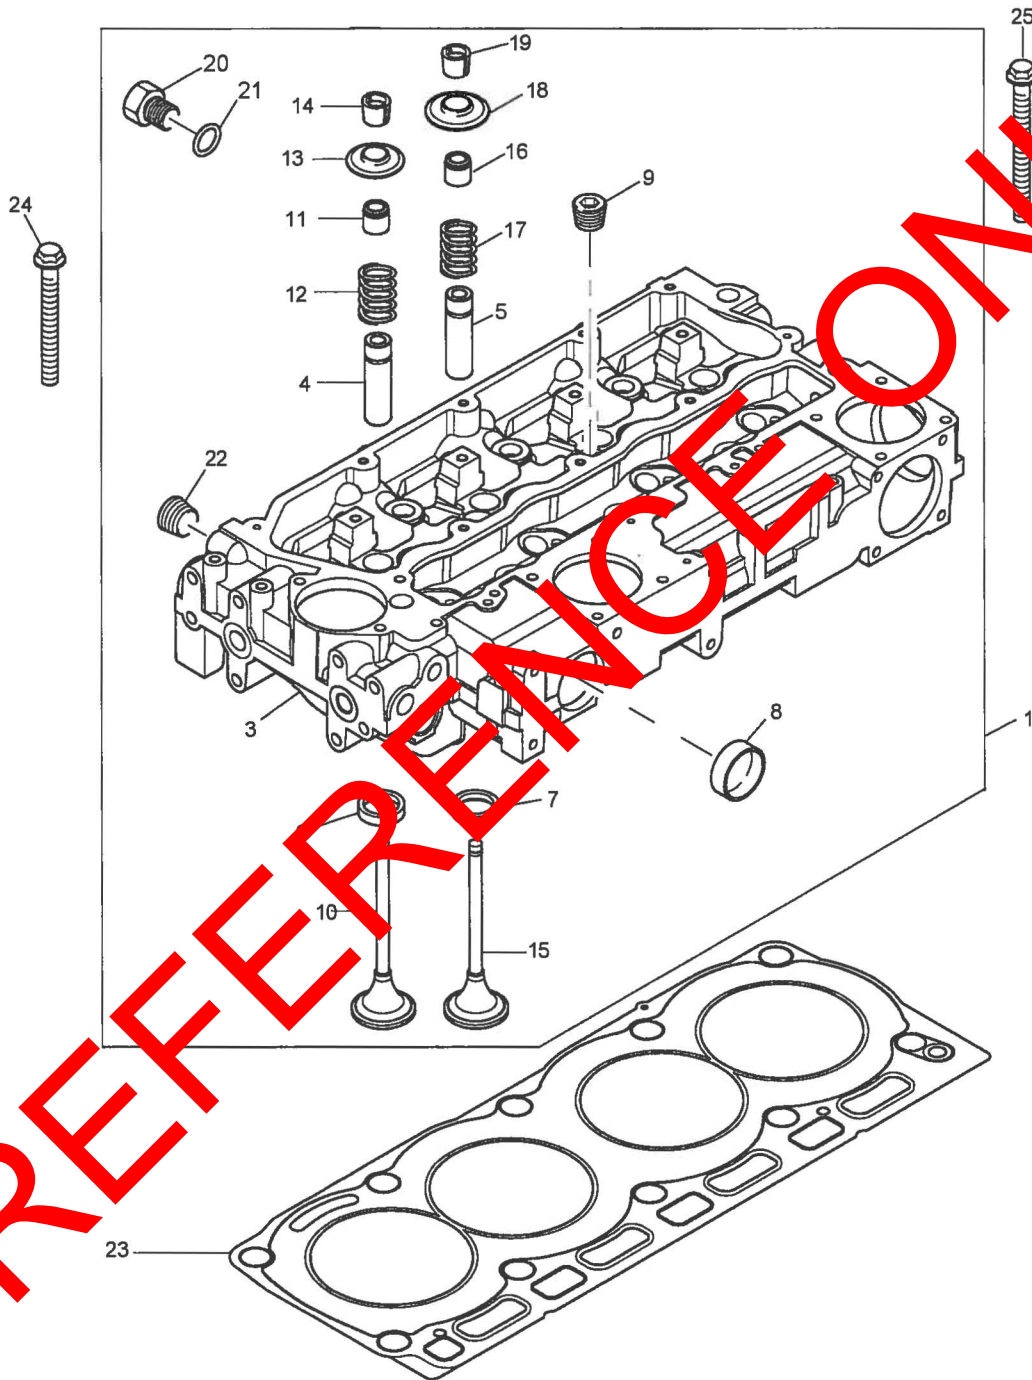

Cylinder Head Assembly	Plate A
	ACHR0047

Item	Part No.	References	Qty.	Description	Notes
1	ZZ80268		1	CYLINDER HEAD KIT	
2		⇒ ZZ80269	1	CYLINDER HEAD ASSEMBLY	
3		⇒ ZZ80268	1	CYLINDER HEAD	
4	—3313E021		4	VALVE GUIDE	
5	—3313E021		4	VALVE GUIDE	
6	—3314A151		4	VALVE SEAT INSERT	
7	—3314A161		4	VALVE SEAT INSERT	
8	—32416117		2	PLUG	
9	—0650588		4	PLUG	
10	—3142H071		4	INTAKE VALVE	
11	—2418M519		4	VALVE STEM SEAL	(A)
12	—3174A016		4	VALVE SPRING	
13	—3342A011		4	CAP	
14	—3142W004		8	VALVE COLLET	
15	—3142A151		4	EXHAUST VALVE	
16	—2418M517		4	SEAL - VALVE STEM	(B)
17	—3174A016		4	VALVE SPRING	
18	—3342A011		4	CAP	
19	—3142W004		8	VALVE COLLET	
20	—3278A006		1	PLUG	
21	—2415H003		1	SEAL - SENSOR	
22	—2431154		1	PLUG	
23	3681E051		1	GASKET - CYLINDER HEAD	
24	3218A011		7	CYLINDER HEAD BOLT	
25	3218A012		3	CYLINDER HEAD BOLT	
Footnotes					
(A)	GREEN				
(B)	BROWN				

 
ACHR0047

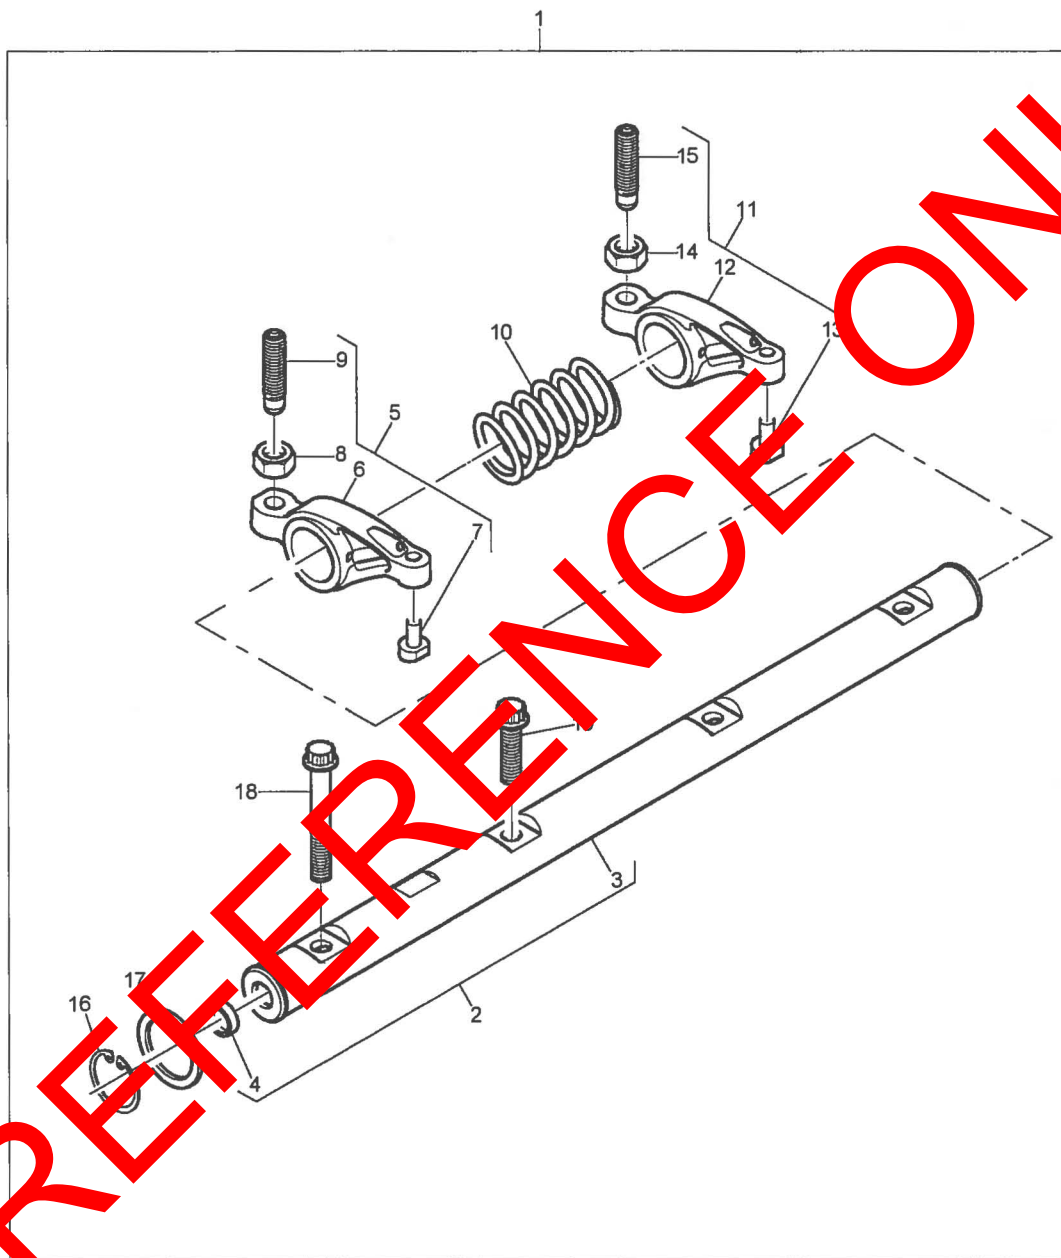

Rocker Shaft Assembly		Plate A
		ACHR0047

Item	Part No.	References	Qty.	Description	Notes
1	4115R612		1	ROCKER SHAFT ASSEMBLY	
2	4115R703		1	ROCKER SHAFT ASSY - MINOR	
3		⇒ 4115R703	1	ROCKER ARM SHAFT	
4	2485A104		2	PLUG	
5	4115R314		4	ROCKER ARM ASSEMBLY	
6		⇒ 4115R314	1	ROCKER ARM	
7		⇒ 4115R314	1	PAD	
8	0576052		1	NUT	
9	32114145		1	SCREW	
10	3174A015		3	ROCKER SHAFT S...	
11	4115R315		4	ROCKER ARM ASSEMBLY	
12		⇒ 4115R315	1	ROCKER ARM	
13		⇒ 4115R315	1	PAD	
14	0576052		1	NUT	
15	32114145		1	SCREW	
16	2722A022		2	CIRCLIP	
17	2134A502		2	WASHER	
18	2316A901		1	SCREW	
19	2316A902		3	SCREW	

 ACHR0047

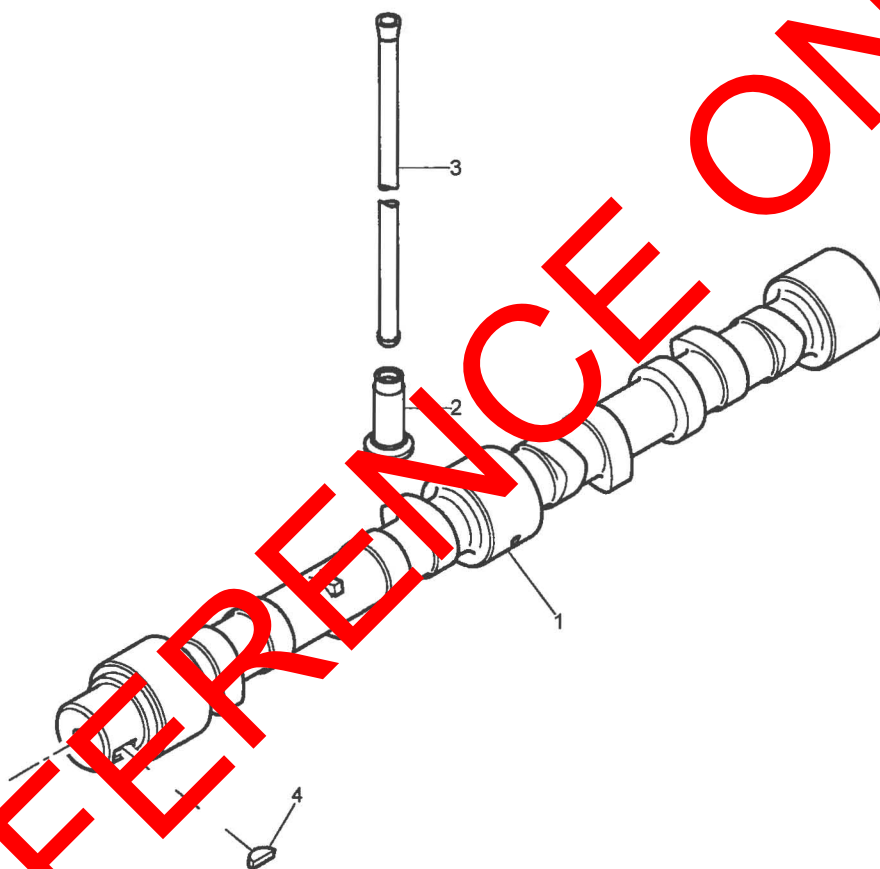


Timing Gear & Camshaft		Plate A
		ACHR0047

Item	Part No.	References	Qty.	Description	Notes
1	3141D222		1	CAMSHAFT	
2	3142U031		8	TAPPET	
3	31434307		8	PUSHROD	
4	0500012		1	WOODRUFF KEY	

REFERENCE ONLY

→ 30/04/2004

 AFHR4286

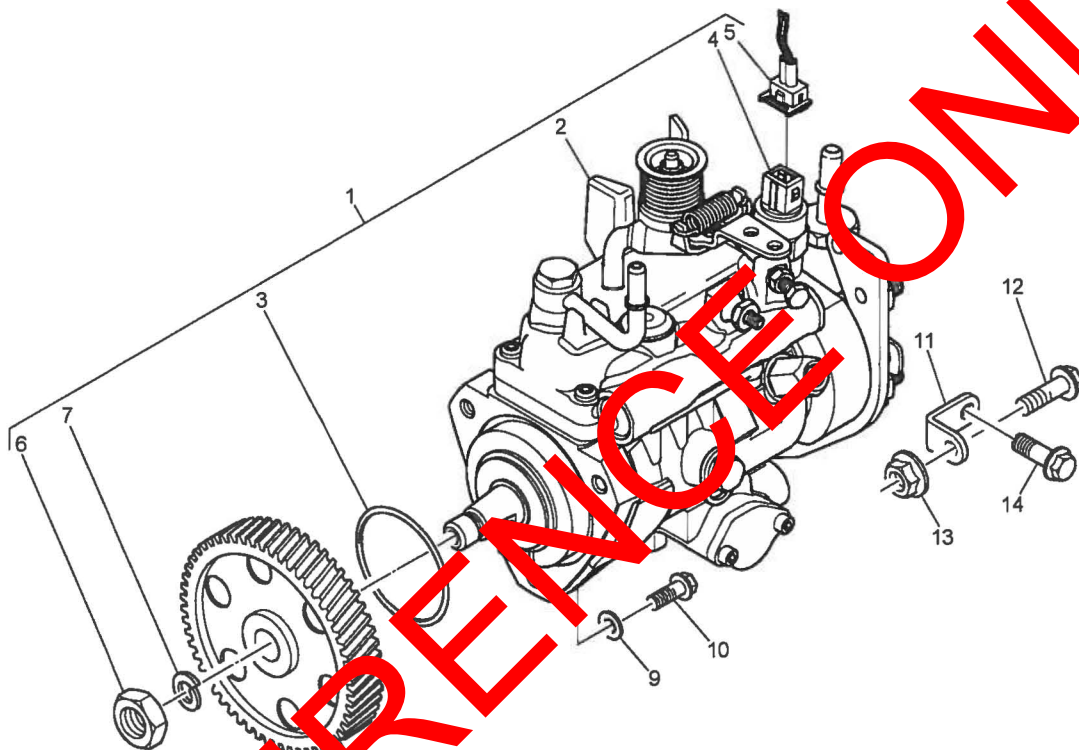


Fuel Injection Pump		Plate A
→ 30/04/2004	AFHR4286	

Item	Part No.	References	Qty.	Description	Notes
1	2644H022		1	FUEL INJECTION PUMP	
2	—	⇒ 2644H022	1	FUEL INJECTION PUMP	
3	— 26420318		1	SEAL - O RING	
4	— 26420469		1	SOLENOID	
5	— 3161C012		1	ADAPTOR	
6	— 2318A108		1	NUT	
7	— K134AF01		1	WASHER	
8	3117L261		1	INJECTION PUMP GEAR	
9	2411D008		3	WASHER	
10	2314H004		3	SCREW	
11	3641A007		1	BRACKET	
12	2314H003		1	SCREW	
13	2318A603		1	NUT	
14	2314J002		1	SCREW	

REFERENCE ONLY

→ 01/05/2004

 AFHR4286

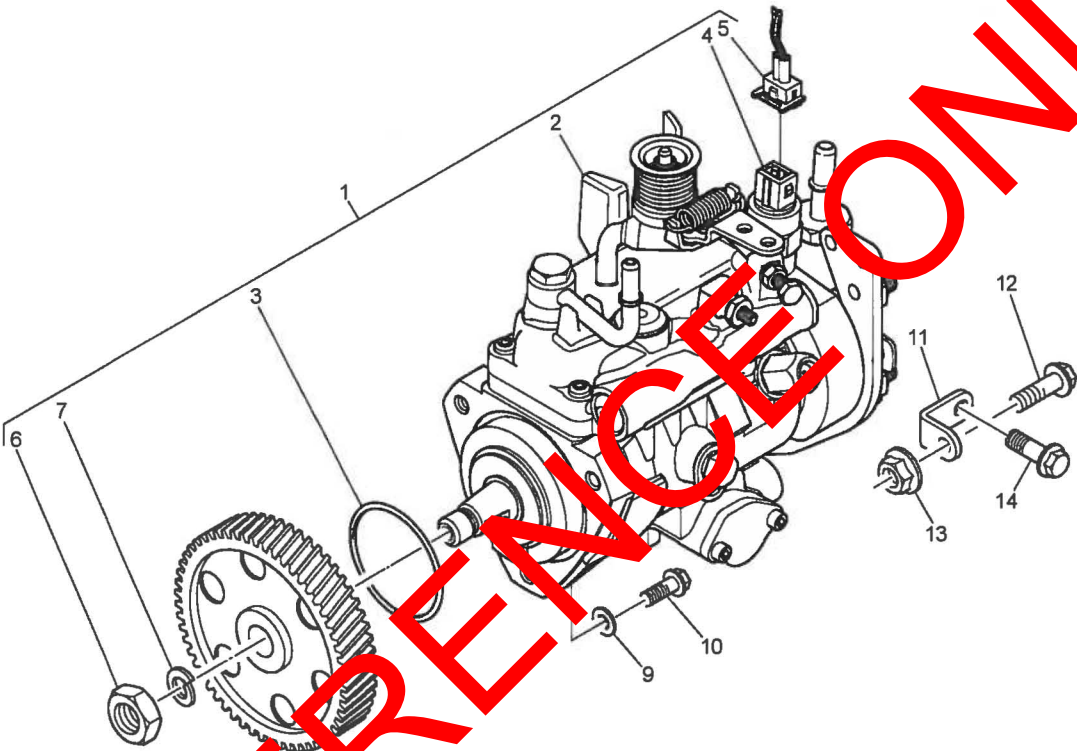


Fuel Injection Pump		Plate B
→ 01/05/2004	AFHR4286	

Item	Part No.	References	Qty.	Description	Notes
1	2644H024		1	FUEL INJECTION PUMP	
2	—	⇒ 2644H024	1	FUEL INJECTION PUMP	
3	—26420318 ✓		1	SEAL - O RING	
4	—26420469 ✓		1	SOLENOID	
5	—3161C012 ✓		1	ADAPTOR	
6	—2318A108 ✓		1	NUT	
7	—K134AF01 ✓		1	WASHER	
8	3117L261		1	INJECTION PUMP GEAR	
9	2411D008		3	WASHER	
10	2314H004		3	SCREW	
11	3641A007		1	BRACKET	
12	2314H003		1	SCREW	
13	2318A603		1	NUT	
14	2314J002		1	SCREW	

REFERENCE ONLY

↪ 01/05/2004

 AFHR4286

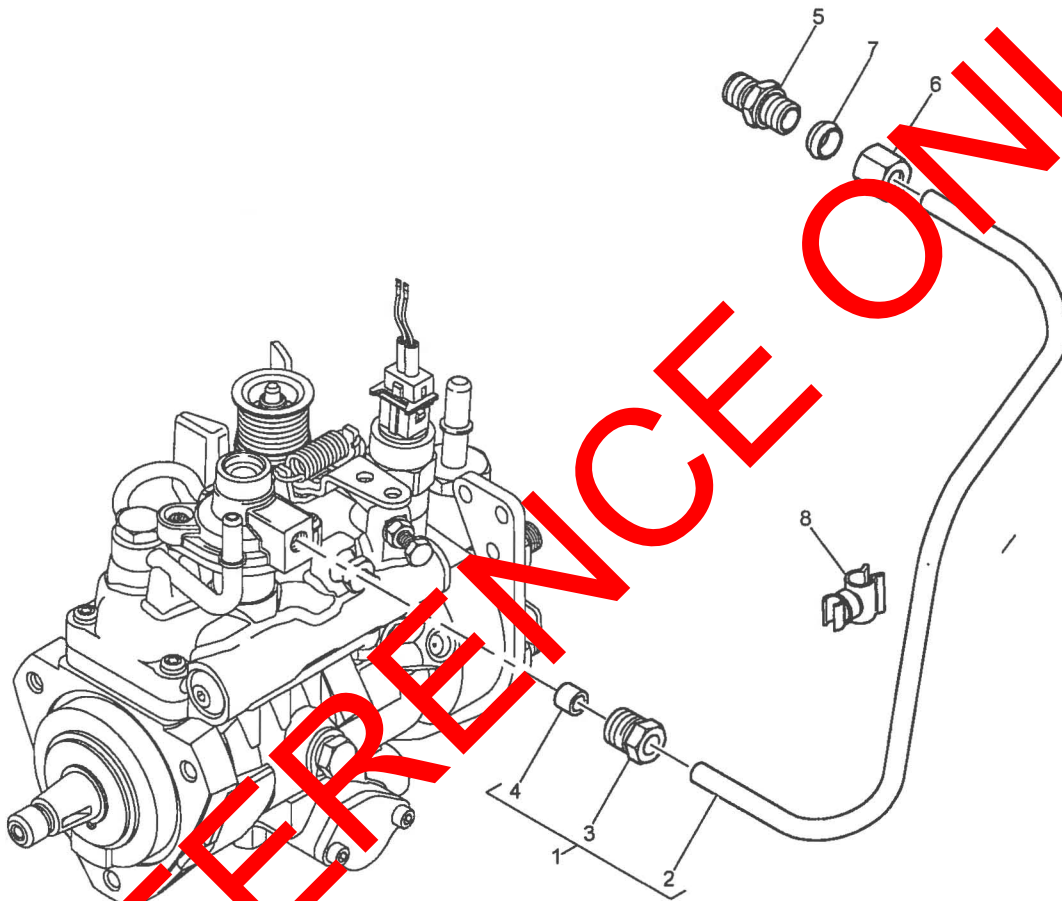


Boost Control Pipe		Plate A
→ 01/05/2004		AFHR4286

Item	Part No.	References	Qty.	Description	Notes
1	4121A063		1	PIPE - BOOST	
2	—	⇒ 4121A063	1	PIPE - BOOST	
3	—3353D004		1	UNION NUT	
4	—33811112		1	OLIVE	
5	0206002		1	UNION	
6	0576111		1	NUT	
7	0566002		1	OLIVE	
8	K138AF02		1	CLIP	

REFERENCE ONLY

 AFHR4286

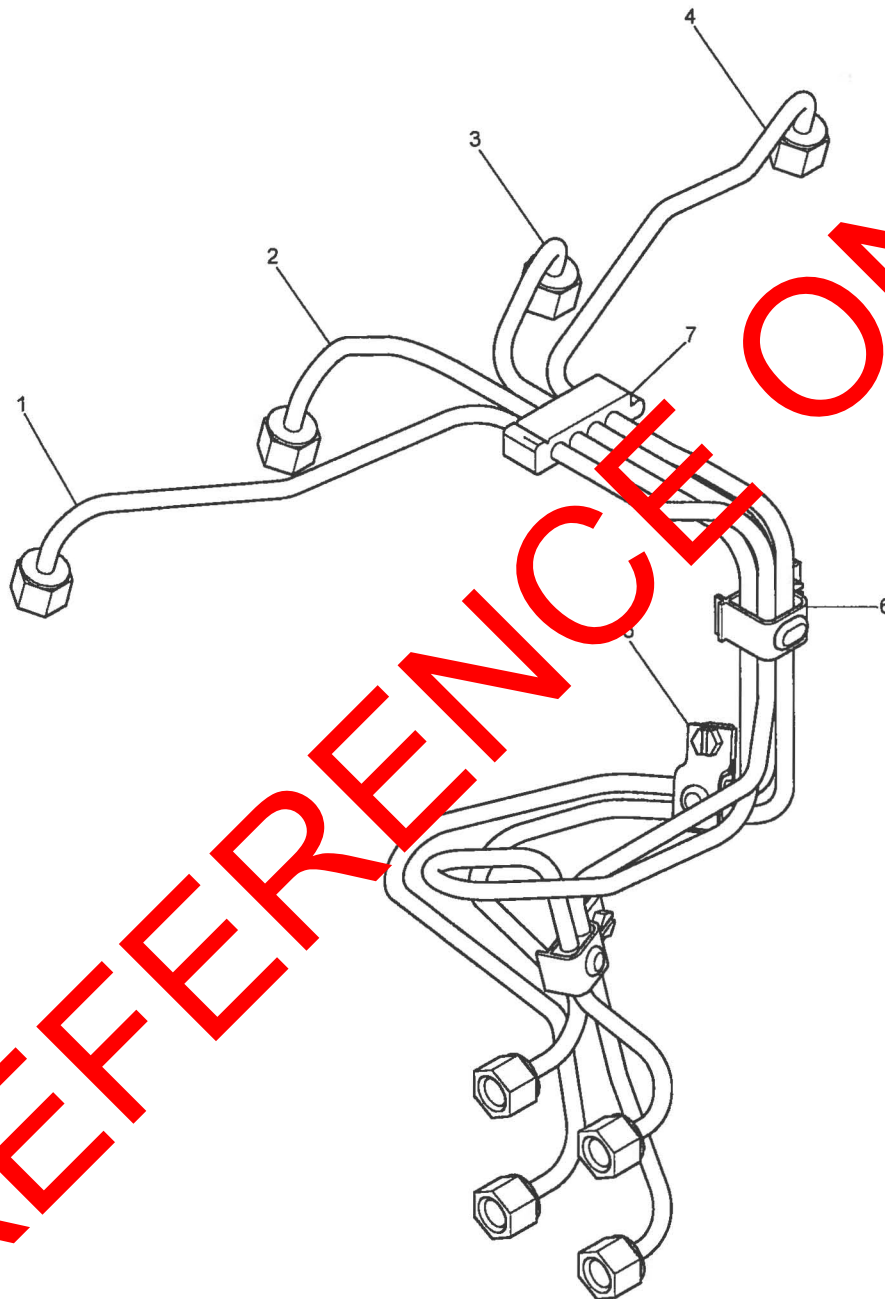


High Pressure Fuel Pipes		Plate A
		AFHR4286

Item	Part No.	References	Qty.	Description	Notes
1	3525A101		1	PIPE - FUEL INJ NO 1 CYL	
2	3525A102		1	PIPE - FUEL INJ NO 2 CYL	
3	3525A103		1	PIPE - FUEL INJ NO 3 CYL	
4	3525A104		1	PIPE - FUEL INJ NO 4 CYL	
5	2481Y011		2	CLIP	
6	2481Y012		1	CLIP	
7	2646E019		1	CLIP	

REFERENCE ONLY

 AFHR4286

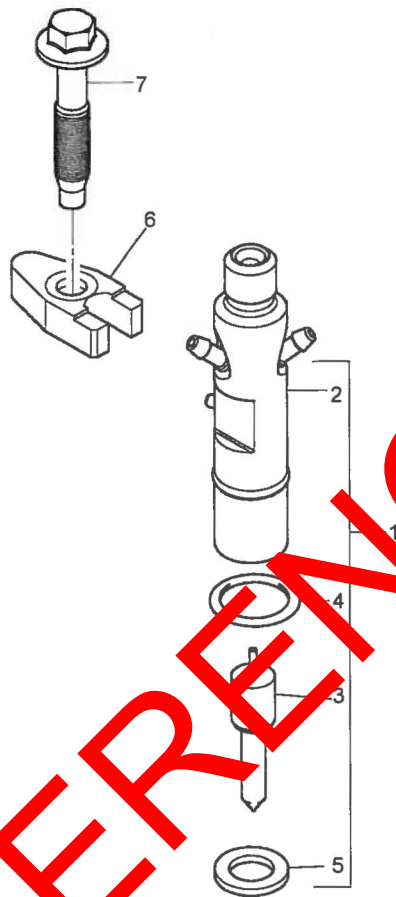


Atomisers	Plate A
	AFHR4286

Item	Part No.	References	Qty.	Description	Notes
1	2645K011		4	INJECTOR	
2		⇒ 2645K011	1	INJECTOR NOZZLE HOLDER	
3	—2645K611		1	INJECTOR NOZZLE	
4	—26460064		1	SEAL - INJECTOR	
5	—L311FF02		1	INJECTOR WASHER	
6	3751A241		4	INJECTOR CLAMP	
7	2314W009		4	SCREW	

REFERENCE ONLY

 AFHR4286

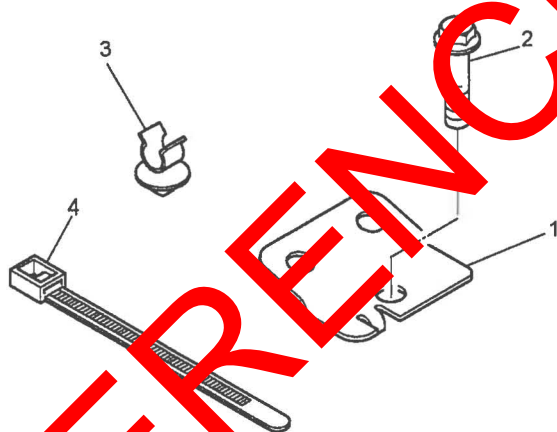


Throttle & Stop Controls		Plate A
		AFHR4286

Item	Part No.	References	Qty.	Description	Notes
1	3653A017		1	BRACKET	
2	2314H002		1	SCREW	
3	2481D456		1	CLIP	
4	2817154		1	TIE	

REFERENCE ONLY

 AFHR4286

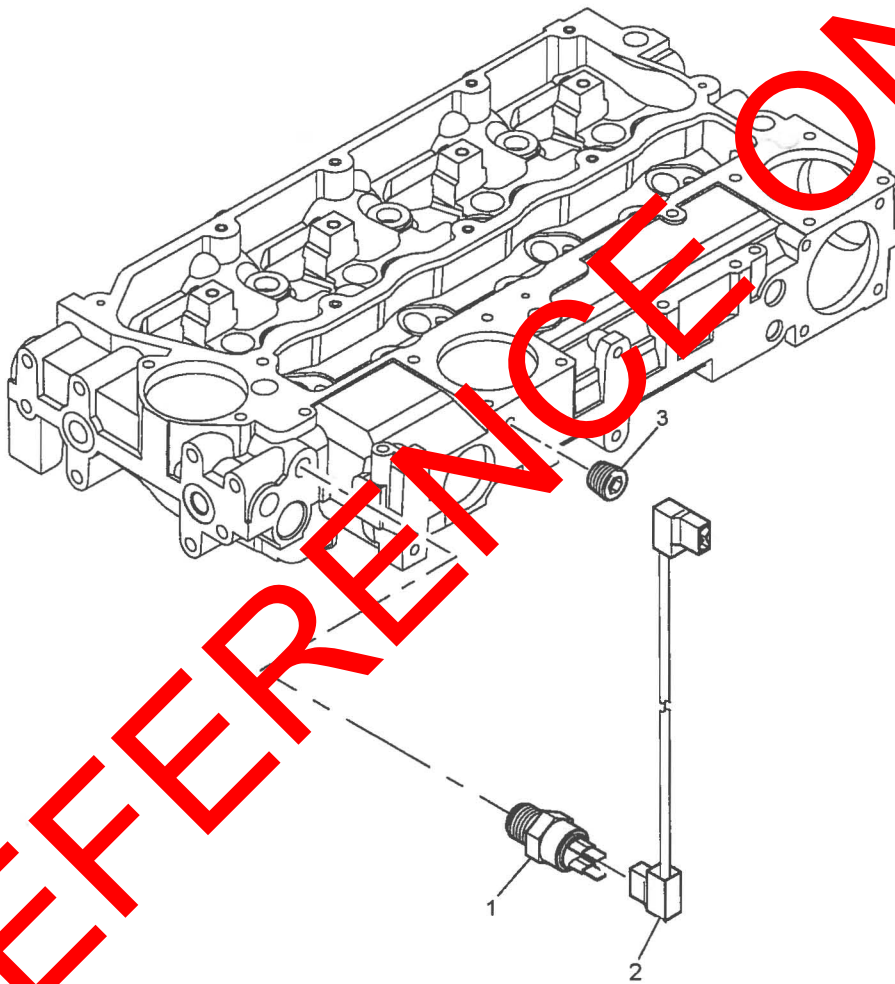


Pick-Up Sensor		Plate A
		AFHR4286

Item	Part No.	References	Qty.	Description	Notes
1	2848A123		1	WATER TEMPERATURE SWITCH	
2	3161C017		1	CABLE	
3	2431131		1	PLUG	

REFERENCE ONLY

 AFHR4286

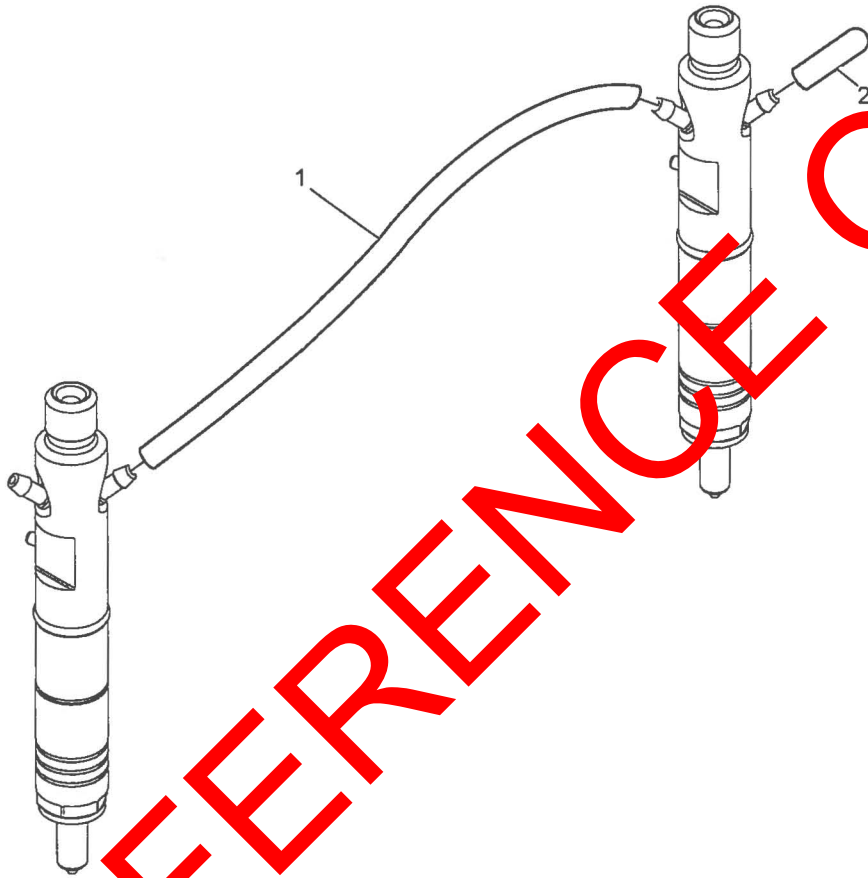


Fuel Leak-Off Pipe		Plate A
		AFHR4286

Item	Part No.	References	Qty.	Description	Notes
1	2646F501		3	HOSE	
2	2646E501		1	CAP	

REFERENCE ONLY

 AFHR4286

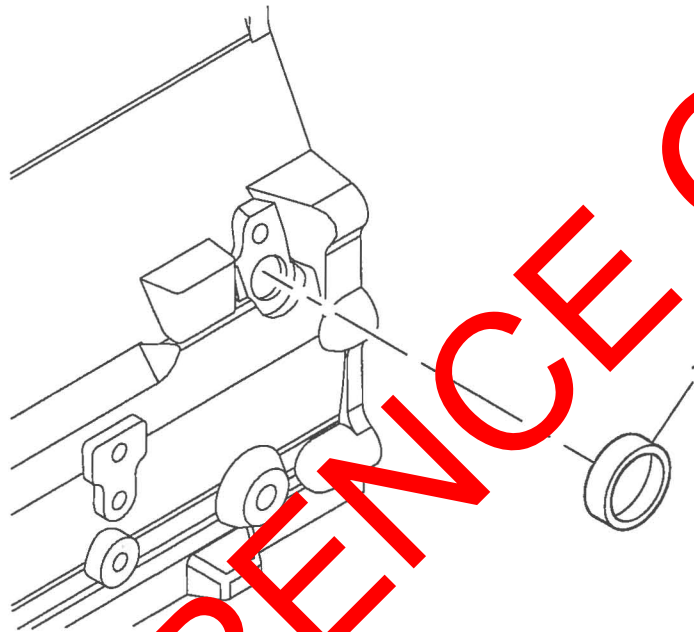


Pick-Up Sensor		Plate B
		AFHR4286

Item	Part No.	References	Qty.	Description	Notes
1	2485A109		1	PLUG	

REFERENCE ONLY

 CDHR0707

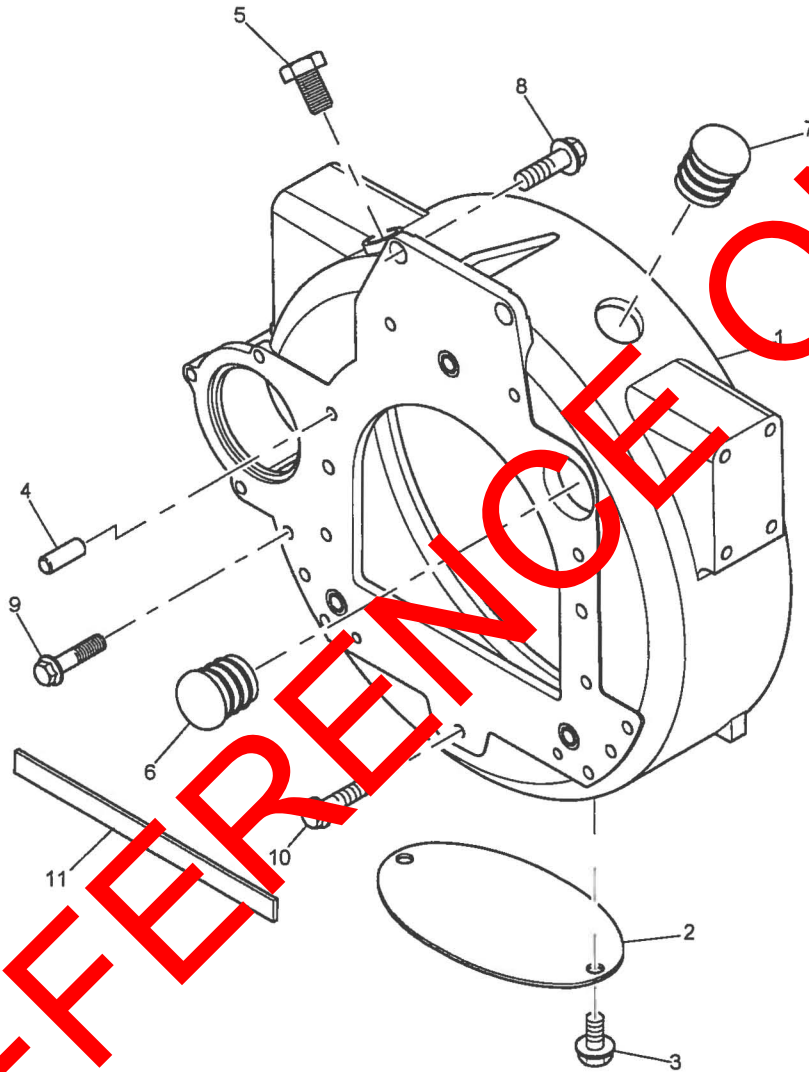


Flywheel Housing		Plate A
		CDHR0707

Item	Part No.	References	Qty.	Description	Notes
1	3713K027		1	FLYWHEEL HOUSING	
2	0240356		1	PLATE	
3	2314F002		2	SCREW	
4	0350025		2	DOWEL	
5	2487Y005		1	PLUG	
6	2487A452		1	PLUG	
7	2487A451		1	PLUG	
8	2314J603		2	SCREW	
9	2314J204		6	SCREW	
10	2314J001		3	SCREW	
11	36843154		1	SEAL	

REFERENCE ONLY

 DDHR0755

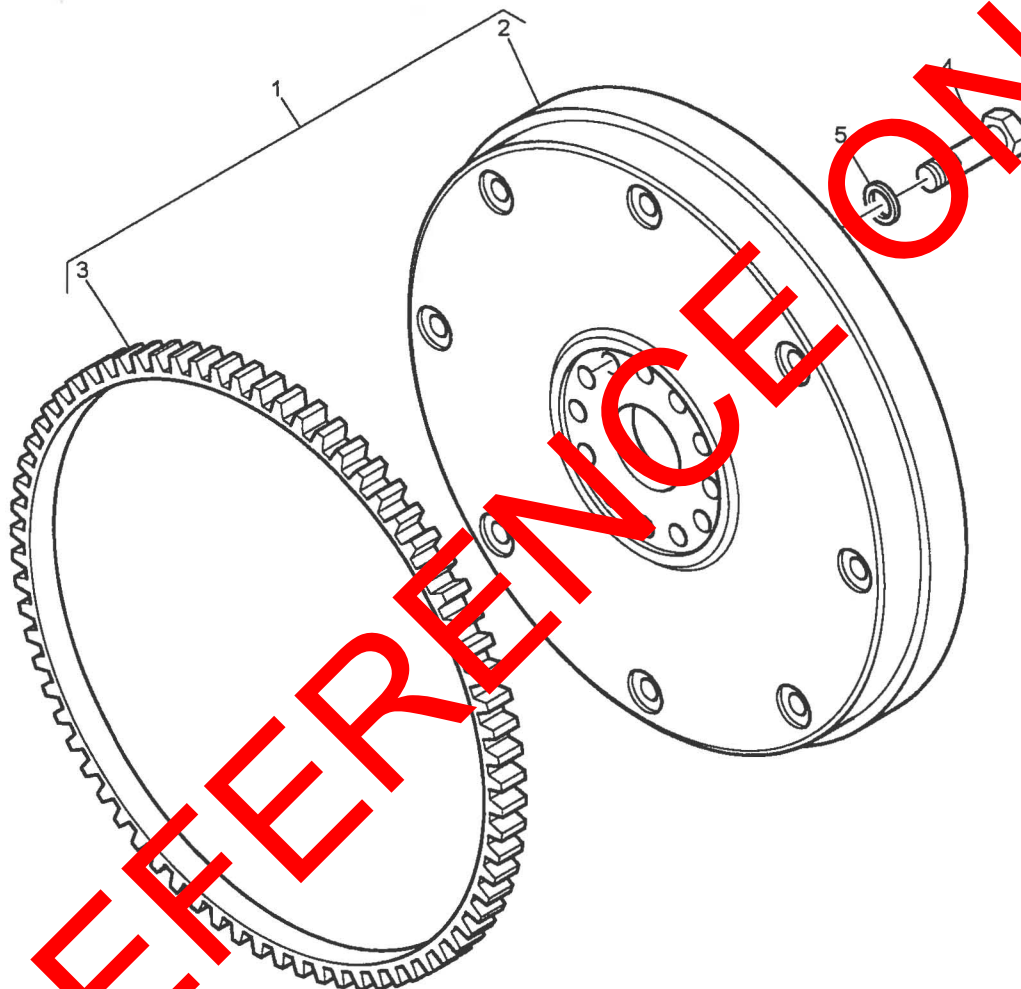


Flywheel & Starter Ring		Plate A
		DDHR0755

Item	Part No.	References	Qty.	Description	Notes
1	4111D127		1	FLYWHEEL ASSEMBLY	
2	└	⇒ 4111D127	1	FLYWHEEL	
3	└31162121		1	STARTER RING GEAR	
4	0746853		6	SCREW	
5	33117127		6	WASHER	

REFERENCE ONLY

 EDHR0847

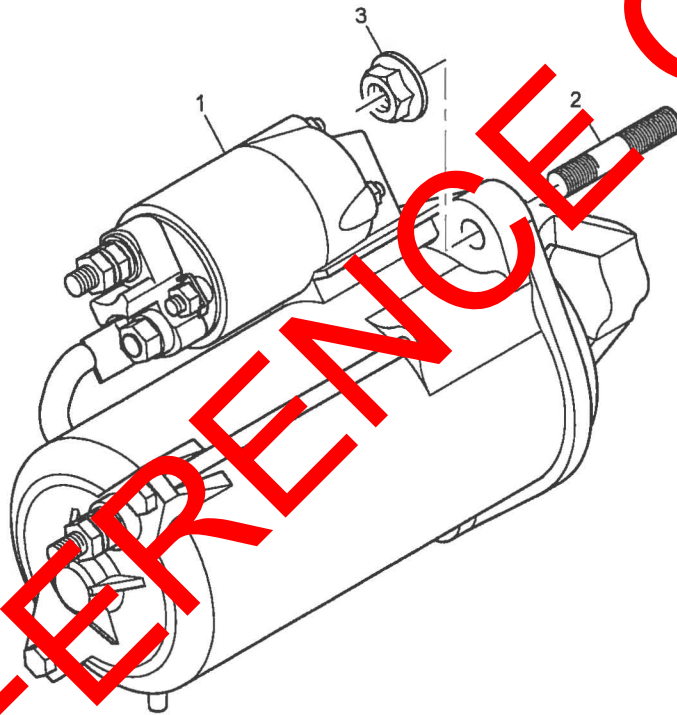


Starter Motor		Plate A
		EDHR0847

Item	Part No.	References	Qty.	Description	Notes
1	2873K404 162634		1	STARTERMOTOR	(A)
2	2313C078		3	STUD	
3	2318A604		3	NUT	
Footnotes					
(A)	BREAKDOWN OF 2873K404 NOT AVAILABLE.				

REFERENCE ONLY

 FBHR0896

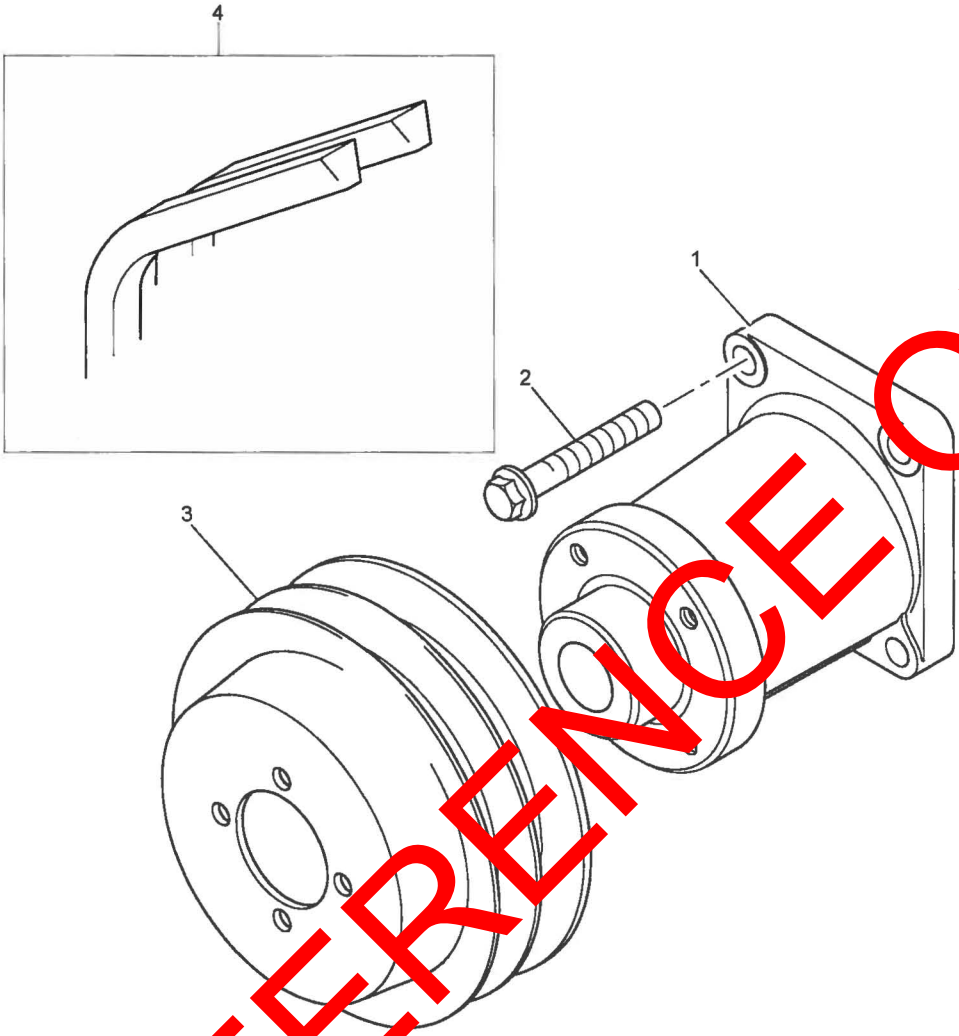


Fan Drive		Plate A
		FBHR0896

Item	Part No.	References	Qty.	Description	Notes
1	4113K005		1	FAN DRIVE HOUSING	
2	2314J005	75304	4	SCREW	
3	3115C113	75330	1	FAN DRIVE PULLEY	
4	2614B655	102598	1	FANBELT	(A)
Footnotes					
(A)	SERVICED IN PAIRS				

REFERENCE ONLY

 GBHR2321

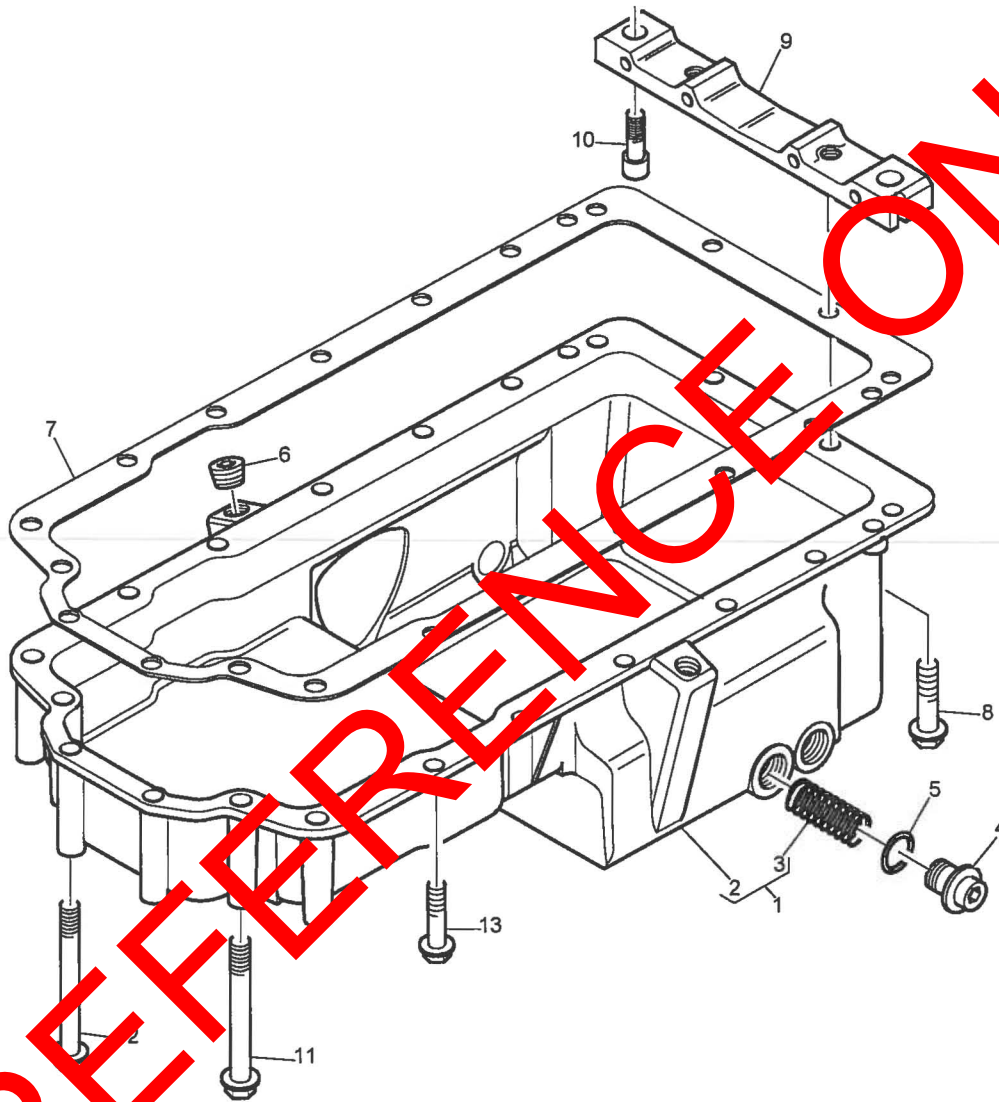


Sump	Plate A
	GBHR2321

Item	Part No.	References	Qty.	Description	Notes
1	4145H091 102641		1	SUMP	
2	2137435	⇒ 4145H091	1	SUMP	
3	32186405 75342		2	INSERT	
4	2415715 75343		2	PLUG	
5	2431A016		2	SEAL - O RING	
6	3681K037 102642		1	PLUG	
7	2314H033 75310		1	GASKET - SUMP	
8	3627P041		2	SCREW	
9	2311D039		1	BRIDGE PIECE	
10	2314K166		2	SCREW	
11	2314K166		2	SCREW	
12	2314K166		4	SCREW	
13	2314H003 75334		12	SCREW	

REFERENCE ONLY

 GBHR2321

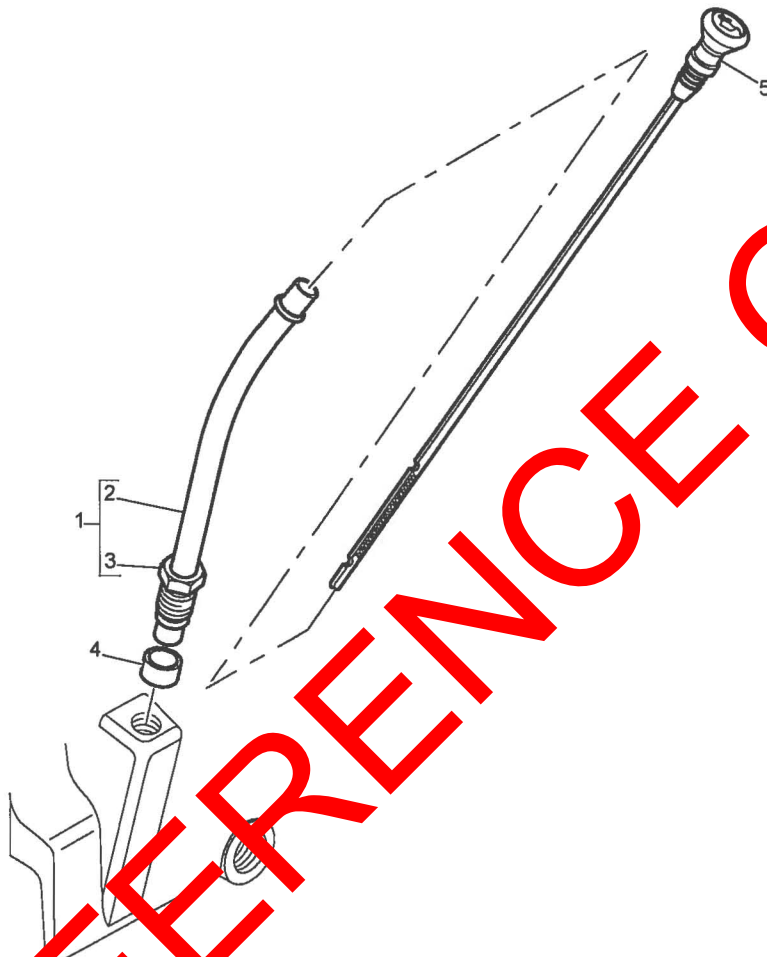


Dipstick & Filler Tube		Plate A
		GBHR2321

Item	Part No.	References	Qty.	Description	Notes
1	3577A125 23123081		1	TUBE ASSEMBLY	
2		⇒ 3577A125	1	TUBE	
3	3353D005		1	NUT	
4	33812116		1	OLIVE	
5	3178C069 102631		1	DIPSTICK	

REFERENCE ONLY

 GBHR2321

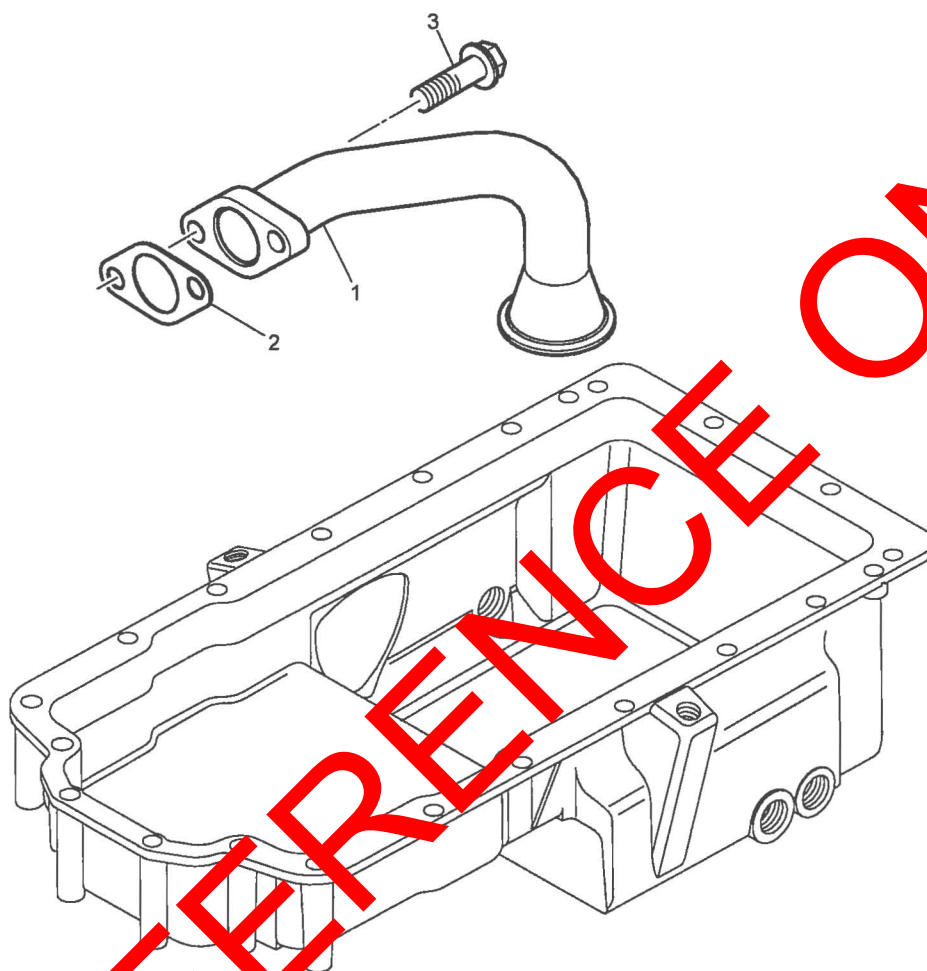


Oil Strainer		Plate A
		GBHR2321

Item	Part No.	References	Qty.	Description	Notes
1	3575A061		1	SUCTION PIPE	
2	36832137		1	GASKET	
3	2314H004		2	SCREW	

REFERENCE ONLY

 HBHR2879

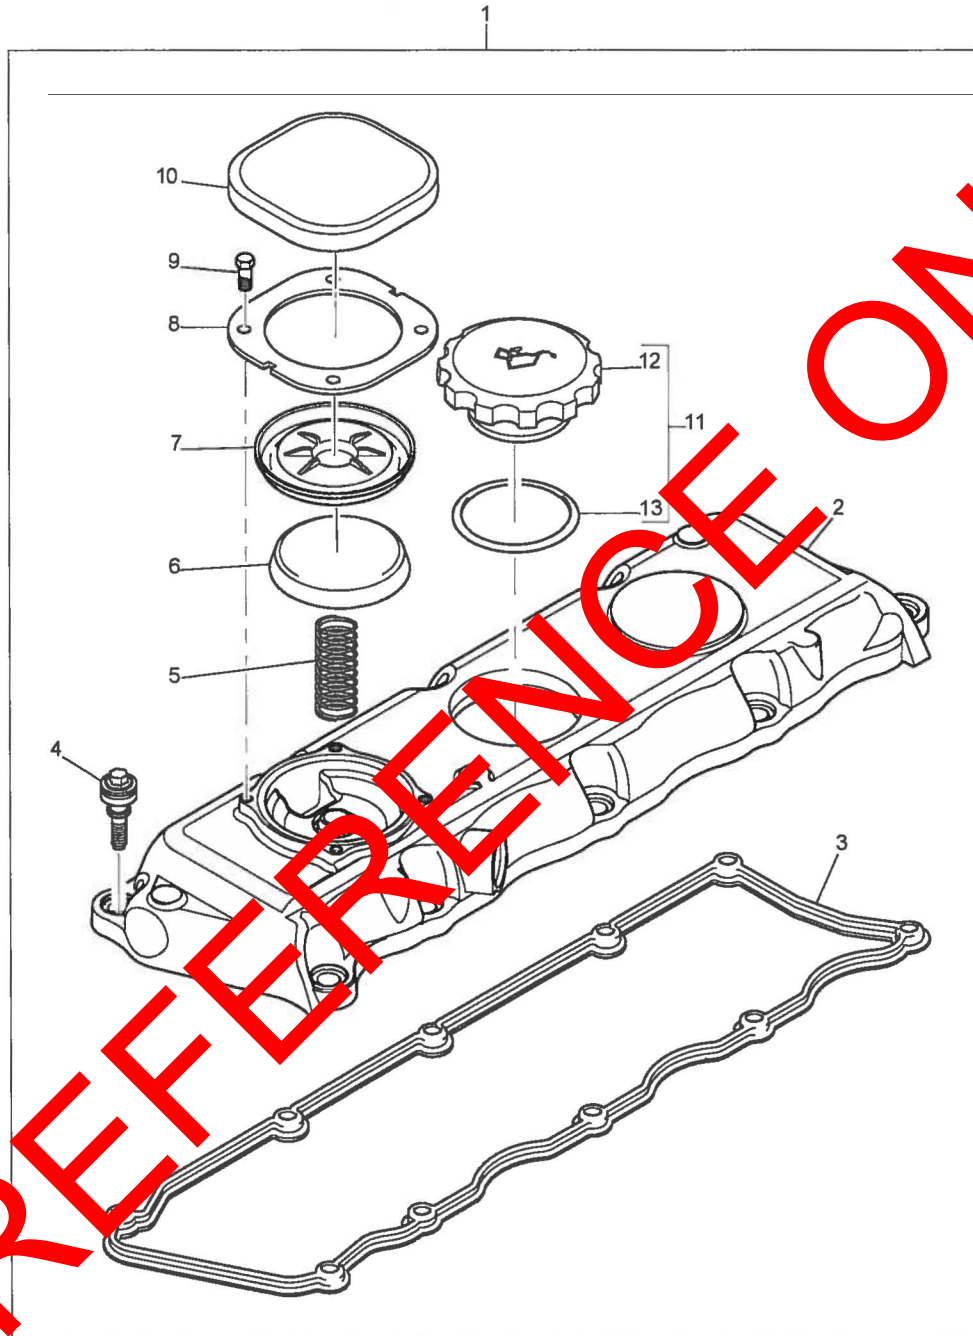

Cylinder Head Cover		Plate A
		HBHR2879

Item	Part No.	References	Qty.	Description	Notes
1	4142X312 23123083		1	CYL HEAD COVER ASSY	
2	—	⇒ 4142X312	1	CYLINDER HEAD COVER	
3	—3681A055 102600		1	GASKET - CYL. HEAD COVER	
4	—2161A011 102601		10	SCREW	
5	—3174A017		1	SPRING	
6	—3788A002		1	CAP	
7	—3789A001		1	DIAPHRAGM	
8	—3615A009		1	COVER PLATE	
9	—2151A001		4	SCREW	
10	—3788A003		1	CAP	
11	—4142X099 102641		1	OIL FILLER CAP	
12	—	⇒ 4142X099	1	OIL FILLER CAP	
13	—2415A131		1	SEAL - O-RING	

REFERENCE

Valve Cover
102599


Oil filler Cap

23123083

102635

* 102641

 HBHR2879

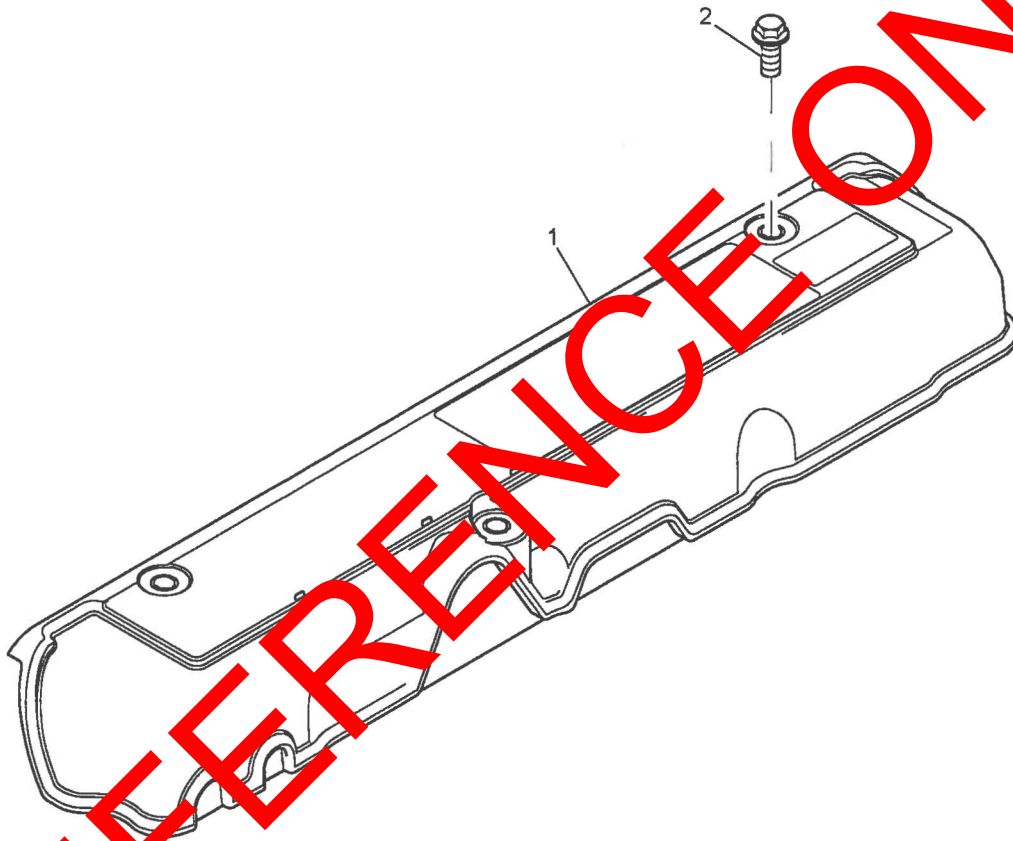


Cylinder Head Cover		Plate B
		HBHR2879

Item	Part No.	References	Qty.	Description	Notes
1	3788N003		1	COVER	
2	2314F003		3	SCREW	

REFERENCE ONLY

 HBHR2879

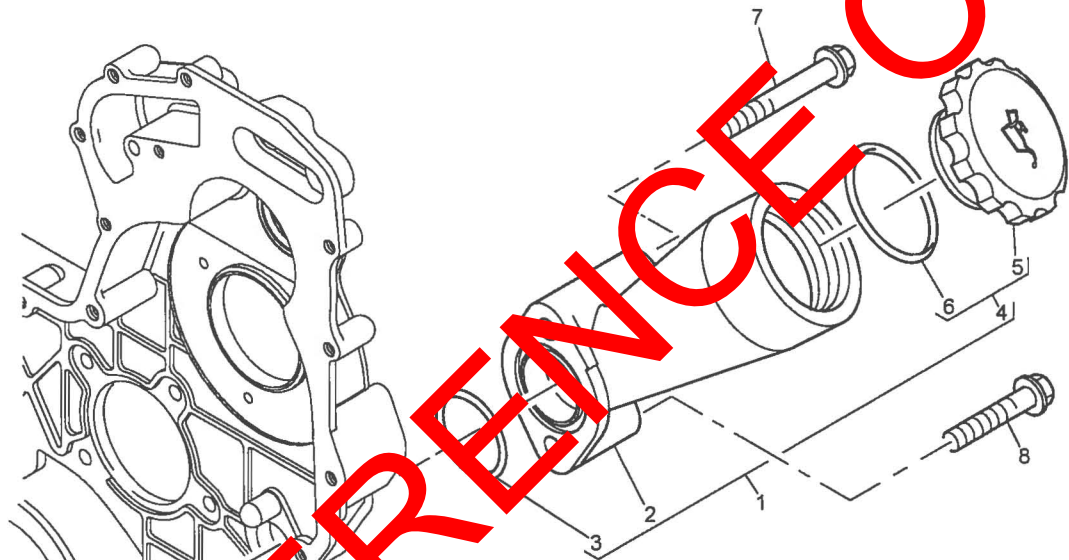


Filler	Plate A
	HBHR2879

Item	Part No.	References	Qty.	Description	Notes
1	4134C019		1	FILLER	
2		⇒ 4134C019	1	BODY	
3	2415B121		1	SEAL - O RING	
4	4142X098 102635		1	OIL FILLER CAP	
5		⇒ 4142X098	1	OIL FILLER CAP	
6	2415633		1	SEALING RING	
7	2314K161 75320		1	SCREW	
8	2314H008 75339		1	SCREW	

REFERENCE ONLY

 HBHR2879

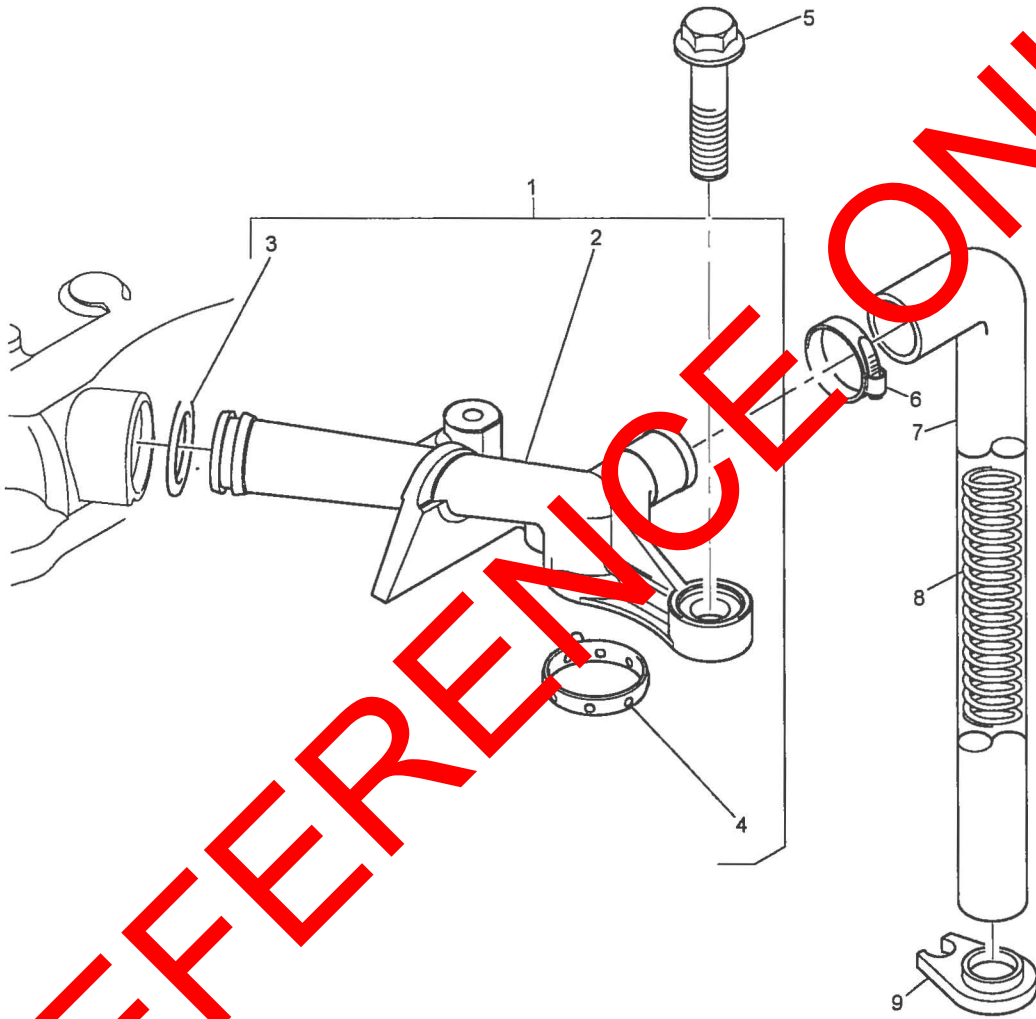


Breather		Plate A
		HBHR2879

Item	Part No.	References	Qty.	Description	Notes
1	4134K022		1	PIPE - BREATHER	
2		⇒ 4134K022	1	BREATHER PIPE	
3	—2415A068		1	SEAL - O RING	
4	—2415H701		1	SEAL - O RING	
5	2314F005		2	SCREW	
6	2481863		1	CLIP	
7	33872632		1	HOSE	
8	3175P003		1	SPRING	
9	36241123		1	SUPPORT BRACKET	

REFERENCE ONLY

 HBHR2879

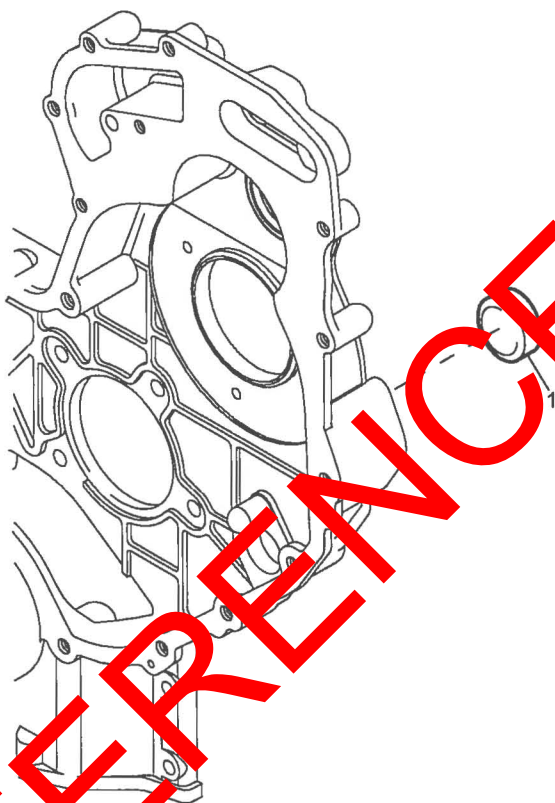


Blanking Plates		Plate A
		HBHR2879

Item	Part No.	References	Qty.	Description	Notes
1	2485A124		1	PLUG	

REFERENCE ONLY

● PPL025118

 JBHR2347

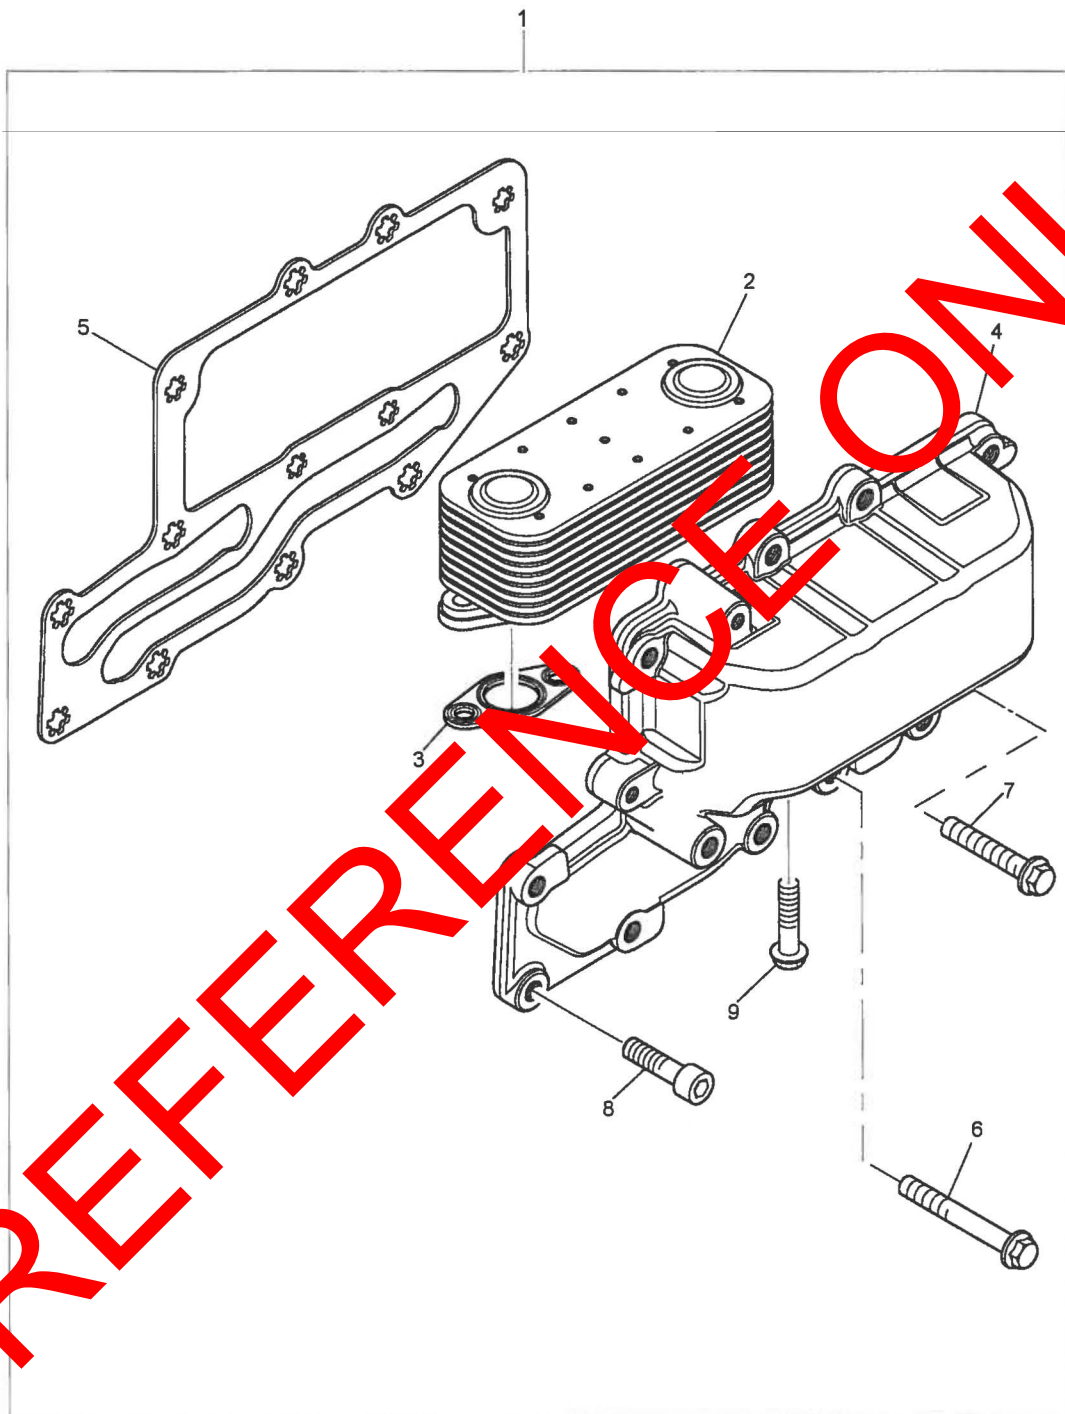


Oil Cooler		Plate A
● PPL025118	JBHR2347	

Item	Part No.	References	Qty.	Description	Notes
1	4134W021		1	OIL COOLER	
2	—2486A217		1	OIL COOLER	
3	—3685A025		2	GASKET - OIL COOLER	
4	—	⇒ 4134W021	1	HOUSING	
5	—3685A033		1	GASKET - OIL COOLER	
6	—2314K161		3	SCREW	
7	—2314H004		8	SCREW	
8	—2311D060		2	SCREW	
9	—2314H006		4	SCREW	

REFERENCE ONLY

 JBHR2347

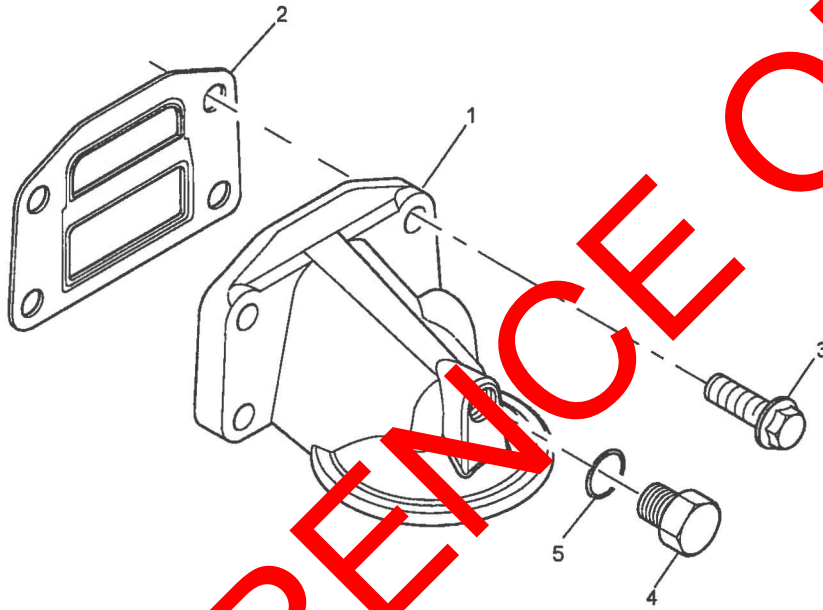


Oil Filter	Plate A
	JBHR2347

Item	Part No.	References	Qty.	Description	Notes
1	3773A061	23123084	1	OIL FILTER HEAD	
2	3688A039	23123085	1	GASKET - OIL FILTER HEAD	
3	2314H034		4	SCREW	
4	3278A007		1	PLUG	
5	2415H009		1	SEAL - O RING	

REFERENCE ONLY

 JBHR2347

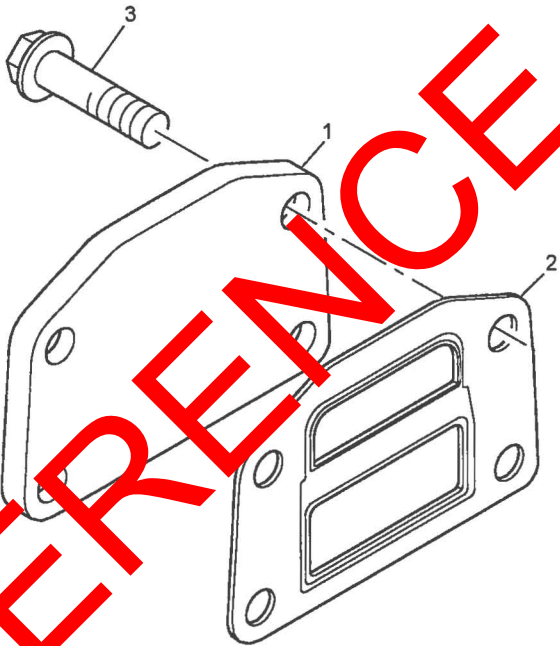


Blanking Plates		Plate A
		JBHR2347

Item	Part No.	References	Qty.	Description	Notes
1	3623A009		1	BLANKING PLATE	
2	3688A039		1	GASKET - OIL FILTER HEAD	
3	2314H033		4	SCREW	

REFERENCE ONLY

 JDHR0023

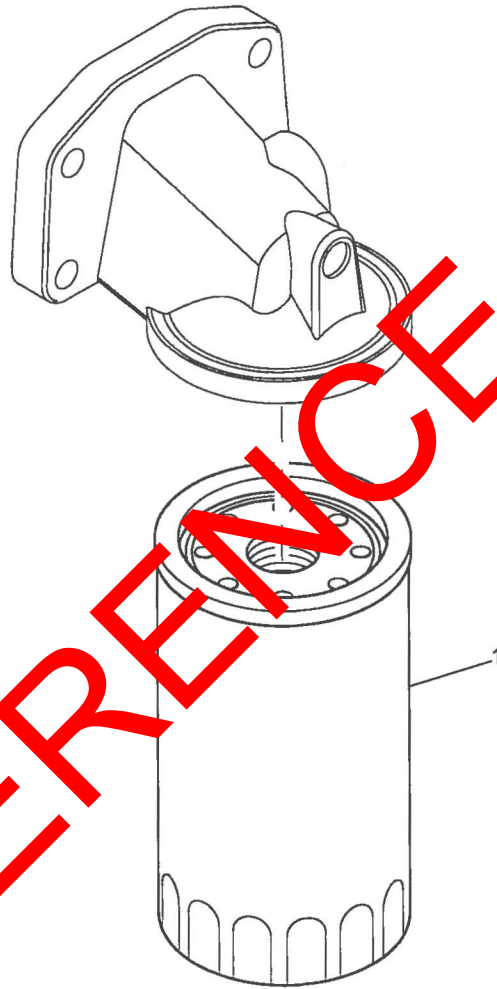

Oil Filter		Plate A
		JDHR0023

Item	Part No.	References	Qty.	Description	Notes
1	2654407	102632	1	OIL FILTER	

REFERENCE ONLY

KBHR0535




Front End Drive Input	Plate A
	KBHR0535

Item	Part No.	References	Qty.	Description	Notes
1	3115T051		1	CRANKSHAFT PULLEY	75331
2	3241N001		1	BLOCK	
3	32186137 75332		3	BOLT 75332	

REFERENCE ONLY

 
LBHR2253

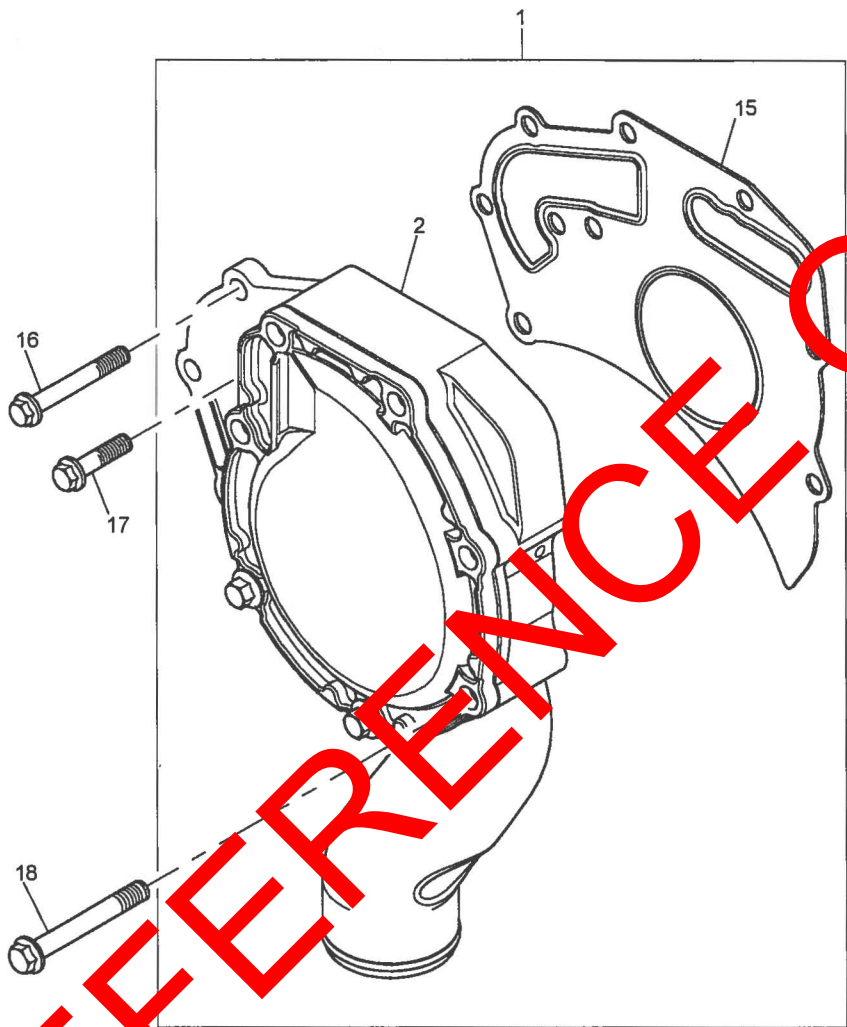

Water Pump	Plate A
	LBHR2253

Item	Part No.	References	Qty.	Description	Notes
1	U5MW0194 102643		1	WATER PUMP KIT	
2		⇒ U5MW0194	1	WATER PUMP	
3		⇒ U5MW0194	1	BODY	
4		⇒ U5MW0194	1	COVER	
5		⇒ U7LW0172	1	GASKET	
6		⇒ U7LW0172	1	IMPELLER	
7		⇒ U7LW0172	1	DRIVE SHAFT	
8		⇒ U7LW0172	1	SEAL	
9		⇒ U7LW0172	1	CIRCLIP	
10		⇒ U7LW0172	1	CIRCLIP	
11		⇒ U7LW0172	1	ROLLER BEARING	
12		⇒ U7LW0172	1	OIL SEAL	
13		⇒ U7LW0172	1	BEARING	
14	24880232		1	WATER PUMP GEAR	
15	3682A011 102644		1	GASKET - WATER PUMP	(A)
16	2314K164		2	SCREW	
17	2314H005		2	SCREW	
18	2314H012		5	SCREW	
Footnotes					
(A)	ALSO INCLUDED IN REPAIR KIT U7LW0172				

 LBHR2253

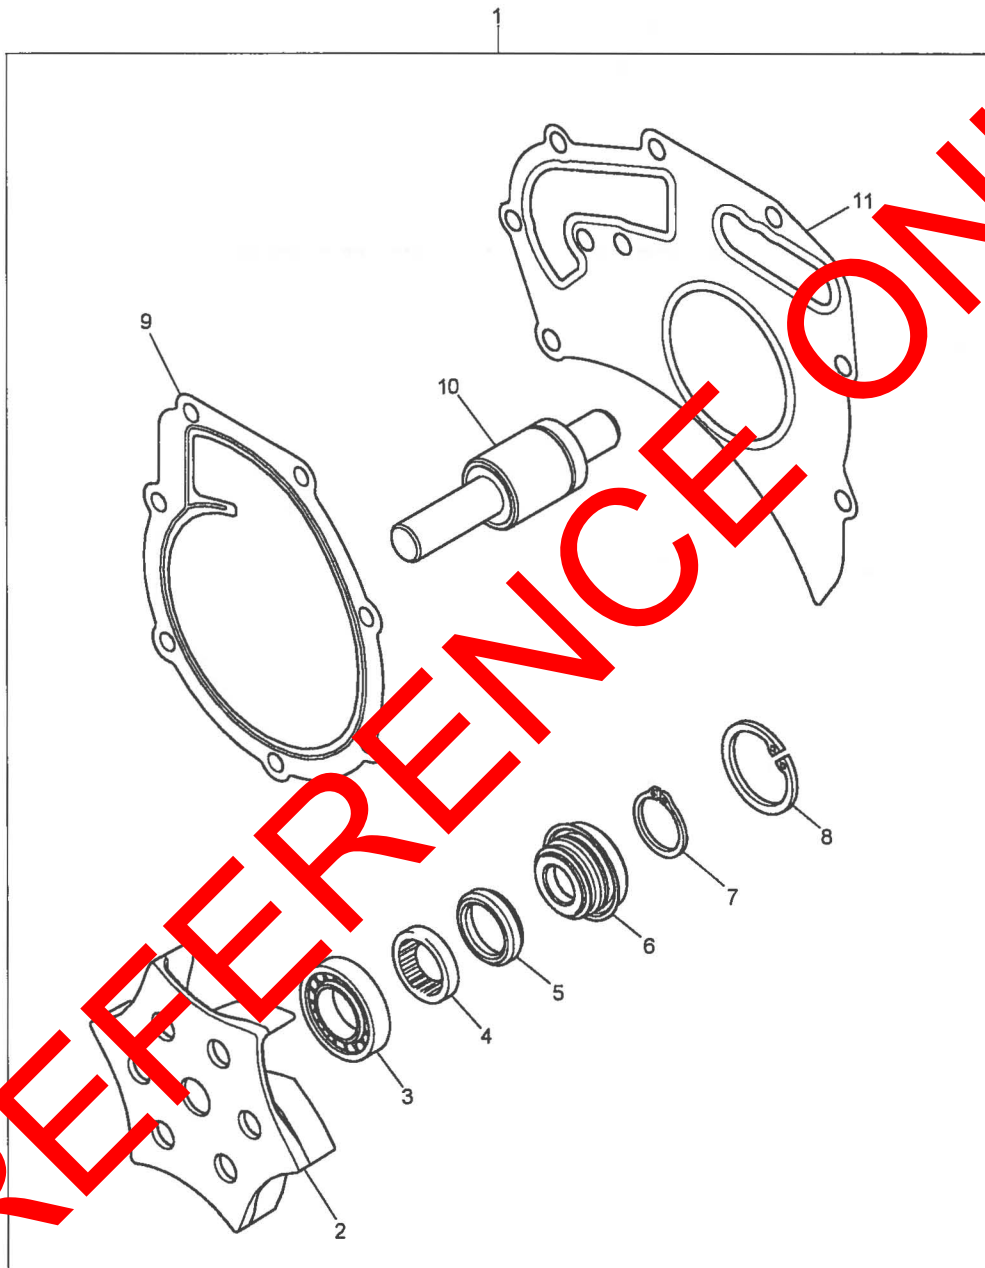


Water Pump		Plate B
		LBHR2253

Item	Part No.	References	Qty.	Description	Notes
1	U7LW0172		1	REPAIR KIT - WATER PUMP	
2		⇒ U7LW0172	1	IMPELLER	
3		⇒ U7LW0172	1	ROLLER BEARING	
4		⇒ U7LW0172	1	BEARING	
5		⇒ U7LW0172	1	OIL SEAL	
6		⇒ U7LW0172	1	SEAL	
7		⇒ U7LW0172	1	CIRCLIP	
8		⇒ U7LW0172	1	CIRCLIP	
9	24880234		1	GASKET - WATER PUMP	
10		⇒ U7LW0172	1	DRIVE SHAFT	
11	3682A011		1	GASKET - WATER PUMP	

REFERENCE ONLY

 LBHR2253

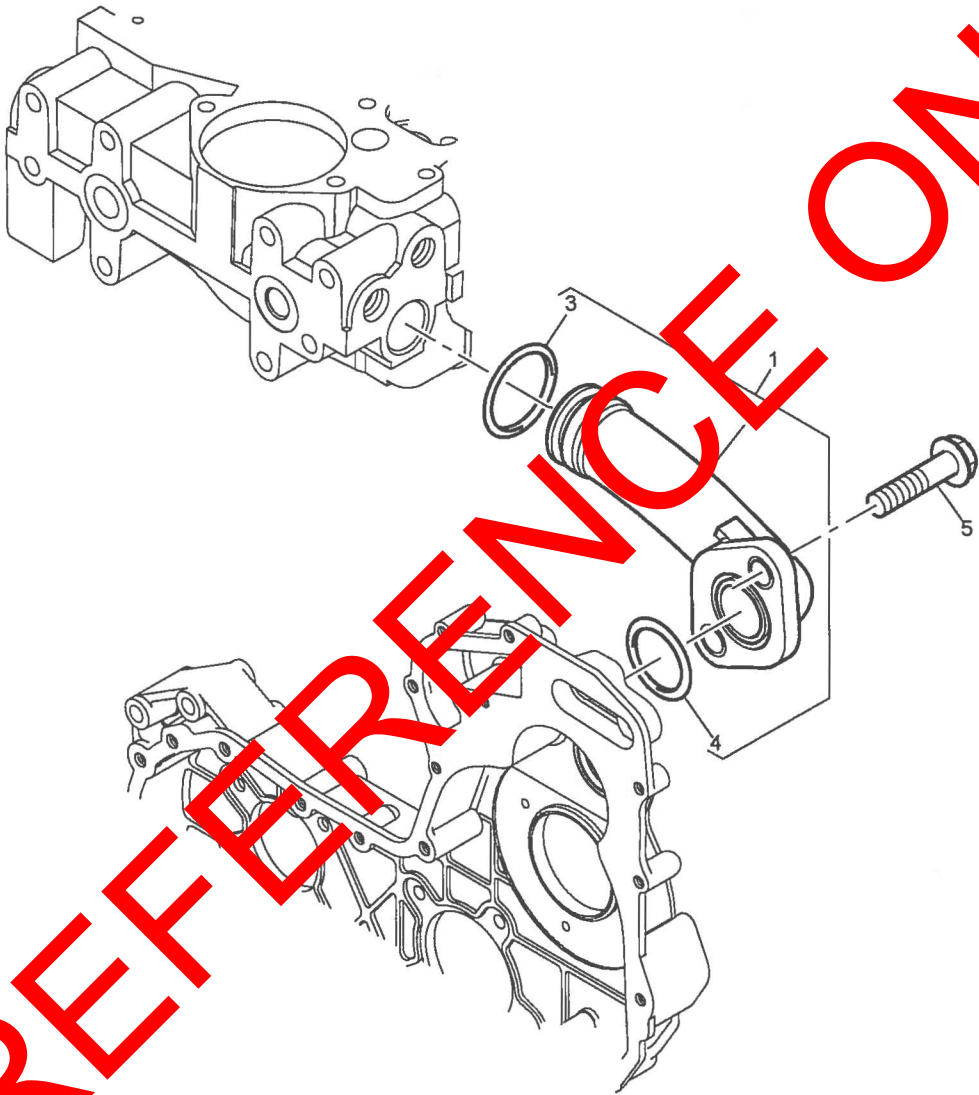


Pipes	Plate A
	LBHR2253

Item	Part No.	References	Qty.	Description	Notes
1	4133L048		1	CONNECTION	
2		⇒ 4133L048	1	CONNECTION	
3	2418F002		1	SEAL - O RING	
4	2418F001		1	SEAL - O RING	
5	2314H003		2	SCREW	

REFERENCE ONLY

→ 31/01/2004

 LDHR0702

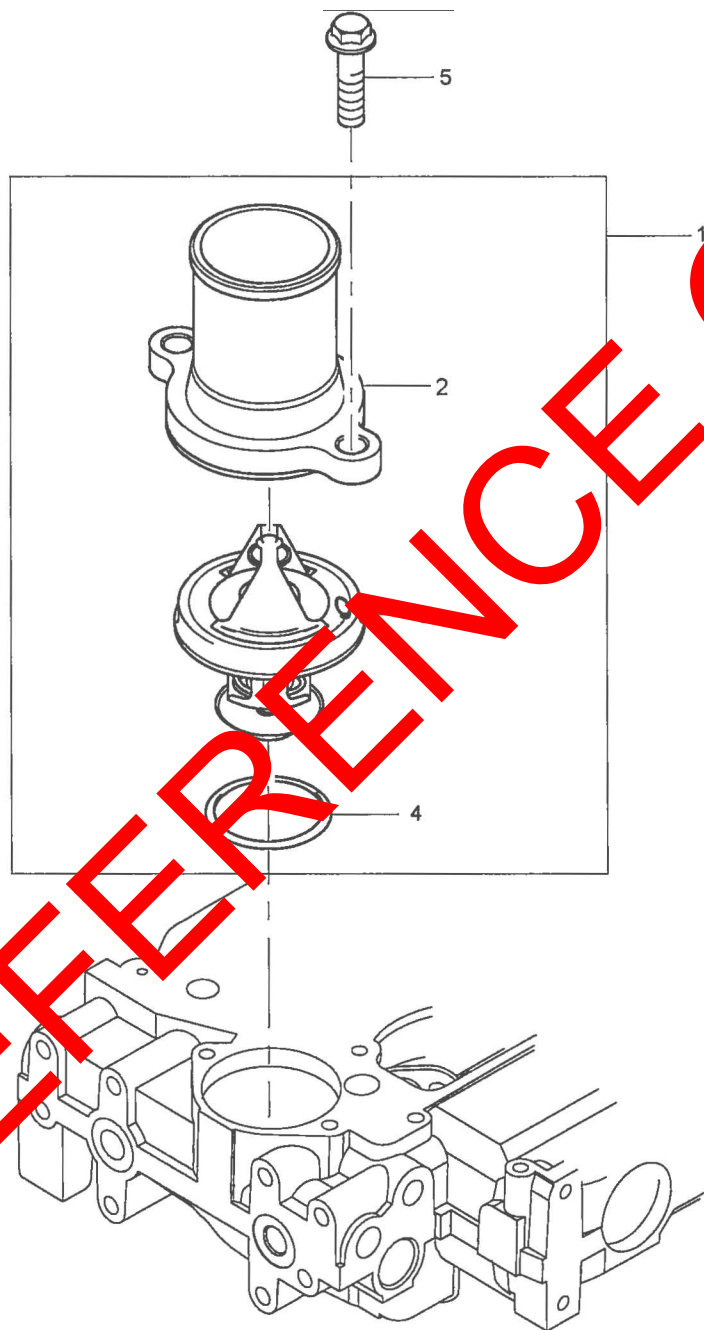


Water Outlet Housing		Plate A
→ 31/01/2004	LDHR0702	

Item	Part No.	References	Qty.	Description	Notes
1	4133L501		1	CONNECTION	
2		⇒ 4133L501 102602	1	CONNECTION	
3	2485C041 102603		1	THERMOSTAT	
4	2415H008 102604		1	SEAL - WATER OUTLET	
5	2314H004 75321		2	SCREW	

REFERENCE ONLY

1 01/02/2004

 LDHR0702

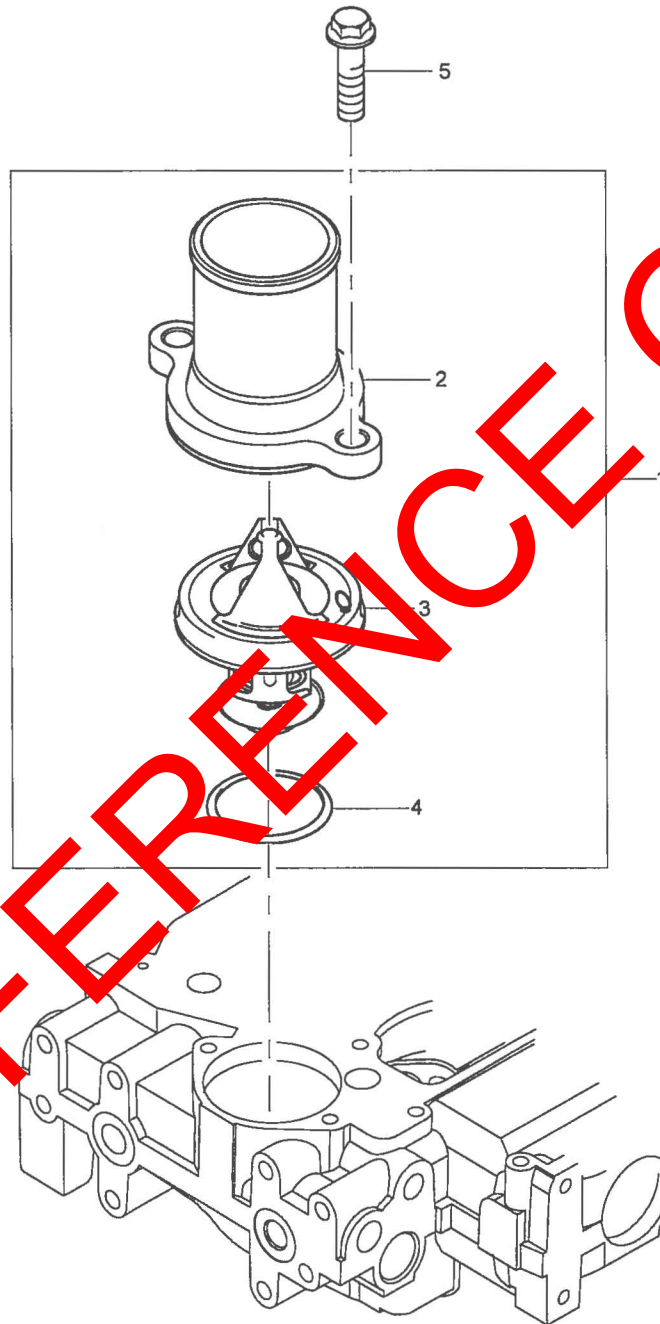


Water Outlet Housing		Plate A
→ 01/02/2004		LDHR0702

Item	Part No.	References	Qty.	Description	Notes
1	4133L507		1	CONNECTION	
2	└─ 2415H219	⇒ 4133L507	1	CONNECTION	
3		⇒ 4133L507	1	THERMOSTAT	
4			1	SEAL - WATER OUTLET	
5	2314H004		2	SCREW	

REFERENCE ONLY

 MDHR1357

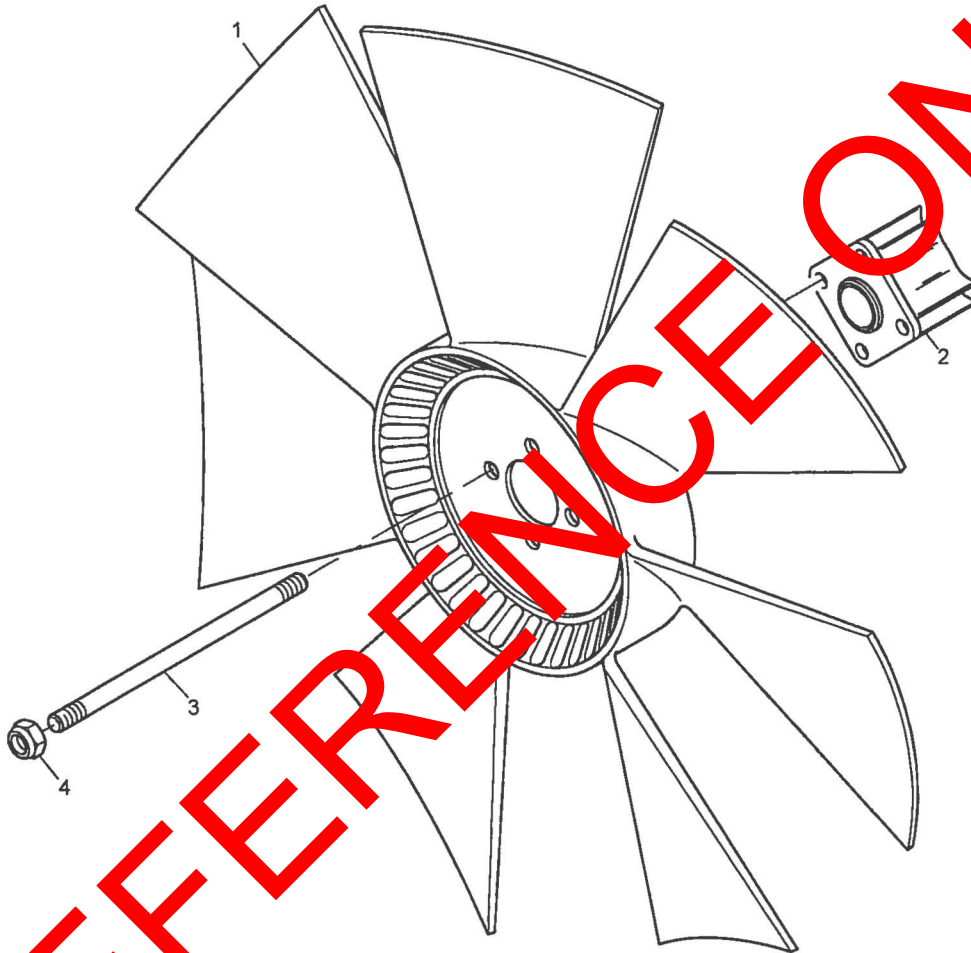


Fan	Plate A
	MDHR1357

Item	Part No.	References	Qty.	Description	Notes
1	2485C514		1	FAN	
2	3748W242		1	EXTENSION	
3	2313H236		4	STUD	
4	2318D208		4	NUT	

23123105
 65490
 53883 (KIT)

REFERENCE ONLY

 NDHR2712

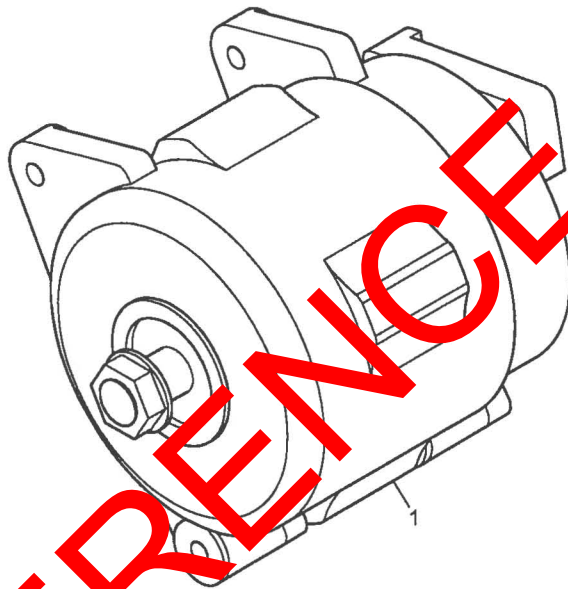


Alternator		Plate A
		NDHR2712

Item	Part No.	References	Qty.	Description	Notes
1	2871A303	102646	1	ALTERNATOR	(A)
Footnotes					
(A)	BREAKDOWN HAS YET TO BE ADVISED				

REFERENCE ONLY

 NDHR27/12

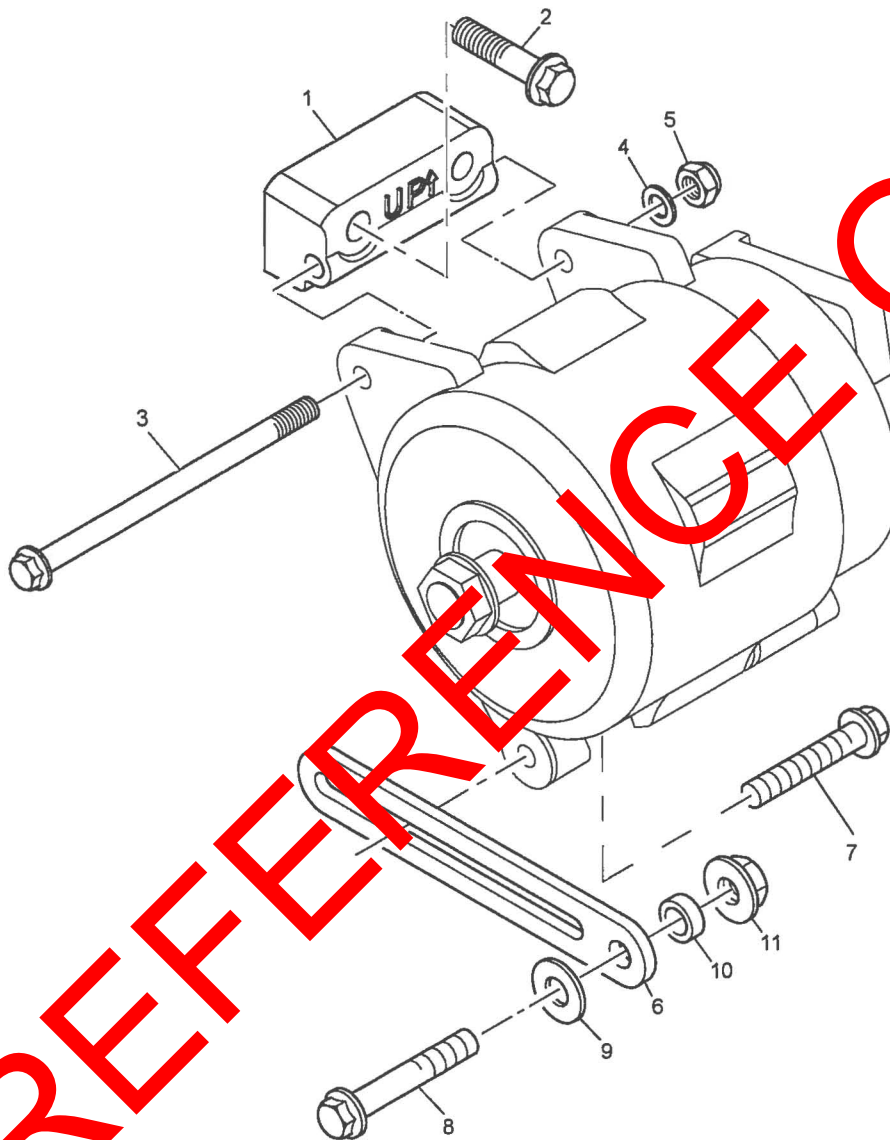


Alternator Bracket & Fixings		Plate A
		NDHR2712

Item	Part No.	References	Qty.	Description	Notes
1	3824A071		1	ALTERNATOR BRACKET	123342
2	2314J007		2	SCREW	
3	2314H052		1	SCREW	
4	2131A008		1	WASHER	
5	2318D208		1	NUT	
6	36155429		1	LEVER	123343
7	2314H004		1	SCREW	
8	2314J012		1	SCREW	
9	0920497		1	WASHER	
10	0920465		1	SPACER	
11	2318A604		1	NUT	

REFERENCE ONLY

 NDHR2712

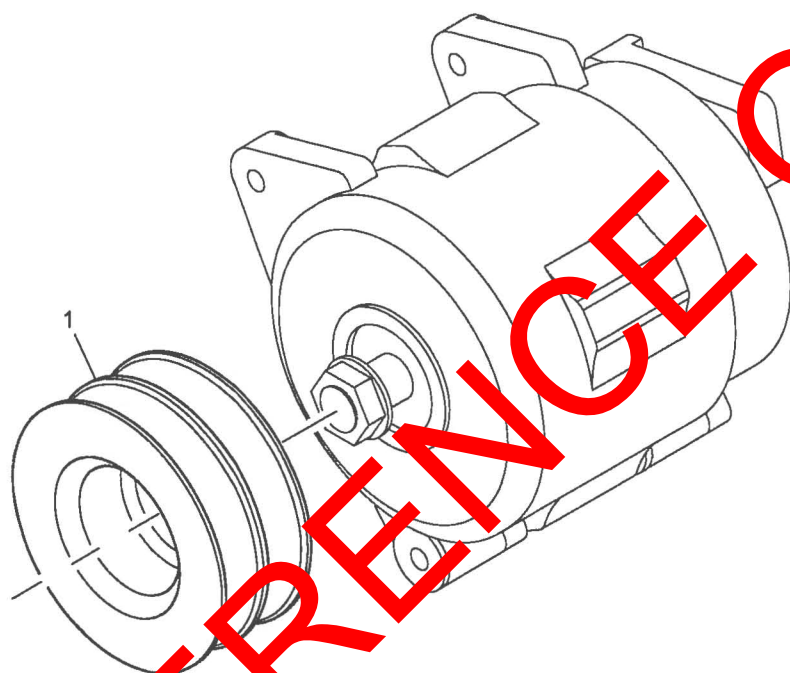


Pulleys		Plate A
		NDHR2712

Item	Part No.	References	Qty.	Description	Notes
1	3115A049	102645	1	2 GROOVE ALTERNATOR PUL-	

REFERENCE ONLY

 QCHR0022

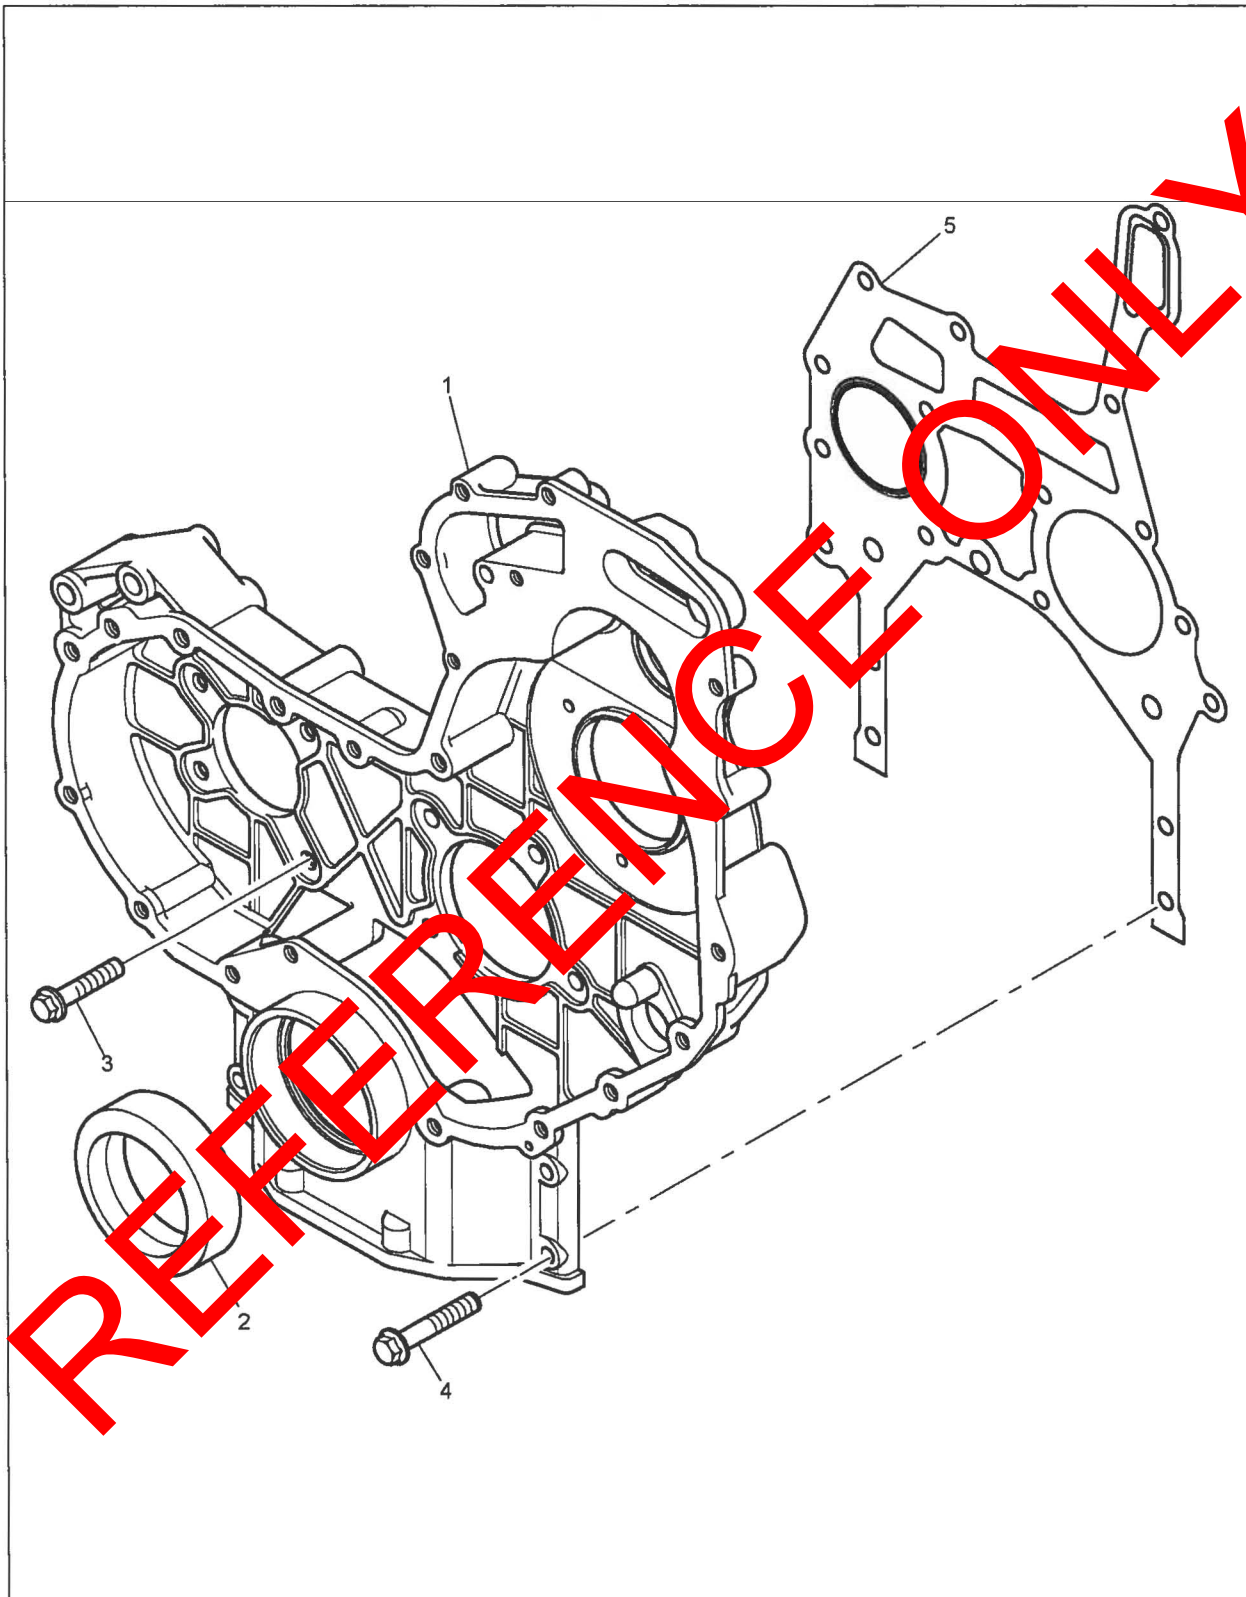


Timing Case		Plate A
		QCHR0022

Item	Part No.	References	Qty.	Description	Notes
1	3716C461		1	TIMING GEAR CASE	
2	2418F437		1	FRONT OIL SEAL	
3	2314H003		8	SCREW	
4	2314H034		4	SCREW	
5	3681P053		1	GASKET - TIMING CASE	

REFERENCE ONLY

 QCHR0022

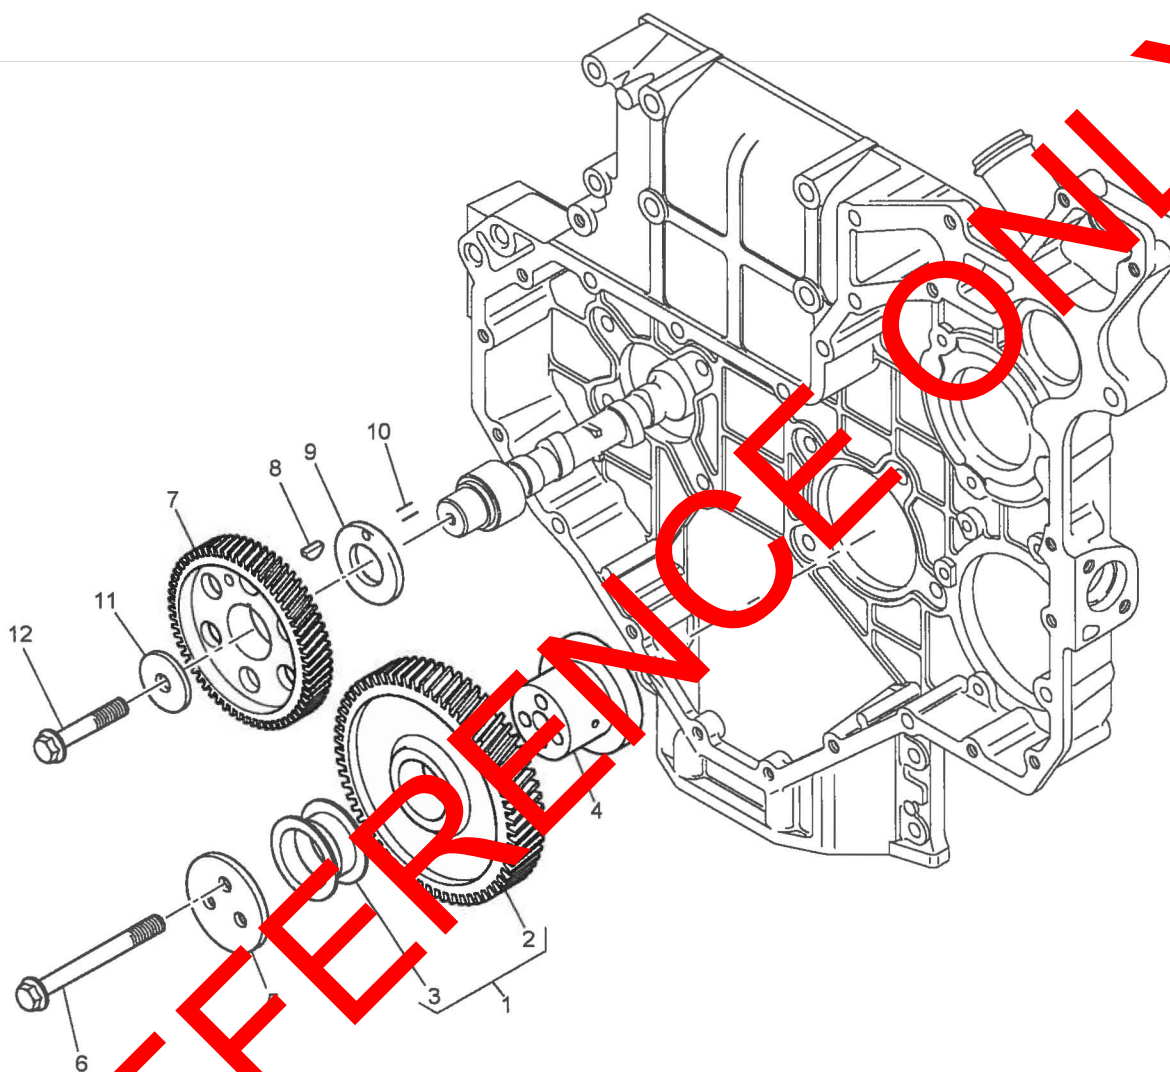


Timing Cover		Plate A
		QCHR0022

Item	Part No.	References	Qty.	Description	Notes
1	4111A034		1	IDLER GEAR	
2		⇒ 4111A034	1	IDLER GEAR	
3		⇒ 4111A034	1	BUSH	
4	3272A041		1	HUB	
5	3241A025		1	PLATE	
6	2314J011		3	SCREW	
7	3117N001		1	CAMSHAFT GEAR	
8	0500012		1	WOODRUFF KEY	
9	3112X011		1	THRUST WASHER	
10	2116053		1	DOWEL	
11	3321A003		1	WASHER	
12	2314J606		1	SCREW	

REFERENCE ONLY

 
QCHR0022

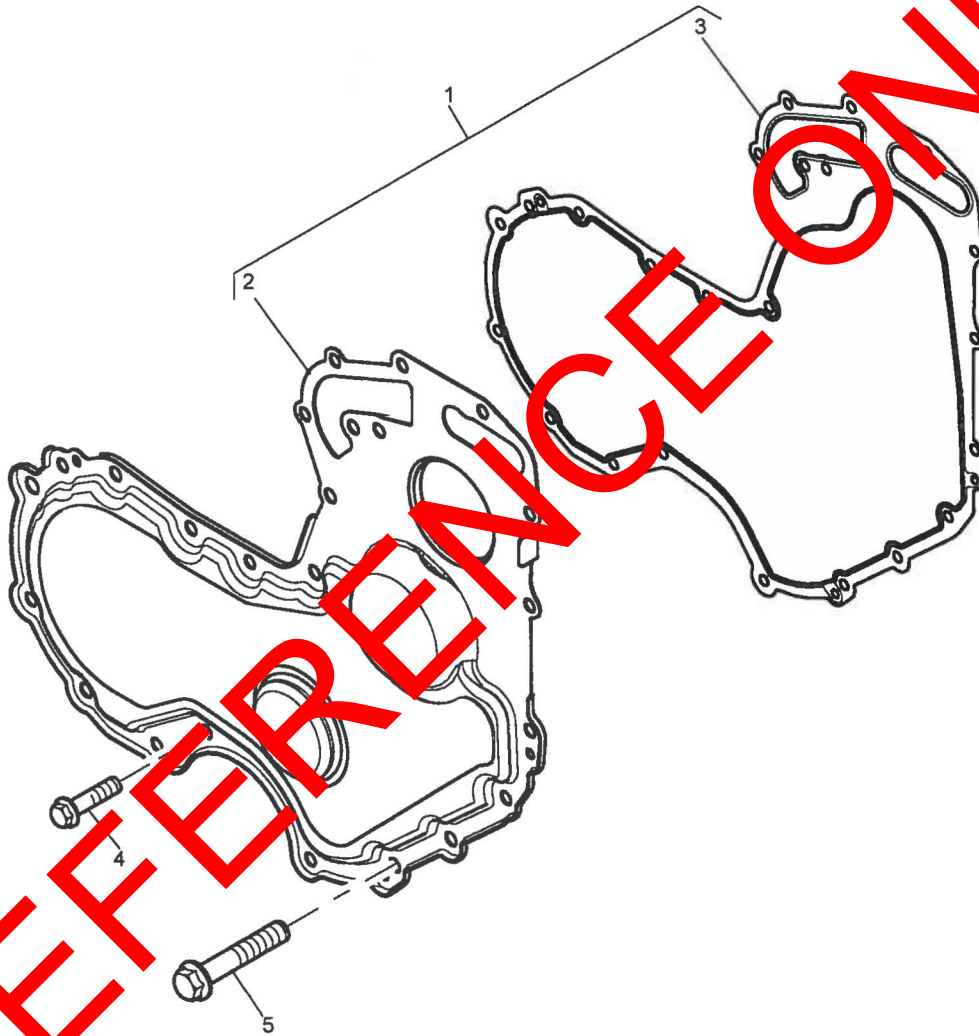

Timing Cover		Plate B
		QCHR0022

Item	Part No.	References	Qty.	Description	Notes
1	4142A503		1	FRONT COVER KIT	
2		⇒ 4142A503	1	TIMINGGEAR COVER	
3	3681P046		1	GASKET - TIMING CASE COVER	
4	2314H002		10	SCREW	
5	2314H012		5	SCREW	

 REFERENCE ONLY

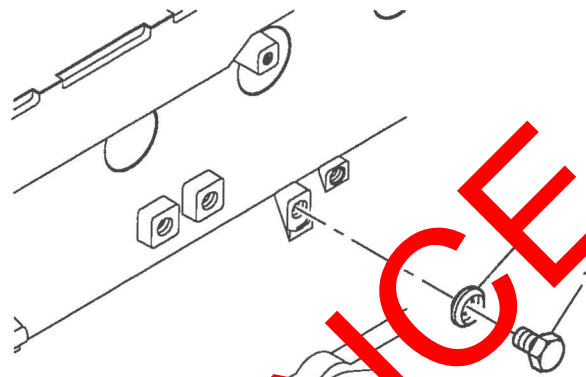


Blanking Plugs		Plate A
		QDHR1368

Item	Part No.	References	Qty.	Description	Notes
1	2314C049		1	SCREW	
2	2415D053		1	WASHER	

REFERENCE ONLY

 RBHR0031

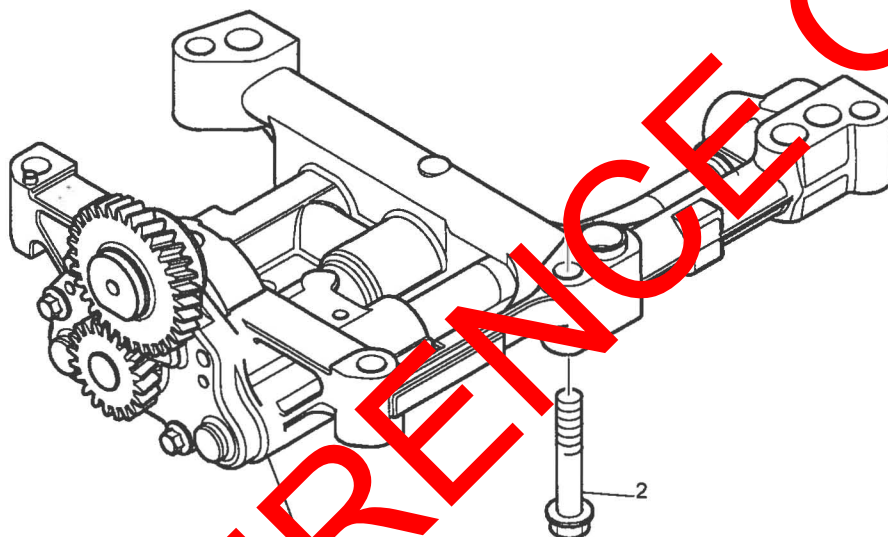


Lubricating Oil Pump & Delivery Housing		Plate A
		RBHR0031


Item	Part No.	References	Qty.	Description	Notes
1	4132F071		1	OIL PUMP	
2	2314J008		5	SCREW	

REFERENCE ONLY

 SBHR1460

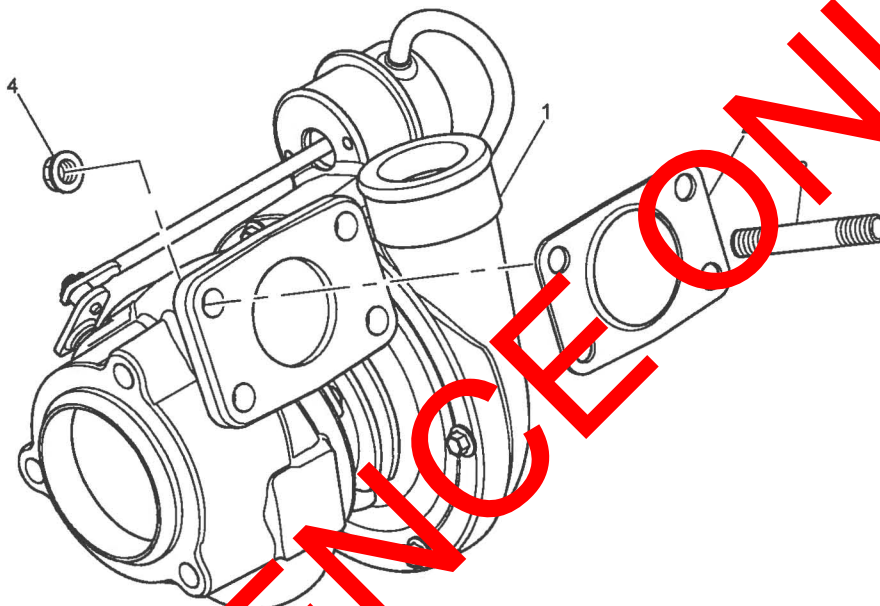


Turbocharger		Plate A
		SBHR1460

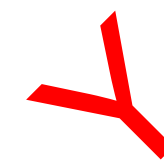 Item	Part No.	References	Qty.	Description	Notes
1	2674A200		1	TURBOCHARGER	
2	3688A029		1	GASKET - TURBOCHARGER	
3	2313M377		4	STUD	
4	2318A634		4	NUT	
Service Options					
1	2674A200P		1	TURBOCHARGER	

REFERENCE ONLY

 SBHR1460

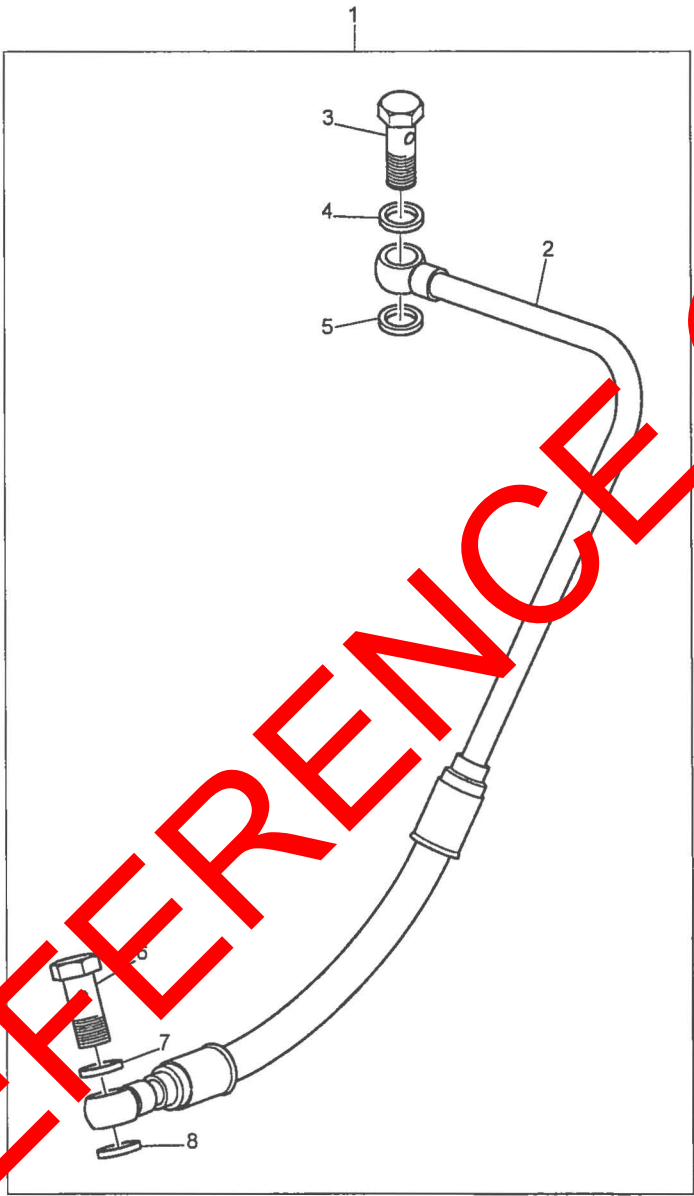


Feed Pipes		Plate A
		SBHR1460

Item	Part No.	References	Qty.	Description	Notes
1	4128A027		1	PIPE - TURBO OIL FEED	
2	—	⇒ 4128A027	1	PIPE - TURBO OIL FEED	
3	—3218R036		1	BANJO BOLT	
4	—2131A506		1	WASHER	
5	—2131A506		1	WASHER	
6	—3218R036		1	BANJO BOLT	
7	—2131A506		1	WASHER	
8	—2131A506		1	WASHER	

REFERENCE ONLY

 SBHR1460

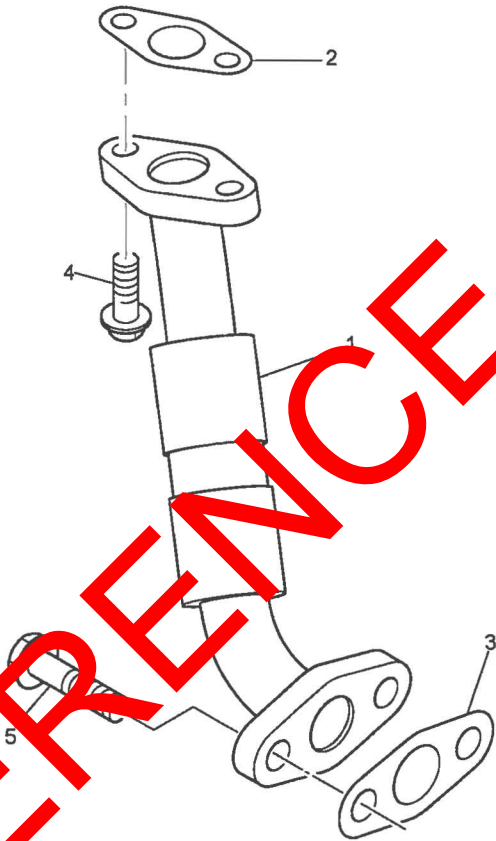


Leak-Off Pipes		Plate A
		SBHR1460

Item	Part No.	References	Qty.	Description	Notes
1	3584A001		1	PIPE - TURBO OIL DRAIN	
2	3688A035		1	GASKET	
3	3688A036		1	GASKET	
4	2314F004		2	SCREW	
5	2314H003		2	SCREW	

REFERENCE ONLY

 SBHR1460

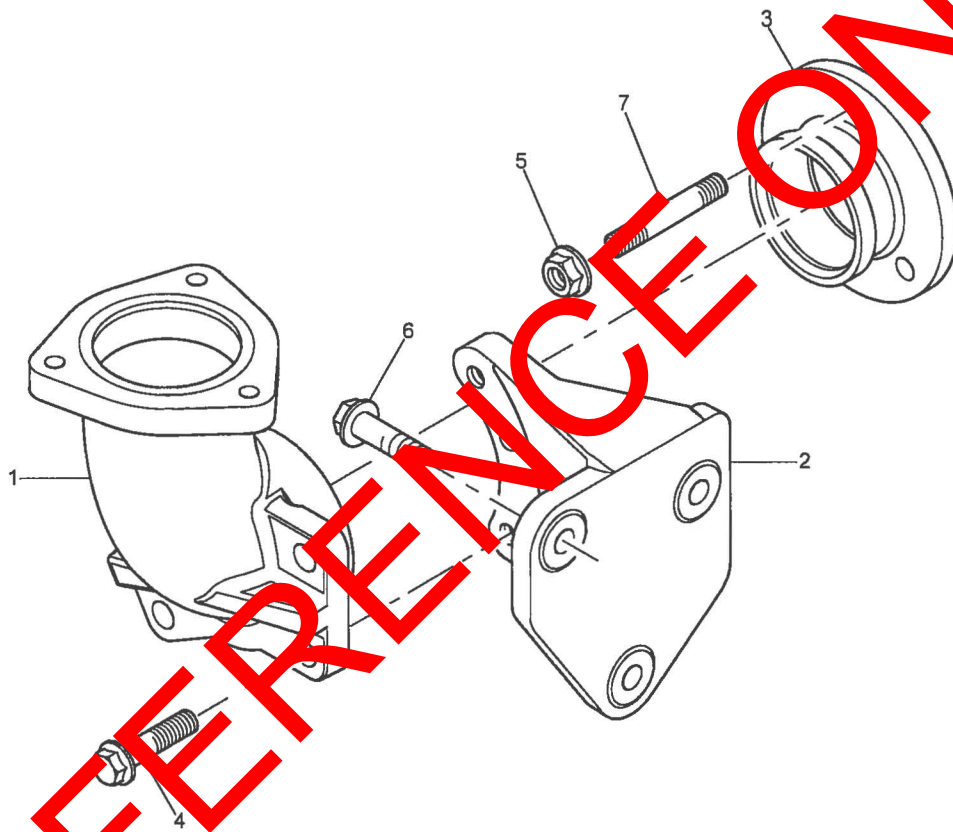


Pipework & Connections		Plate A
		SBHR1460

Item	Part No.	References	Qty.	Description	Notes
1	3766A131	23123086	1	EXHAUST ELBOW	
2	3823A051		1	BRACKET	
3	3347A041		1	ADAPTOR	
4	2314J003	75303	3	SCREW	
5	2318A634	65504	3	NUT	
6	2314J004		2	SCREW	
7	2313M377		3	STUD	

REFERENCE ONLY

 SBHR1460

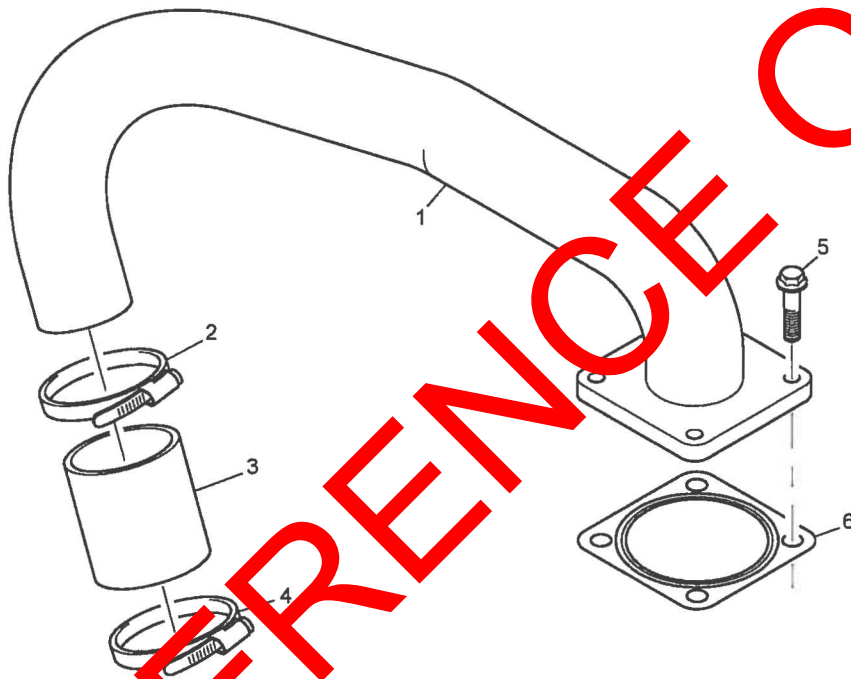


Pipework & Connections		Plate B
		SBHR1460

Item	Part No.	References	Qty.	Description	Notes
1	3571C068 123327		1	PIPE - AIR	
2	2481D073 123328		1	HOSE CLIP	
3	3383A027 123329		1	HOSE	
4	2481D073 123328		1	HOSE CLIP	
5	2314H033 123330		4	SCREW	
6	3688A037 123331		1	GASKET - IND MANIFOLD	

REFERENCE ONLY

 SBHR1460

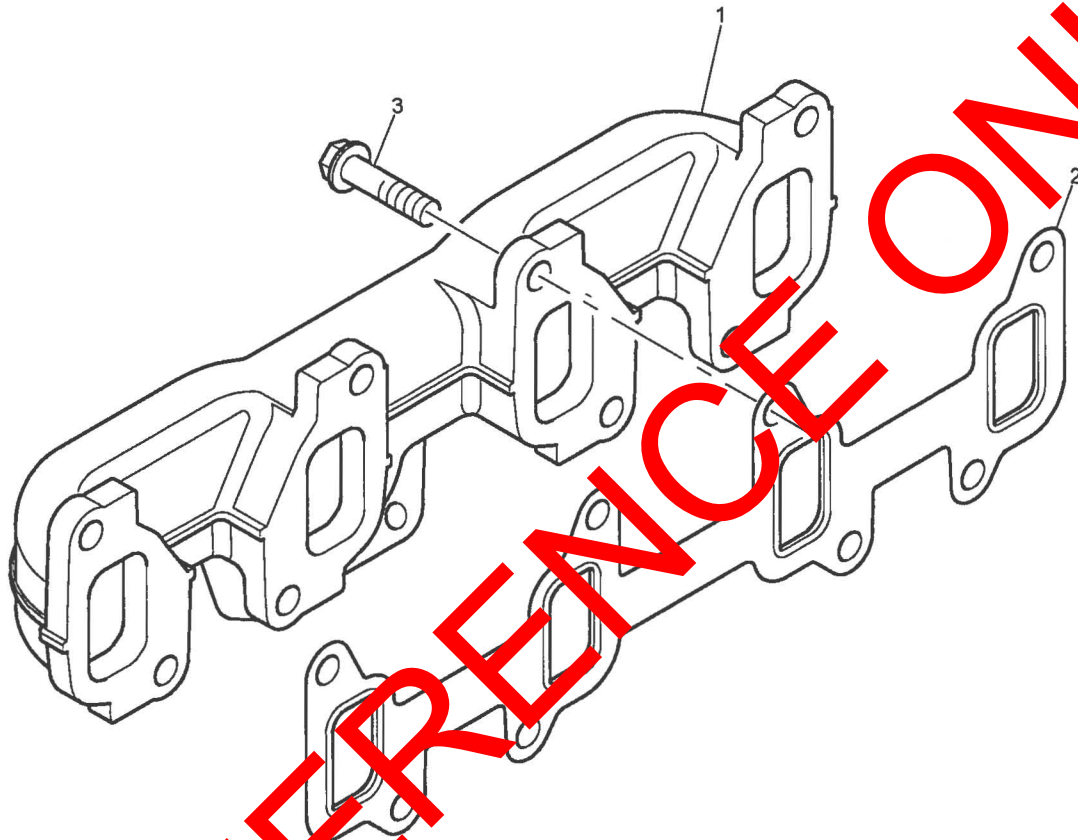


Exhaust Manifold		Plate A
		SBHR1460

Item	Part No.	References	Qty.	Description	Notes
1	3778E203	102605	1	EXHAUST MANIFOLD	
2	3681V512	102630	1	GASKET - EXHAUST MANIFOLD	
3	3218J013		8	SCREW	

REFERENCE ONLY

 TBHR0886

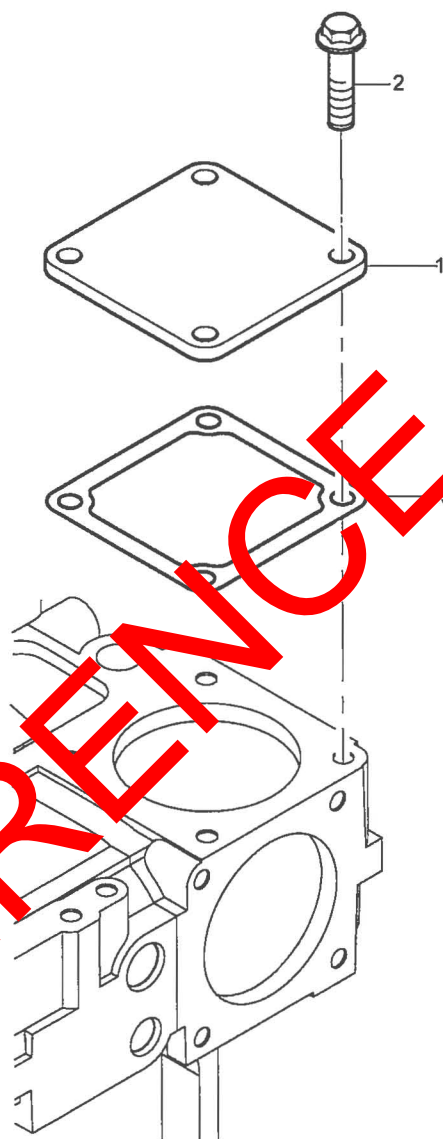


Pipework & Connections		Plate A
		TBHR0886

Item	Part No.	References	Qty.	Description	Notes
1	3611M006		3	PLATE	
2	2314H033		12	SCREW	
3	3684N503		3	GASKET	

REFERENCE ONLY

● PPL023952

 VBHR2178

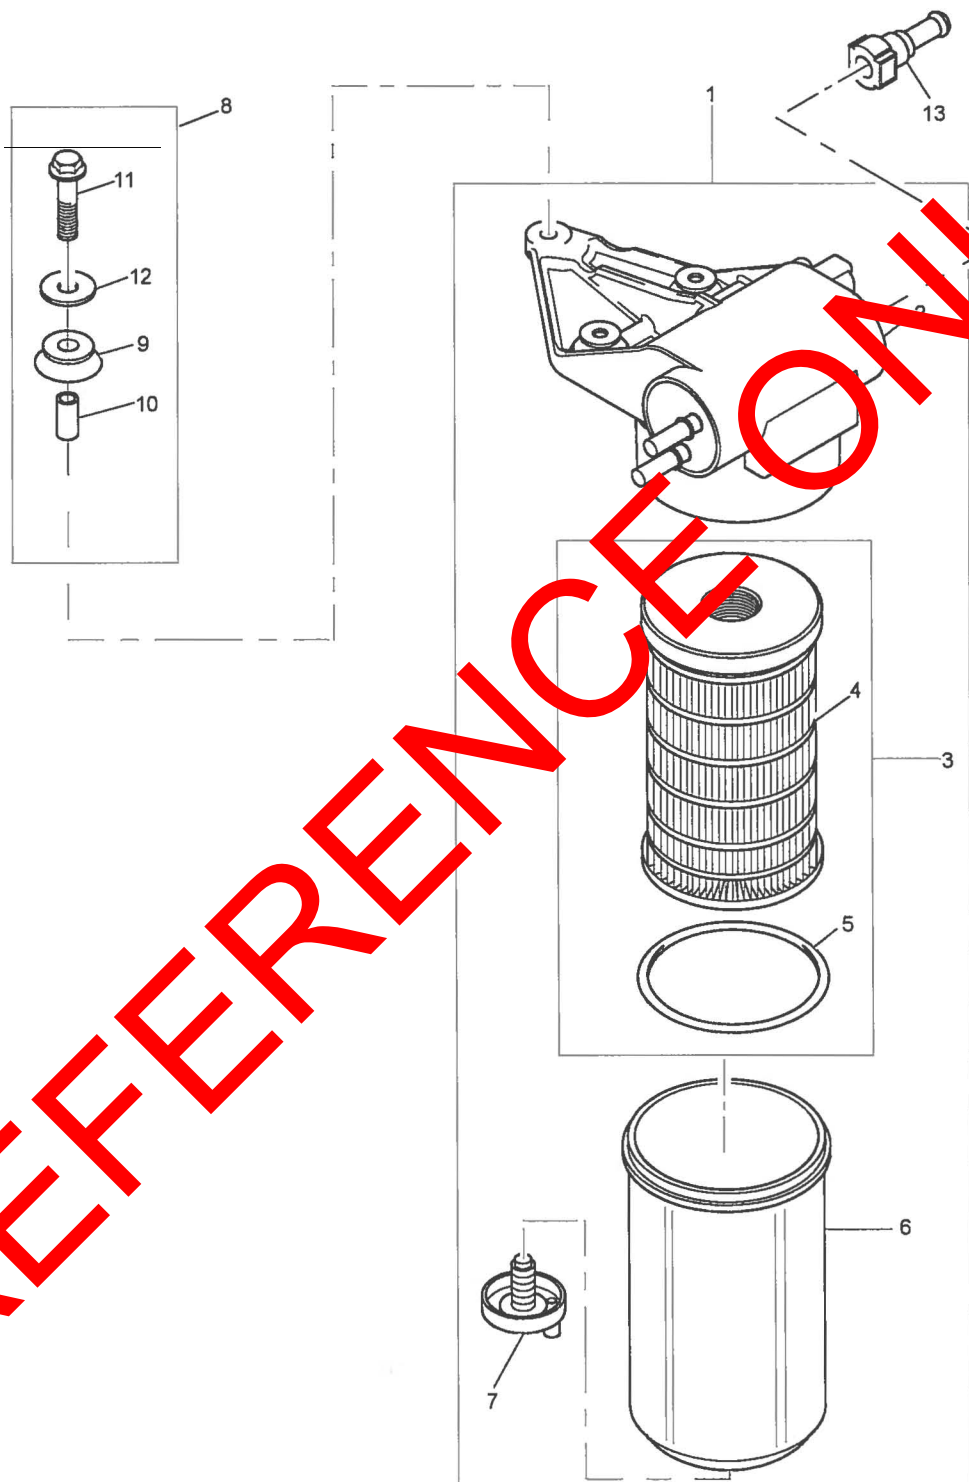


Lift Pump		Plate C
PPL023952		VBHR2178

Item	Part No.	References	Qty.	Description	Notes
1	4132A014 23123087		1	LIFT PUMP	
2		⇒ 4132A014	1	LIFT PUMP	
3	26560201 102639		1	FUEL FILTER	
4		⇒ 26560201	1	FUEL FILTER ELEMENT	
5		⇒ 26560201	1	O RING	
6	2656F837 23123088		1	BOWL	
7	2656F836		1	DRAIN PLUG	
8	U5MK0696		1	MOUNTING KIT	
9		⇒ U5MK0696	6	MOUNTING	
10		⇒ U5MK0696	3	SPACER	
11	2314F009		3	SCREW	
12	2131A507		3	WASHER	
13	3763A046		1	CONNECTION	

REFERENCE ONLY

 VBHR2178

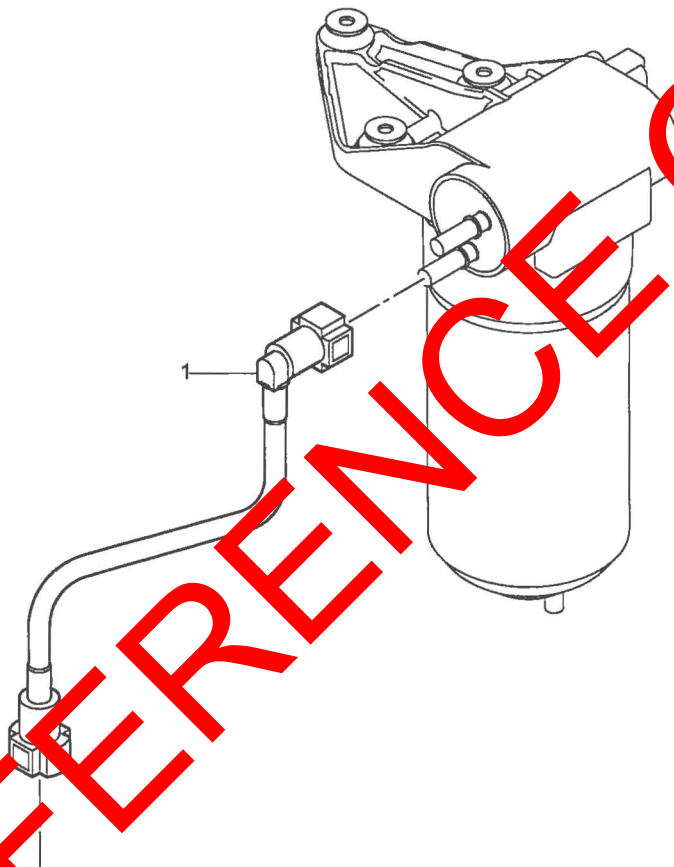


Filter to Injection Pump Pipe		Plate A
		VBHR2178

Item	Part No.	References	Qty.	Description	Notes
1	2646F001		1	PIPE - LOW PRESSURE FUEL	

REFERENCE ONLY

● PPL030522

 VBHR2178

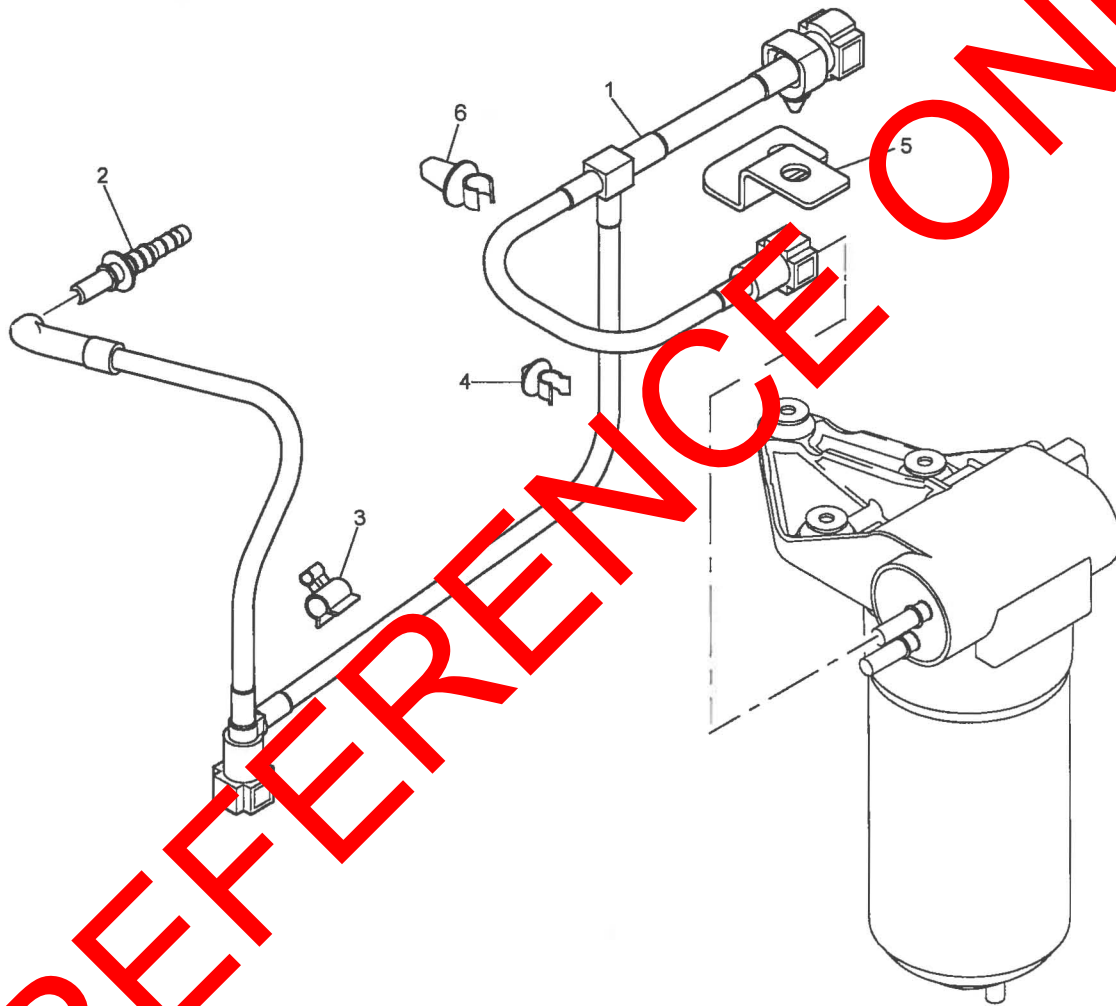


Injection Pump to Filter Pipe		Plate B
PPL030522		VBHR2178

Item	Part No.	References	Qty.	Description	Notes
1	2646F009		1	PIPE - LOW PRESSURE FUEL	
2	3763A045		1	CONNECTION	
3	K138AF02		1	CLIP	
4	2481D456		1	CLIP	
5	3733A011		1	BRACKET	
6	2481D558		2	CLIP	

REFERENCE ONLY

 WDHR0345

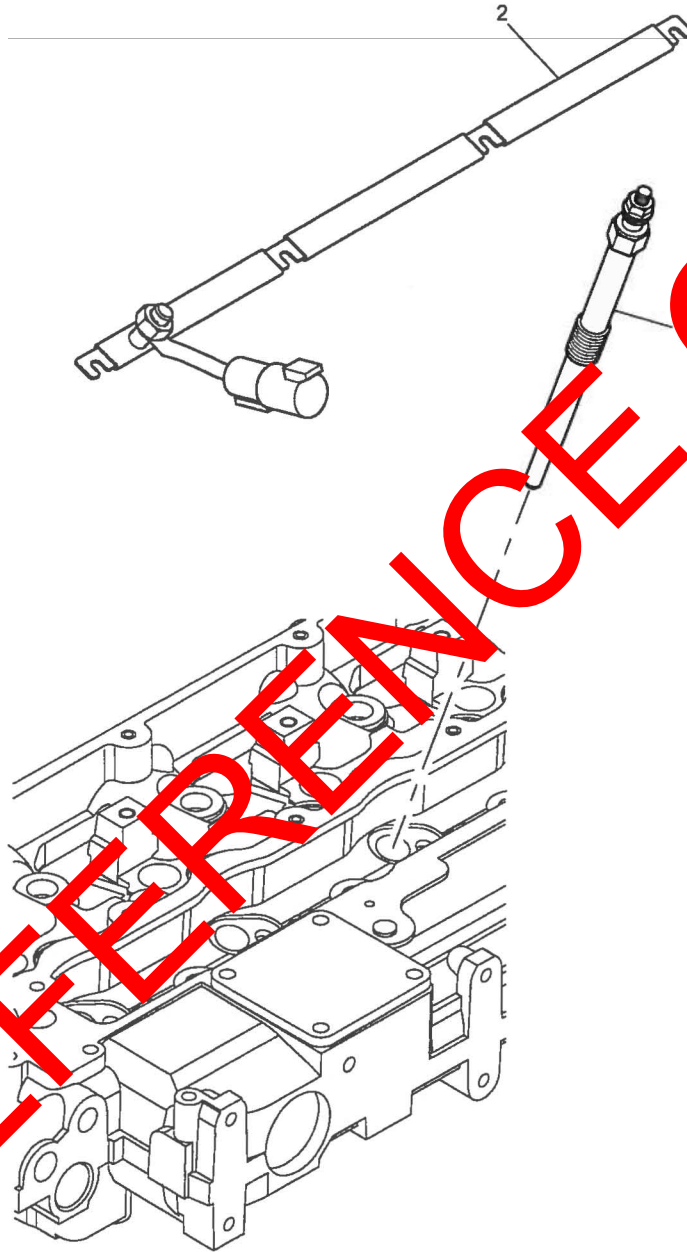


Heater Plugs		Plate A
		WDHR0345

Item	Part No.	References	Qty.	Description	Notes
1	2666A016	23123089	4	GLOWPLUG	
2	3161C019		1	BAR	

REFERENCE ONLY

 XBHR0458

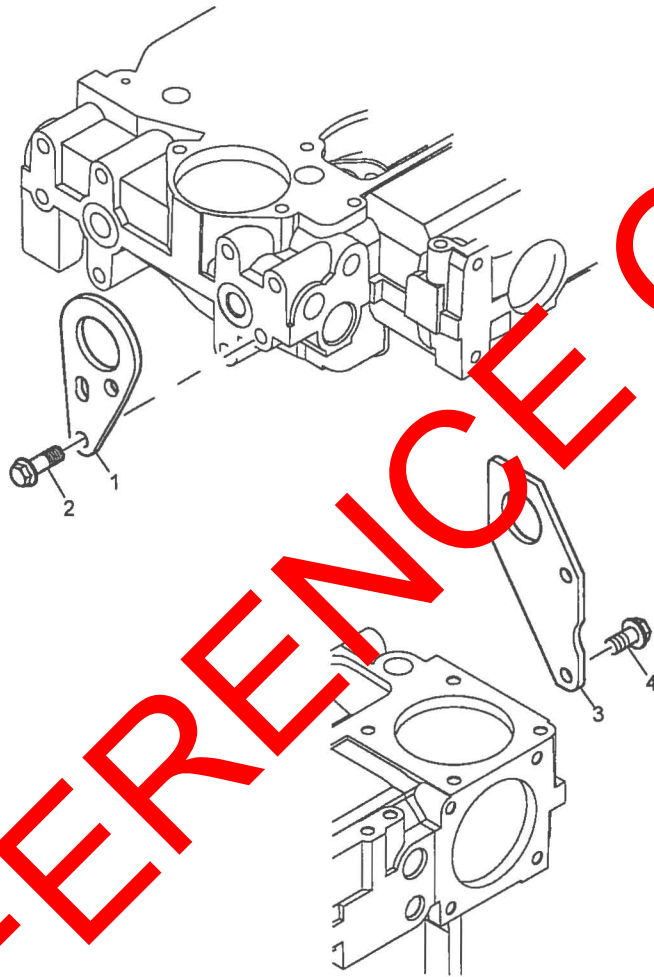


Engine Lifting Eyes		Plate A
		XBHR0458

Item	Part No.	References	Qty.	Description	Notes
1	3617A015		1	LIFTING BRACKET	
2	2314J002		2	SCREW	
3	3624A016		1	LIFTING BRACKET	
4	2314J002		2	SCREW	

REFERENCE ONLY

 ZCHR1178

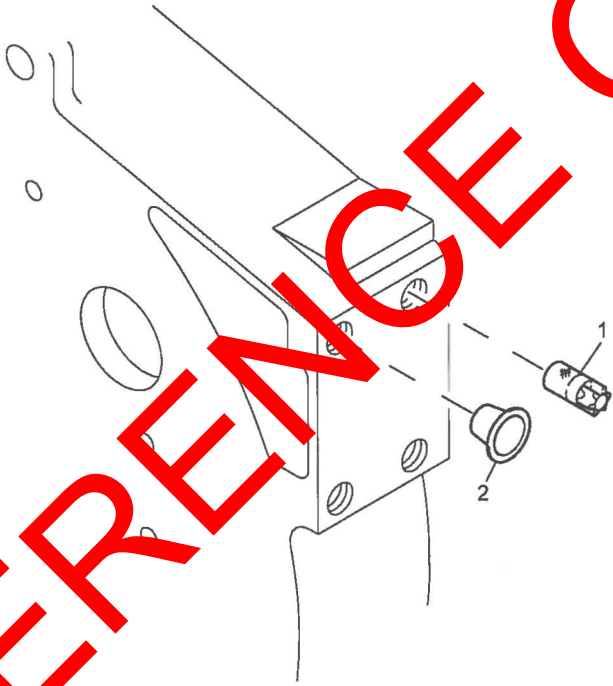


Engine Mounts		Plate A
		ZCHR1178

Item	Part No.	References	Qty.	Description	Notes
1	3212V004		4	PLUG	
2	2487208		6	PLUG	

REFERENCE ONLY

 ZJHR0546

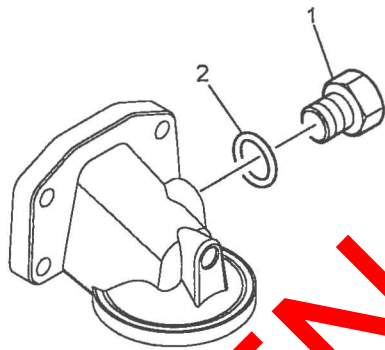


REFERENCE ONLY

Lubricating Oil Pressure Switch/Gauge		Plate A
		ZJHR0546

Item	Part No.	References	Qty.	Description	Notes
1	3278A004		1	PLUG	
2	2415H002		1	SEAL - SENSOR	

REFERENCE ONLY

 ZJHR0546

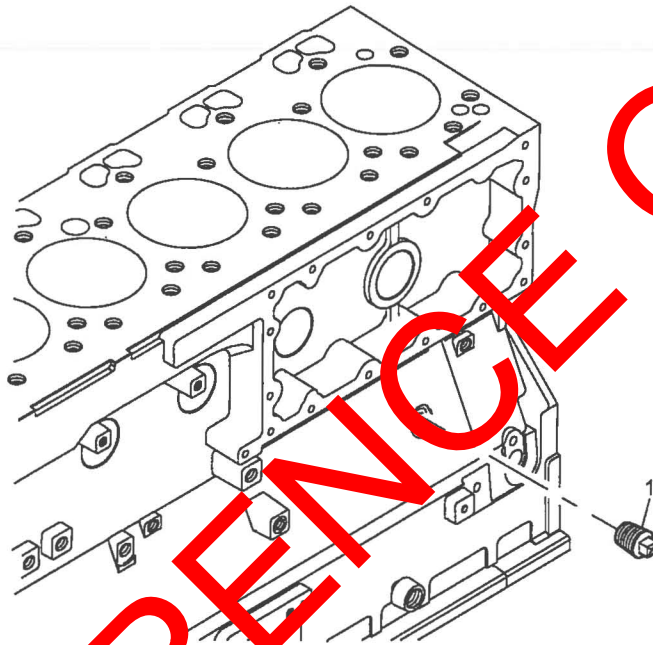


REFERENCE ONLY

Lubricating Oil Pressure Switch/Gauge		Plate B
		ZJHR0546

Item	Part No.	References	Qty.	Description	Notes
1	0650594		1	PLUG	

REFERENCE ONLY

 ZLHR0360

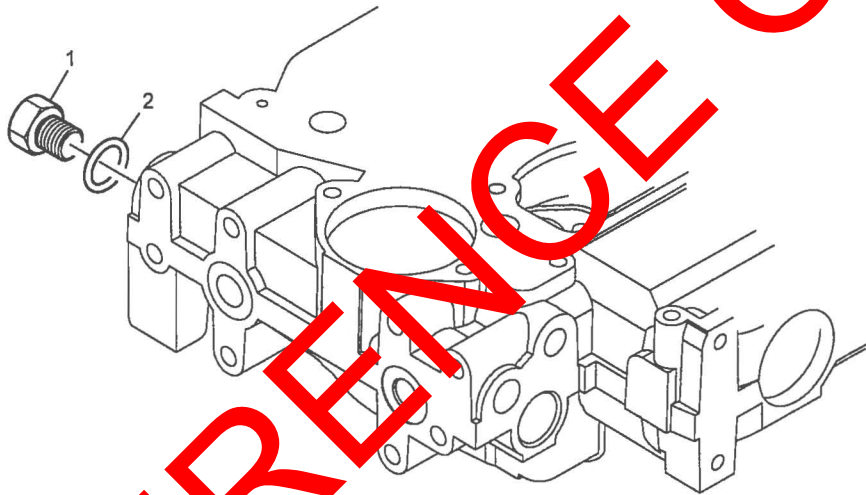


Temperature Gauge & Sender		Plate A
		ZLHR0360

Item	Part No.	References	Qty.	Description	Notes
1	3278A006		1	PLUG	
2	2415H003		1	SEAL - SENSOR	

REFERENCE ONLY

 ZZHR1012

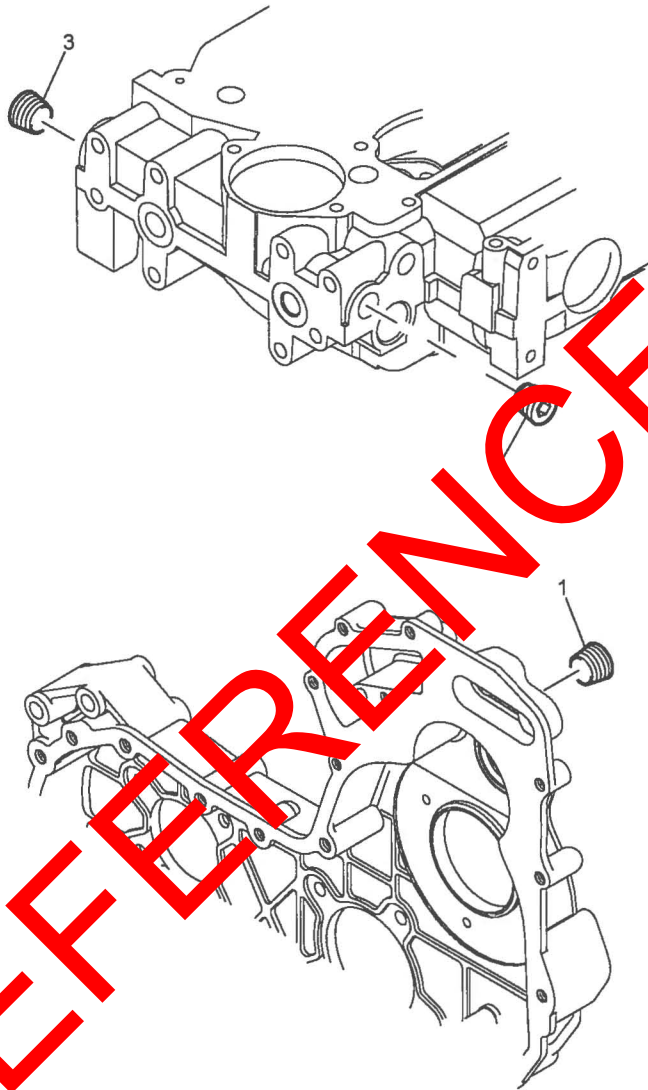

Miscellaneous & Auxiliaries		Plate A
		ZZHR1012

Item	Part No.	References	Qty.	Description	Notes
1	2431154		1	PLUG	
2	2431154		1	PLUG	
3	2431154		1	PLUG	

REFERENCE ONLY

SACR0350

Top Service Kit

Kit d'Entretien Haut du Moteur

Wartungssatz für Motoroberteil

Kit per la manutenzione della parte superiore del motore

Juego de Servicio Superior

REFERENCE ONLY

Top Service Kit	Plate A
	SACR0350

Item	Part No.	References	Qty.	Description	Notes
1	U5LT0350		1	GASKET KIT - TOP	
2	—3681E051		1	GASKET - CYLINDER HEAD	
3	—3681A055		1	GASKET - CYL. HEAD COVER	
4	—2415H008		1	SEAL - WATER OUTLET	
5	—3681V512		1	GASKET - EXHAUST MANIFOLD	
6	—3684N503		1	GASKET	
7	—3688A035		1	GASKET	
8	—3688A029		1	GASKET - TURBOCHARGER	
9	—L311FF02		4	INJECTOR WASHER	
10	—3688A036		1	GASKET	
11	—2418M514		4	SEAL - VALVE STEM (A)	
12	—2418M519		4	VALVE STEM SEAL (B)	

Footnotes	
(A)	BROWN
(B)	GREEN

REFERENCE ONLY

SGBR0376

1

Bottom Joints & Gasket Kit

Kit d'Entretien Bas du Moteur

Wartungssatz für Motorunterteil

Kit per la manutenzione della parte inferiore del motore

Juego de Servicio de la Parte Inferior

REFERENCE ONLY

Bottom Service Kit		Plate A
		SGBR0376

Item	Part No.	References	Qty.	Description	Notes
1	U5LB0376		1	BOTTOM JOINT AND GASKET	

REFERENCE ONLY

REFERENCE ONLY

Description	Part No.	Page
2 GROOVE ALTERNATOR PULLEY	3115A049	97
ADAPTOR	3161C012	29, 31
	3347A041	115
ALTERNATOR	2871A303	93
ALTERNATOR BRACKET	3824A071	95
BANJO BOLT	3218R036	111, 111
BAR	3161C019	129
BIG END BEARING KIT	U5ME0013	15
BIG END BRG KIT - O/S	U5ME0013A	15
	U5ME0013B	15
	U5ME0013C	15
BLANKING PLATE	3623A009	13, 15
BLOCK	3241N001	7
BOLT	3218R037	79
BOTTOM JOINT AND GASKET KIT	U5B0376	145
BOWL	3556F837	123
BRACKET	3641A007	29, 31
	3653A017	39
	3733A011	127
	3823A051	115
BRIDGE PIECE	3627P041	55
CABLE	3161C017	41
CAMSHAFT	3141D222	27
CAMSHAFT BUSH	3112D071	13

Description	Part No.	Page
CAMSHAFT GEAR	3117N001	101
CAP	2646E501	3
	3342A011	2, 23
	3788A002	61
	3788A003	61
CIRCLIP	272133	17
	2722A022	25
CLIP	2481863	67
	2481D456	39, 127
	2481D558	127
	2481Y011	35
	2481Y012	35
	2646E019	35
	K138AF02	33, 127
CON ROD ASSEMBLY	4115C311	11, 19
	4115C312	11, 19
	4115C313	11, 19
	4115C314	11, 19
	4115C315	11, 19
	4115C316	11, 19
CON ROD BOLT	3212V003	19
CONNECTION	3763A045	127
	3763A046	123
	4133L048	85
	4133L501	87
	4133L507	89
COVER	3788N003	63

Parts Index

Description	Part No.	Page
COVER PLATE	3615A009	61
CRANKSHAFT GEAR	3117C221	15
CRANKSHAFT KIT	ZZ90222	11, 15
CRANKSHAFT KIT - EXCHANGE	ZZ90222P	11, 15
CRANKSHAFT PULLEY	3115T051	79
CYL HEAD COVER ASSY	4142X312	61
CYLINDER BLOCK ASSEMBLY	ZZ50311	13
CYLINDER HEAD BOLT	3218A011	23
	3218A012	23
CYLINDER HEAD KIT	ZZ80268	23
DIAPHRAGM	3789A001	51
DIPSTICK	3178C069	57
DOWEL	035002	47
	2116053	101
	3144A009	13
DRAIN PLUG	2656P036	123
EXHAUST ELBOW	3766A131	115
EXHAUST MANIFOLD	3778E203	119
EXHAUST VALVE	3142A151	23
EXTENSION	3748W242	91
FAN	2485C514	91
FAN DRIVE HOUSING	4113K005	53

Description	Part No.	Page
FAN DRIVE PULLEY	3115C113	53
FANBELT	2614B655	53
FILLER	4134C019	65
FLYWHEEL ASSEMBLY	4111D127	49
FLYWHEEL HOUSING	3713K027	77
FRONT COVER KIT	4142A503	103
FRONT OIL SEAL	418E037	99
FUEL FILTER	26560201	123
FUEL INJECTION PUMP	2644H022	29
	2644H024	31
GASKET	36832137	59
	3684N503	121, 143
	3688A035	113, 143
	3688A036	113, 143
GASKET - CYL. HEAD COVER	3681A055	61, 143
GASKET - CYLINDER HEAD	3681E051	23, 143
GASKET - EXHAUST MANIFOLD	3681V512	119, 143
GASKET - IND MANIFOLD	3688A037	117
GASKET - OIL COOLER	3685A025	71
	3685A033	71
GASKET - OIL FILTER HEAD	3688A039	13, 73, 75

Description	Part No.	Page
GASKET - SUMP	3681K037	55
GASKET - TIMING CASE	3681P053	99
GASKET - TIMING CASE COVER	3681P046	103
GASKET - TURBOCHARGER	3688A029	109, 143
GASKET - WATER PUMP	24880234	83
	3682A011	81, 83
GASKET KIT - TOP	U5LT0350	143
GLOWPLUG	2666A016	129
HOSE	2646F501	43
	3383A027	117
	33872632	67
HOSE CLIP	2481D073	117, 117
HUB	3272A011	101
IDLER GEAR	111A034	101
INJECTION PUMP GEAR	111L261	29, 31
INJECTOR	2645K011	37
INJECTOR CLAMP	3751A241	37
INJECTOR NOZZLE	2645K611	37
INJECTOR WASHER	L311FF02	37, 143
INSERT	2137435	55
INTAKE VALVE	3142H071	23
LEVER	36155429	95
LIFT PUMP	4132A014	123
LIFTING BRACKET	3617A015	131
	3624A016	131

Description	Part No.	Page
MAIN BEARING KIT	U5MB0018	15
MAIN BEARING KIT - O/S	U5MB0018A	15
	U5MB0018B	15
	U5MB0018C	15
METRIC BOLT	3211C002	11, 21
MOUNTING KIT	U5MK0696	123
NUT	0576052	25, 25
	0576111	33
	2318A108	29, 31
	2318A603	29, 31
	2318A604	51, 95
	2318A634	109, 115
	2318D208	91, 95
	3353D005	57
OIL COOLER	2486A217	71
	4134W021	71
OIL FILLER CAP	4142X098	65
	4142X099	61
OIL FILTER	2654407	77
OIL FILTER HEAD	3773A061	73
OIL PUMP	4132F071	107
OLIVE	0566002	33
	33811112	33
	33812116	57
PIPE - AIR	3571C068	117
PIPE - BOOST	4121A063	33
PIPE - BREATHER	4134K022	67

Parts Index

Description	Part No.	Page
PIPE - FUEL INJ NO 1 CYL	3525A101	35
PIPE - FUEL INJ NO 2 CYL	3525A102	35
PIPE - FUEL INJ NO 3 CYL	3525A103	35
PIPE - FUEL INJ NO 4 CYL	3525A104	35
PIPE - LOW PRESSURE FUEL	2646F001	125
	2646F009	127
PIPE - TURBO OIL DRAIN	3584A001	113
PIPE - TURBO OIL FEED	4128A027	111
PISTON AND RING KIT	4115P015	11, 17
	4115P016	11, 17
	4115P017	11, 17
PISTON COOLING JET	2113A002	13
PISTON RING KIT	1PRK0002	17
PLATE	021356	47
	3241A025	101
	3611M006	121
PLUG	0650588	13, 23
	0650594	137
	0650710	13
	2431131	41
	2431154	23, 141, 141, 141
	2431A016	55

Description	Part No.	Page
	2485A104	25
	2485A108	13
	2485A109	45
	2485A124	69
	2487208	113
	2487A002	113
	2487A052	47
	2487Y001	47
	3212F008	13
	3212V004	133
	3212V006	13
	32141316	13
	32186405	55
	32416117	23
	3241A011	13
	3241A012	13
	3278A004	135
	3278A006	23, 139
	3278A007	73
PUSHROD	31434307	27
REPAIR KIT - WATER PUMP	U7LW0172	83
ROCKER ARM ASSEMBLY	4115R314	25
	4115R315	25
ROCKER SHAFT ASSEMBLY	4115R612	25
ROCKER SHAFT ASSY - MINOR	4115R703	25

Description	Part No.	Page
ROCKER SHAFT SPRING	3174A015	25
SCREW	0746853	49
	2151A001	61
	2161A011	61
	2311D039	55
	2311D060	71
	2314C049	105
	2314F001	13
	2314F002	47
	2314F003	63
	2314F004	113
	2314F005	67
	2314F009	113
	2314H001	39, 103
	2314H002	29, 31, 55, 85, 99, 113
	2314H004	29, 31, 59, 71, 87, 89, 95
	2314H005	81
	2314H006	71
	2314H008	65
	2314H012	81, 103
	2314H033	13, 55, 75, 117, 121
	2314H034	73, 99
	2314H052	95

Description	Part No.	Page
	2314J001	47
	2314J002	29, 31, 131, 131
	2314J003	113
	2314J004	115
	2314J005	53
	2314J007	95
	2314J008	107
	2314J011	101
	2314J012	95
	2314J204	47
	2314J603	47
	2314J606	101
	2314K161	65, 71
	2314K164	81
	2314K166	55, 55
	2314W009	37
	2316A901	25
	2316A902	25
	32114145	25, 25
	32166329	13
	3218J013	119
SEAL	36843154	47
SEAL - INJECTOR	26460064	37
SEAL - O RING	2415715	55
	2415A068	67
	2415A131	61
	2415B121	65

Parts Index

Description	Part No.	Page
	2415H009	73
	2415H701	67
	2418F001	85
	2418F002	85
	26420318	29, 31
SEAL - REOS HOUSING	2418F704	11, 21
SEAL - SENSOR	2415H002	135
	2415H003	23, 139
SEAL - VALVE STEM	2418M514	143
	2418M517	23
SEAL - WATER OUTLET	2415H008	87, 143
	2415H219	89
SEALING RING	2415633	85
SHORT ENGINE	RG40004	11
SMALL END BUSH	3112A005	19
SOLENOID	26420469	29, 31
SPACER	0920065	95
SPRING	3174A007	61
	3175P003	67
STARTER RING GEAR	31162121	49
STARTER MOTOR	2873K404	51
STUD	2313C078	51
	2313H236	91
	2313M377	109, 115
SUCTION PIPE	3575A061	59

Description	Part No.	Page
SUMP	4145H091	55
SUPPORT BRACKET	36241123	67
TAPPET	3142U031	27
THERMOSTAT	2485C041	87
THIMBLE	33142111	11
THRUST WASHER	3112A001	21
	31137012	15
	3113732	15
	31137551	15
	31137561	15
TIE	2817154	39
TIMING GEAR CASE	3716C461	99
TIME ASSEMBLY	3577A125	57
TURBOCHARGER	2674A200	109
	2674A200P	109
UNION	0206002	33
UNION NUT	3353D004	33
VALVE COLLET	3142W004	23, 23
VALVE GUIDE	3313E021	23, 23
VALVE SEAT INSERT	3314A151	23
	3314A161	23
VALVE SPRING	3174A016	23, 23
VALVE STEM SEAL	2418M519	23, 143
WASHER	0920497	95
	2131A008	95
	2131A506	111, 111, 111, 111

Description	Part No.	Page
	2131A507	123
	2134A502	25
	2411D008	29, 31
	2415D053	105
	33117127	49
	3321A003	101
	K134AF01	29, 31
WATER PUMP GEAR	24880232	81
WATER PUMP KIT	U5MW0194	81
WATER TEMPERATURE SWITCH	2848A123	41
WOODRUFF KEY	0500012	15, 27, 101

REFERENCE ONLY

REFERENCE ONLY