
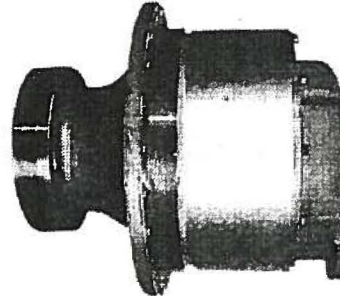
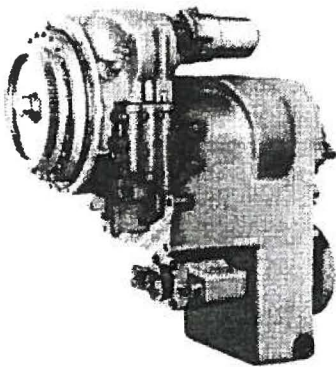


V9

**T-12000 3, 4, & 6 Speed
Intermediate Drop
0109**

P/N# 97489
BEECHS
U/M:EA
MANUAL, DANA T12000 TRANS MAIN
Primary Loc
B10039A21
05/07/2010 02:39 PM

97489

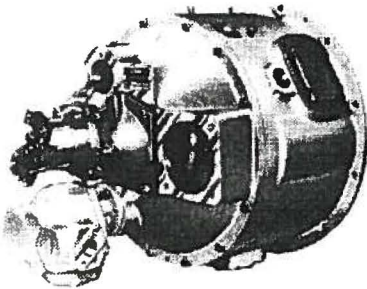

SPICER OFF-HIGHWAY COMPONENTS



TOWING OR PUSH STARTING

Before towing the vehicle, be sure to lift the rear wheels off the ground or disconnect the driveline to avoid damage to the transmission during towing.

NOTE: If the transmission has 4 wheel drive, disconnect both front and rear drivelines. Because of the design of the hydraulic system, the engine **cannot be started by pushing or towing.**

© Copyright DANA SPICER OFF-HIGHWAY PRODUCTS DIVISION 1999
Unpublished material - All rights reserved
Limited Distribution

No part of the work may be reproduced in any form under
any means without direct written permission of
DANA SPICER OFF-HIGHWAY PRODUCTS DIVISION.

FOREWORD

This manual has been prepared to provide the customer and the maintenance personnel with information and instructions on the maintenance and repair of the **CLARK-HURTH COMPONENTS** product.

Extreme care has been exercised in the design, selection of materials, and manufacturing of these units. The slight outlay in personal attention and cost required to provide regular and proper lubrication, inspection at stated intervals, and such adjustments as may be indicated will be reimbursed many times in low cost operation and trouble free service.

In order to become familiar with the various parts of the product, its principle of operation, troubleshooting, and adjustments, it is urged that the mechanic study the instructions in this manual carefully and use it as a reference when performing maintenance and repair operations.

Whenever repair or replacement of component parts is required, only **Clark-Hurth Components**-approved parts as listed in the applicable parts manual should be used. Use of "will-fit" or non-approved parts may endanger proper operation and performance of the equipment. **Clark-Hurth Components** does not warrant repair or replacement parts, nor failures resulting from the use of parts which are not supplied by or approved by **Clark-Hurth Components**. **IMPORTANT: Always furnish the Distributor with the serial and model number when ordering parts.**



TABLE OF CONTENTS

T12000 TRANSMISSION ASSEMBLY

HOW THE UNITS OPERATE

SECTIONAL VIEWS AND PARTS IDENTIFICATION

Transmission Case and Plate Group	Fig. A
Converter Group	Fig. B
Forward - Reverse and 1st - 2nd Clutch Group	Fig. C
High - 3rd and Output Shaft Group	Fig. D
3rd and Output Shaft Group with Disconnect	Fig. E
Control Valve Group—Dual Modulation	Fig. F
Control Valve Group—Single Modulation, Mechanical Inching	Fig. G
Assembly Instruction	Fig. H, I, J, K, L, M

DISASSEMBLY OF TRANSMISSION	1
REASSEMBLY OF TRANSMISSION	65
CLUTCH ENGAGEMENT (POWER FLOW) 4 AND 6 SPEED	90
CLUTCH ENGAGEMENT (POWER FLOW) 3 SPEED	91
DRIVE PLATE INSTALLATION	92
TRANSMISSION TO ENGINE INSTALLATION PROCEDURE	93
SPECIFICATIONS AND SERVICE DATA	94
SERVICING MACHINE AFTER TRANSMISSION OVERHAUL	95
EXTERNAL PLUMBING AND PRESSURE CHECK POINTS	96, 97
CLEANING AND INSPECTION	98
PARKING BRAKE SERVICE	99
TROUBLESHOOTING GUIDE	100
CONVERTER STALL PROCEDURE	101
ELECTRIC SOLENOID CONTROL WIRING DIAGRAM	102, 103

NOTE: Metric Dimensions Shown in Brackets [].

T12000 TRANSMISSION ASSEMBLY

The transmission and hydraulic torque converter portion of the power train enacts an important role in transmitting engine power to the driving wheels. In order to properly maintain and service these units it is important to first understand their function and how they operate.

The transmission and torque converter function together and operate through a common hydraulic system. It is necessary to consider both units in the study of their function and operation.

The electric shift control valve is located in the vehicle's operator compartment. The function of the control is to energize the selected solenoid valves thus directing the oil under pressure to the selected directional and range (gear) clutches. The purpose of the range or directional clutches is to direct the power flow through the gear train to provide the desired speed range and direction.

An axle disconnect is optional and is located on the output shaft. The drive to the front axle can be disconnected or connected by manual, pneumatic, or hydraulic shifting.

When either directional clutch is selected the opposite clutch is relieved of pressure and vents back through the direction selector solenoid. The same procedure is used in the speed selector.

The direction or speed clutch assembly consists of a drum with slots and a bore to receive a hydraulically actuated piston. The piston is "oil tight" by the use of sealing rings. A steel disc with external tangs is inserted into the drum and rests against the piston. Next, a friction disc with splines at the inner diameter is inserted. Discs are alternated until the required total is achieved. A heavy back-up plate is then inserted and secured with a snap ring. A hub with O.D. splines is inserted into the splines of discs with teeth on the inner diameter. The discs and hub are free to increase in speed or rotate in the opposite direction as long as no pressure is present in that specific clutch.

To engage the clutch, the electric shift control lever is placed in the desired position. This energizes the selected direction and range (gear) solenoids allowing the oil under pressure to flow through tubes and passages to the selected clutch shafts. Oil sealing rings are located on the clutch shaft. These rings direct oil under pressure through a drilled passageway in the shaft to a desired clutch. Pressure of the oil forces the piston and discs against the heavy back-up plate. The discs with tangs on the outer diameter clamping against discs with teeth on the inner diameter enables the hub and clutch shaft to be locked together and allows them to drive as a unit.

There are bleed balls in the clutch piston or clutch drum which allow quick escape for oil when the pressure to the piston is released.

HOW THE UNITS OPERATE

With the engine running, the transmission charging pump draws oil from the transmission sump through the oil suction tube and screen and directs it through the pressure regulating valve and oil filter.

The pressure regulating valve maintains pressure to the transmission solenoid valves for actuating the direction and speed clutches. This regulator valve consists of a hardened valve spool operating in a closely fitted bore. The valve spool is spring loaded to hold the valve in the closed position. When a specific pressure is achieved, the valve spool works against the spring until an exhaust port is exposed along the side of the bore. This sequence of events provides the proper system pressure. This requires a small portion of the total volume of oil used in the system.

The remaining volume of oil is directed out through an external oil cooler and into the lube inlet port. From the lube inlet port oil goes through the forward-reverse shaft, lubricating the forward and reverse clutches, with the remainder going to the torque converter. After entering the converter, the oil is directed through the converter blade cavity and exits in the passage between the turbine shaft and impeller hub. The oil then lubes the impeller hub bearing with the remainder going to the 3rd-4th clutch shaft and 1st-2nd clutch shaft to lubricate those clutches and shaft bearings. The oil then gravity drains to the transmission sump.

The hydraulic torque converter consists basically of three elements and their related parts to multiply engine torque. The engine power is transmitted from the engine flywheel to the impeller element through the impeller cover. This element is the pump portion of the hydraulic torque converter and is the primary component which starts the oil flowing to the other components which results in torque multiplication. This element can be compared to a centrifugal pump in that it picks up fluid at its center and discharges at its outer diameter.

The torque converter turbine is mounted opposite the impeller and is connected to the output shaft of the torque converter. This element receives fluid at its outer diameter and discharges at its center. Fluid directed by the impeller out into the particular design of blading in the turbine and reaction member is the means by which the hydraulic torque converter multiplies torque.

The reaction member of the torque converter is located between and at the center of the inner diameters of the impeller and turbine elements. Its function is to take the fluid which is exhausting from the inner portion of the turbine and change its direction to allow correct entry for recirculation into the impeller element.

The torque converter will multiply engine torque to its designed maximum multiplication ratio when the output shaft is at zero R.P.M. Therefore, we can say that as the output shaft is decreasing in speed the torque multiplication is increasing.

With the engine running and the electric shift control lever in neutral position, oil pressure from the regulating valve is blocked at the solenoid control valves, and the transmission is in neutral. Movement of the control lever will energize the forward or reverse solenoid valves and selected range (gear) solenoid, directing oil under pressure to the selected direction and range (gear) clutches.

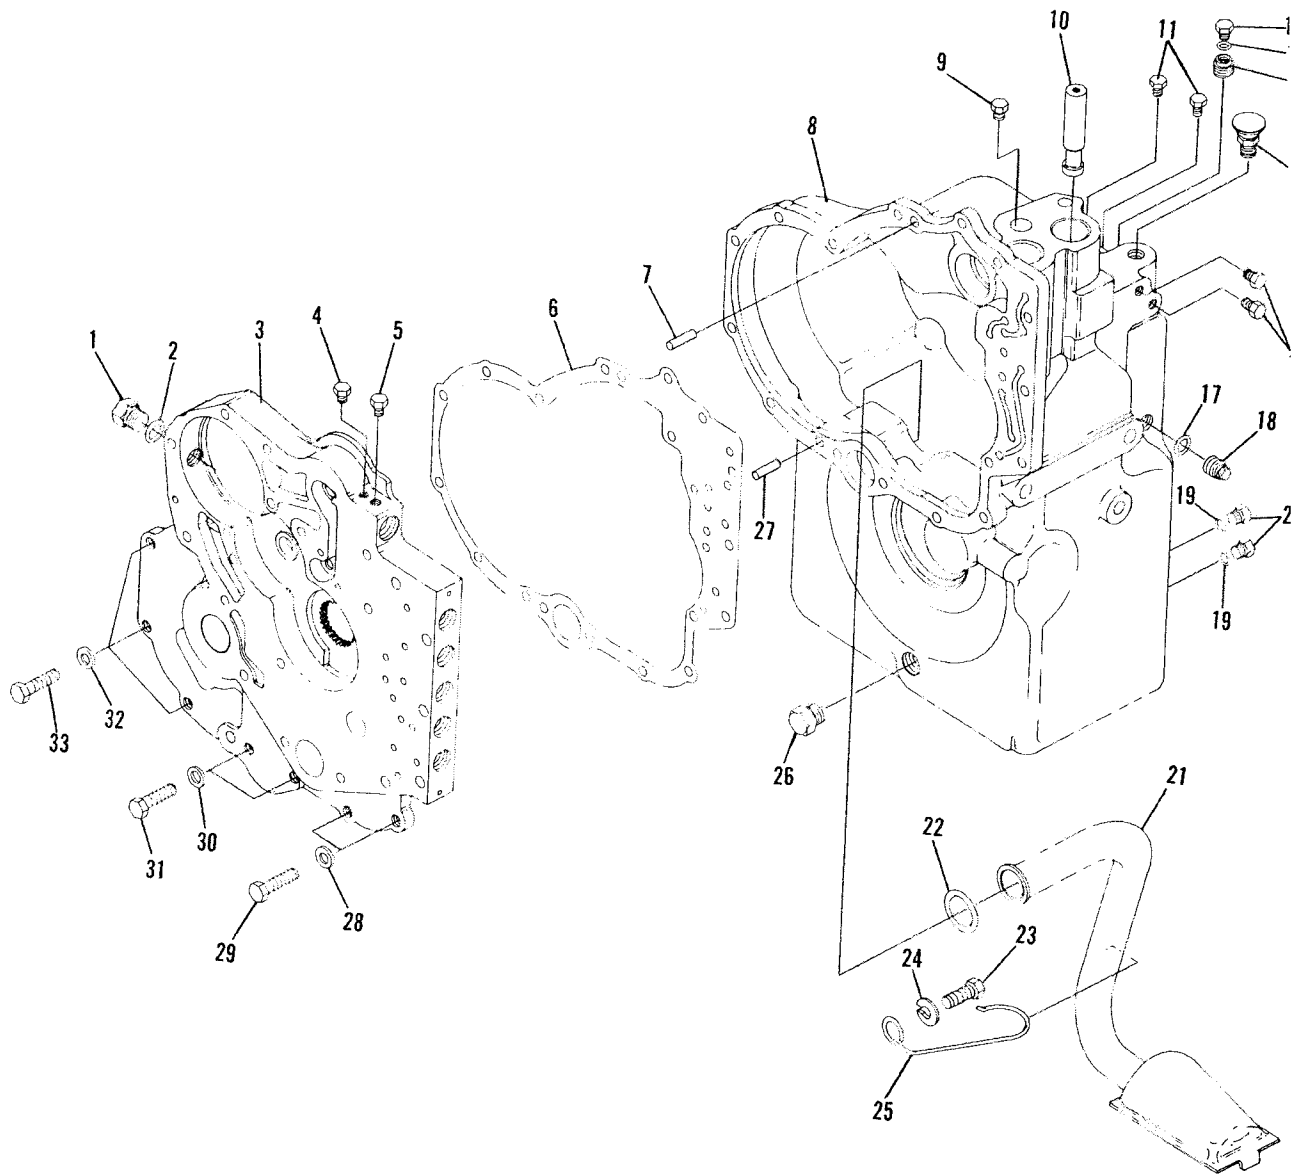


Figure A

T12000
TRANSMISSION CASE AND PLATE GROUP

ITEM	DESCRIPTION	QUANTITY	ITEM	DESCRIPTION	QUANTITY
1	Sensor Port Plug	1	19	Plug "O" Ring	2
2	Sensor Port Plug Washer	1	20	Oil Level Plug	2
3	Spacer Plate	1	21	Tube and Screen Assembly	1
4	Inlet Pressure Port Plug	1	22	Oil Supply Tube Seal Ring	1
5	Outlet Temperature Port Plug	1	23	Retainer Clip Screw	1
6	Plate to Transmission Case Gasket	1	24	Retainer Clip Screw Lockwasher	1
7	Plate to Transmission Case Dowel Pin	1	25	Oil Supply Tube Retainer Clip	1
8	Transmission Case	1	26	Magnetic Drain Plug	1
9	Filler Plug	1	27	Plate to Transmission Case Dowel Pin	1
10	Diverter Sleeve (Double Modulation Only) ..	1	28	Plate to Transmission Case Screw Lockwasher	2
11	Pipe Plug	2	29	Plate to Transmission Case Screw	2
12	Auto Shift Sensor Port Plug	1	30	Plate to Transmission Case Screw Lockwasher	2
13	Plug Sealing Ring	1	31	Plate to Transmission Case Screw	2
14	Adjusting Bushing	1	32	Plate to Transmission Case Screw Lockwasher	3
15	Air Breather	1	33	Plate to Transmission Case Screw	3
16	Pipe Plug	2			
17	Plug Sealing Ring	1			
18	Speedo Sensor Plug	1			
	(Items 12, 13, 14 optional in this position)				

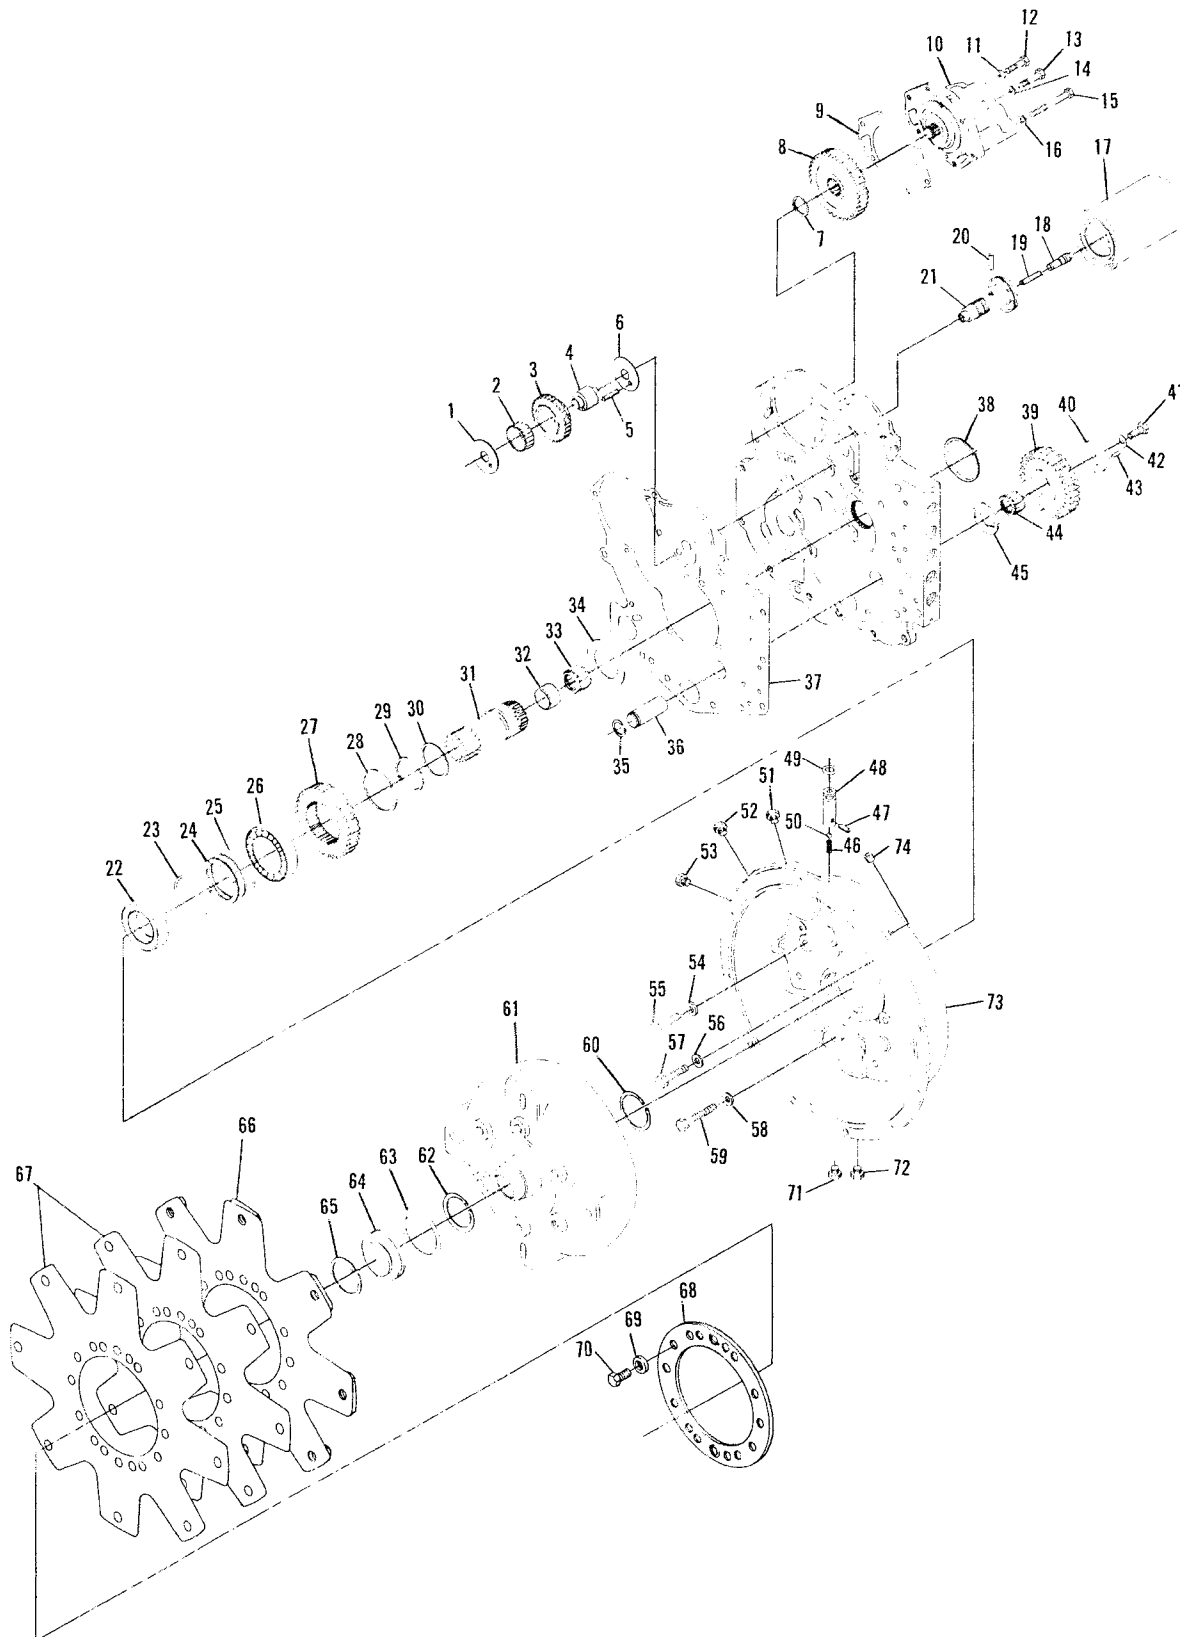


Figure B

T12000
CONVERTER GROUP

ITEM	DESCRIPTION	QUANTITY	ITEM	DESCRIPTION	QUANTITY
1	Pump Drive Idler Thrust Washer	1	40	End Plate	1
2	Idler Gear Bearing	1	41	Reverse Idler End Plate Capscrew	1
3	Pump Drive Idler Gear	1	42	End Plate Capscrew Washer	1
4	Pump Drive Idler and Pilot Shaft	1	43	End Plate to Shaft Roll Pin	1
5	Pump Drive Idler and Pilot Shaft Dowel ...	1	44	Reverse Idler Gear Bearing	1
6	Pump Drive Idler Thrust Washer	1	45	Thrust Washer	1
7	Pump Drive Gear Retainer Snap Ring	1	46	Spring	1
8	Pump Drive Gear	1	47	Pin	1
9	Charging Pump Gasket	1	48	Ball Check Valve	1
10	Charging Pump	1	49	"O" Ring	1
11	Pump Mounting Screw Lockwasher	1	50	Ball	1
12	Pump Mounting Screw	1	51	Regulator Pressure Port Plug	1
13	Pump Mounting Screw	1	52	Plug	1
14	Pump Mounting Screw Lockwasher	1	53	Plug	1
15	Pump Mounting Screw	4	54	Converter Housing to Plate	
16	Pump Mounting Screw Lockwasher	4		Screw Lockwasher	6
17	Filter Assembly	1	55	Converter Housing to Plate Screw	6
18	Piston	1	56	Converter Housing to Plate	
19	Spring	1		Screw Lockwasher	1
20	Pin	1	57	Converter Housing to Plate Screw	1
21	Sleeve	1	58	Converter Housing to Transmission	
22	Converter Housing Oil Seal	1		Case Screw Lockwasher	10
23	Oil Distributor Ring "O" Ring	1	59	Converter Housing to Transmission	
24	Oil Distributor Ring	1		Case Screw	10
25	Oil Distributor Ring "O" Ring	1	60	Turbine Hub Snap Ring	1
26	Torque Converter Bearing	1	61	Torque Converter Assembly	1
27	Impeller Hub Gear	1	62	Turbine Hub Snap Ring	1
28	Stator Support Snap Ring	1	63	Torque Converter Plug "O" Ring	1
29	Stator Support Piston Ring	1	64	Torque Converter Plug	1
30	Stator Support Piston Ring Expander	1	65	Plug Snap Ring	1
31	Stator Support	1	66	Drive Plate Weld Nut Assembly	1
32	Bushing	1	67	Drive Plate	2
33	Bearing	1	68	Drive Plate Backing Ring	1
34	Impeller Hub Gear Washer	1	69	Drive Plate Mounting Screw Lockwasher ..	5
35	Idler Shaft Snap Ring	1	70	Drive Plate Mounting Screw	5
36	Idler and Pilot Shaft	1	71	Plug	1
37	Housing to Plate Gasket	1	72	Plug	1
38	Stator Support Snap Ring	1	73	Converter Housing	1
39	Reverse Idler Gear	1	74	Plug	1

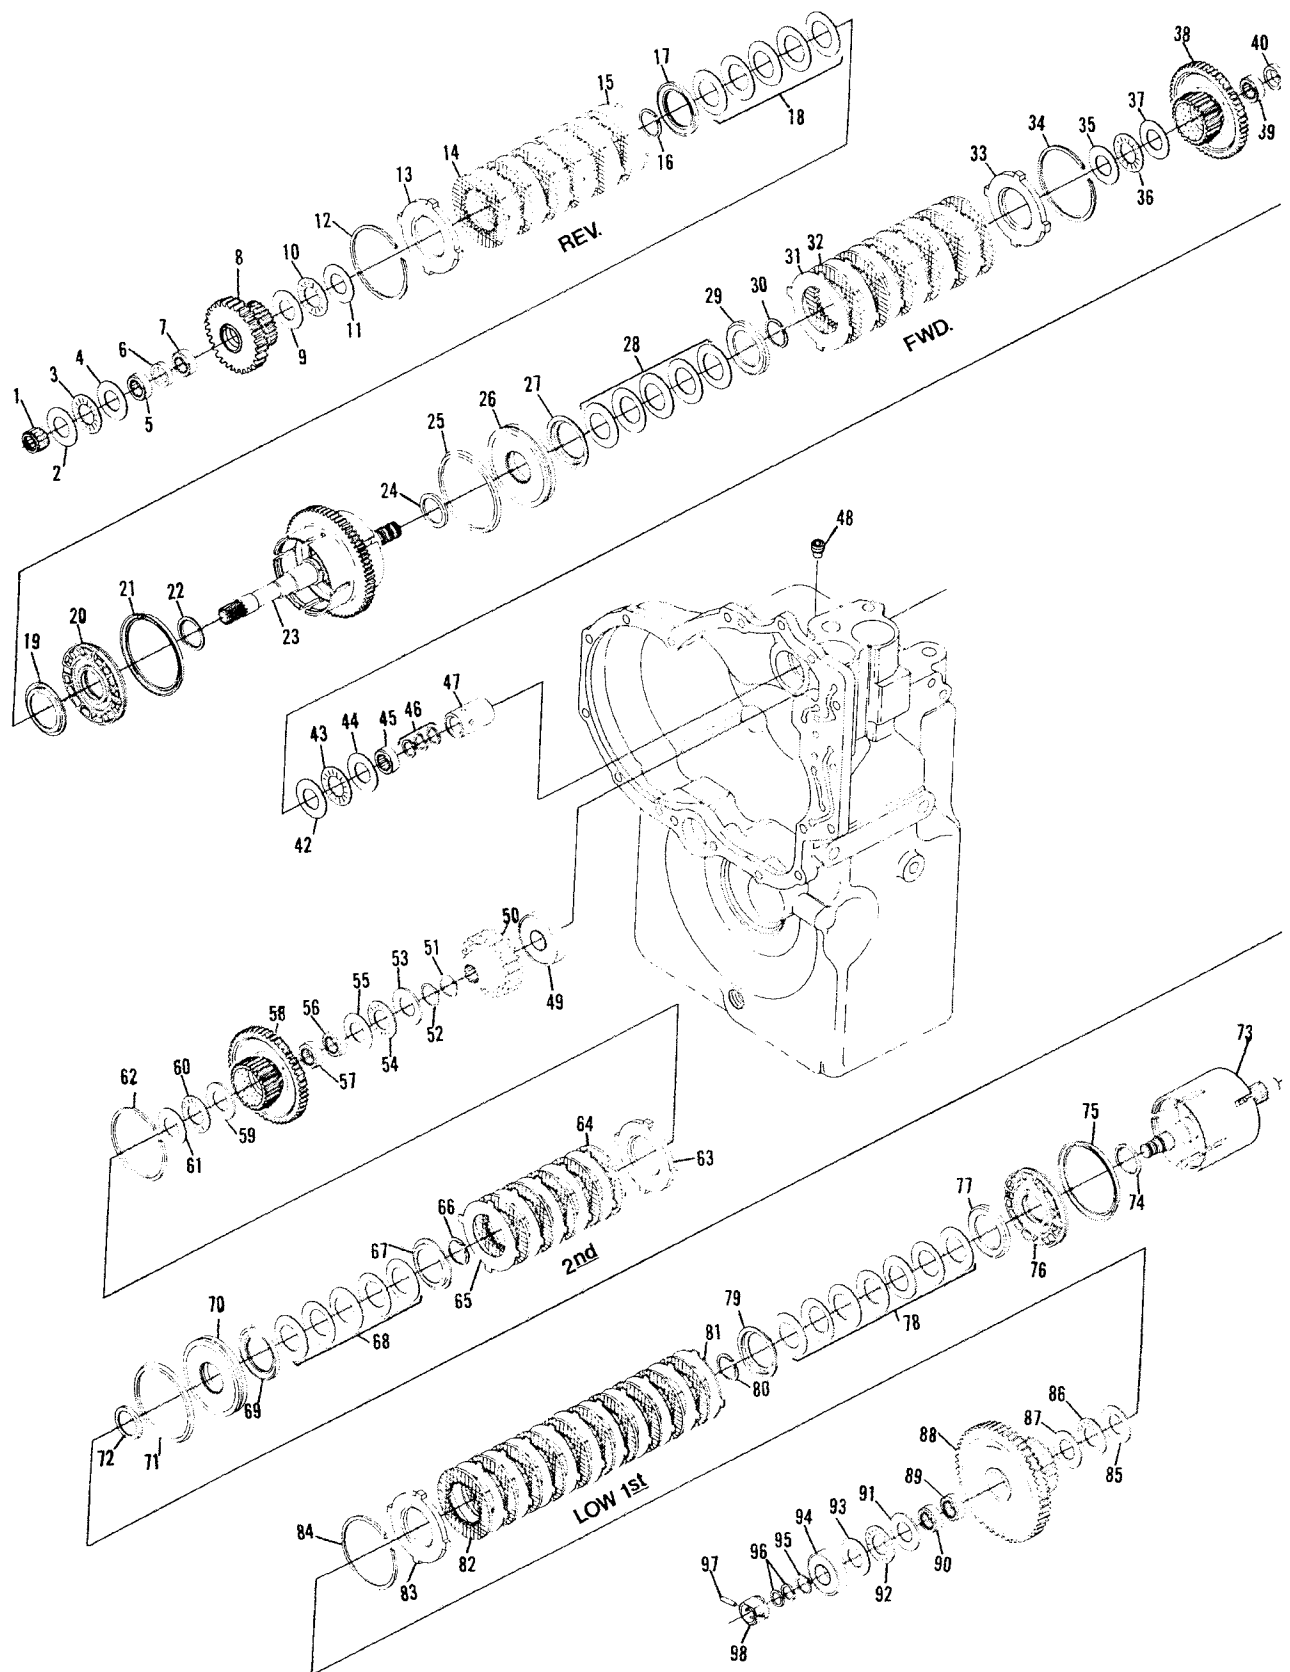


Figure C

T12000
FORWARD-REVERSE AND 1ST-2ND CLUTCH GROUP

ITEM	DESCRIPTION	QUANTITY	ITEM	DESCRIPTION	QUANTITY
1	Turbine Shaft Front Bearing	1	51	Gear Hub Snap Ring	1
2	Clutch Gear Thrust Washer	1	52	2nd Clutch Gear Hub Snap Ring	1
3	Clutch Gear Thrust Washer Bearing	1	53	Clutch Gear Thrust Washer	1
4	Clutch Gear Thrust Washer	1	54	Clutch Gear Thrust Washer Bearing	1
5	Bearing	1	55	Clutch Gear Thrust Washer	1
6	Spacer	1	56	Bearing	1
7	Bearing	1	57	Bearing	1
8	Reverse Clutch Gear	1	58	2nd Clutch Gear	1
9	Clutch Gear Thrust Washer	1	59	Clutch Gear Thrust Washer	1
10	Clutch Gear Thrust Washer Bearing	1	60	Clutch Gear Thrust Washer Bearing	1
11	Clutch Gear Thrust Washer	1	61	Clutch Gear Thrust Washer	1
12	End Plate Snap Ring	1	62	End Plate Snap Ring	1
13	End Plate	1	63	End Plate	1
14	Inner Disc	6	64	Inner Disc	5
15	Outer Disc	6	65	Outer Disc	5
16	Retainer Snap Ring	1	66	Retainer Snap Ring	1
17	Snap Ring Retainer	1	67	Snap Ring Retainer	1
18	Disc Spring	5	68	2nd Clutch Disc Spring	5
19	Clutch Piston Wear Plate	1	69	Clutch Piston Wear Plate	1
20	Clutch Piston	1	70	Clutch Piston	1
21	Clutch Piston Seal—Outer	1	71	Clutch Piston Seal—Outer	1
22	Clutch Piston Seal—Inner	1	72	Clutch Piston Seal—Inner	1
23	Turbine Shaft Drum and Plug Assembly ..	1	73	1st and 2nd Shaft, Drum, and Plug Assembly	1
24	Clutch Piston Seal—Inner	1	74	Clutch Piston Seal—Inner	1
25	Clutch Piston Seal—Outer	1	75	Clutch Piston Seal—Outer	1
26	Clutch Piston	1	76	Clutch Piston	1
27	Clutch Piston Wear Plate	1	77	Clutch Piston Wear Plate	1
28	Disc Spring	5	78	1st Clutch Disc Spring	7
29	Snap Ring Retainer	1	79	Snap Ring Retainer	1
30	Retainer Snap Ring	1	80	Retainer Snap Ring	1
31	Outer Disc	6	81	Outer Disc—1st Clutch	10
32	Inner Disc	6	82	Inner Disc—1st Clutch	10
33	End Plate	1	83	End Plate	1
34	End Plate Snap Ring	1	84	End Plate Snap Ring	1
35	Clutch Gear Thrust Washer	1	85	Clutch Gear Thrust Washer	1
36	Clutch Gear Thrust Washer Bearing	1	86	Clutch Gear Thrust Washer Bearing	1
37	Clutch Gear Thrust Washer	1	87	Clutch Gear Thrust Washer	1
38	Forward Clutch Gear	1	88	1st Clutch Gear	1
39	Bearing	1	89	Bearing	1
40	Spacer	1	90	Bearing	1
41	Bearing	1	91	Clutch Gear Thrust Washer	1
42	Clutch Gear Thrust Washer	1	92	Clutch Gear Thrust Washer Bearing	1
43	Clutch Gear Thrust Washer Bearing	1	93	Clutch Gear Thrust Washer	1
44	Clutch Gear Thrust Washer	1	94	Bearing and Seal Assembly	1
45	Turbine Shaft Rear Bearing	1	95	Bearing Retaining Snap Ring	1
46	Piston Ring	3	96	Piston Ring	2
47	Oil Distributor Sleeve	1	97	Sleeve Locating Screw	1
48	Retainer Screw	1	98	Oil Distributor Sleeve	1
49	Rear Bearing	1			
50	3rd Driven Gear	1			

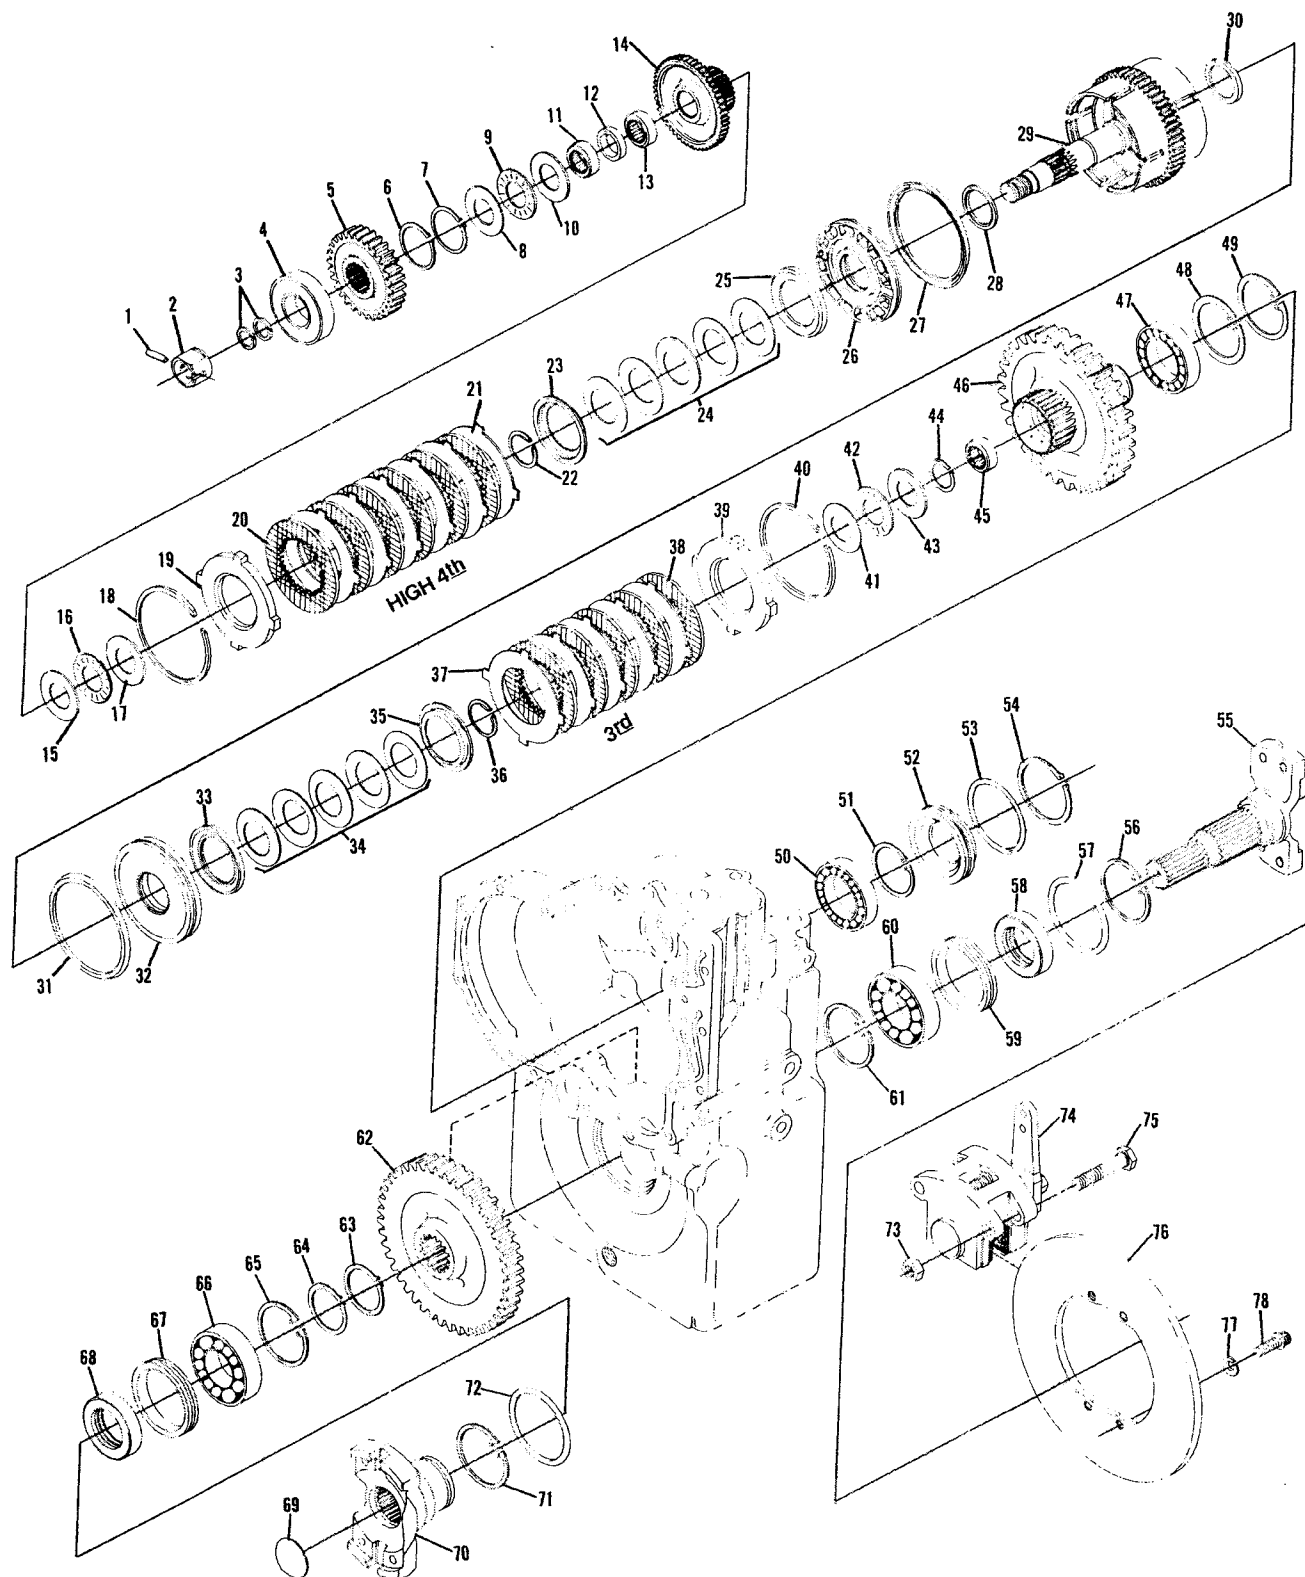


Figure D

T12000
HIGH — 3RD AND OUTPUT SHAFT GROUP

ITEM	DESCRIPTION	QUANTITY	ITEM	DESCRIPTION	QUANTITY
1	Sleeve Locating Screw	1	40	End Plate Snap Ring	1
2	Oil Distributor Sleeve	1	41	Clutch Gear Thrust Washer	1
3	Piston Ring	2	42	Clutch Gear Thrust Washer Bearing	1
4	Bearing and Seal Assembly	1	43	Clutch Gear Thrust Washer	1
5	1st Drive Gear	1	44	Thrust Washer Retaining Snap Ring	1
6	Gear Hub Snap Ring	1	45	3rd Clutch Gear Bearing	1
7*	Gear Hub Snap Ring	1	46	3rd Gear and Shaft	1
8*	Clutch Gear Thrust Washer	1	47	Rear Bearing	1
9*	Clutch Gear Thrust Washer Bearing	1	48	Rear Bearing Retaining Snap Ring	1
10*	Clutch Gear Thrust Washer	1	49	Output Shaft Bearing Snap Ring	1
11*	Bearing	1	50	Output Shaft Bearing	1
12*	Bearing Spacer	1	51	Output Shaft Bearing Retaining Snap Ring	1
13*	Bearing	1	52	Plug—Capped End	1
14*	4th Clutch Gear	1	53	Oil Seal Sleeve "O" Ring	1
15*	Clutch Gear Thrust Washer	1	54	Output Shaft Bearing Snap Ring	1
16*	Clutch Gear Thrust Washer Bearing	1	55	Output Shaft and Brake Flange	1
17*	Clutch Gear Thrust Washer	1	56	Output Shaft Bearing Snap Ring	1
18*	End Plate Snap Ring	1	57	Output Shaft Sleeve "O" Ring	1
19*	End Plate	1	58	Output Shaft Oil Seal	1
20*	Inner Disc	6	59	Oil Seal Sleeve	1
21*	Outer Disc	6	60	Output Shaft Bearing	1
22*	Retainer Snap Ring	1	61	Output Shaft Bearing Snap Ring	1
23*	Snap Ring Retainer	1	62	Output Shaft Gear	1
24*	Disc Spring	5	63	Gear Retaining Ring	1
25*	Clutch Piston Wear Plate	1	64	Flange Retaining Ring	1
26*	Clutch Piston and Ball Seat Assembly	1	65	Output Shaft Bearing Snap Ring	1
27*	Clutch Piston Outer Seal	1	66	Output Shaft Bearing	1
28*	Clutch Piston Inner Seal	1	67	Oil Seal Sleeve	1
29	Clutch, Drum, Shaft, and Plug Assembly (4 and 6 Speed Clutch Drum Shown)	1	68	Output Shaft Oil Seal	1
30	Clutch Piston Inner Seal	1	69	Flange Plug	1
31	Clutch Piston Outer Seal	1	70	Output Flange	1
32	Clutch Piston and Ball Seat Assembly	1	71	Output Shaft Bearing Snap Ring	1
33	Clutch Piston Wear Plate	1	72	Oil Seal Sleeve "O" Ring	1
34	Disc Spring	5	73	Caliper Assembly Capscrew Locking Nut ..	2
35	Snap Ring Retainer	1	74	Caliper Brake Assembly	1
36	Retainer Snap Ring	1	75	Caliper Assembly Mounting Capscrew	2
37	Outer Disc	5	76	Brake Disc	1
38	Inner Disc	5	77	Brake Disc Capscrew Lockwasher	4
39	End Plate	1	78	Brake Disc Capscrew	4

* Used in 4 and 6 speed only.

See Figure E for 3rd and output shaft with disconnect.

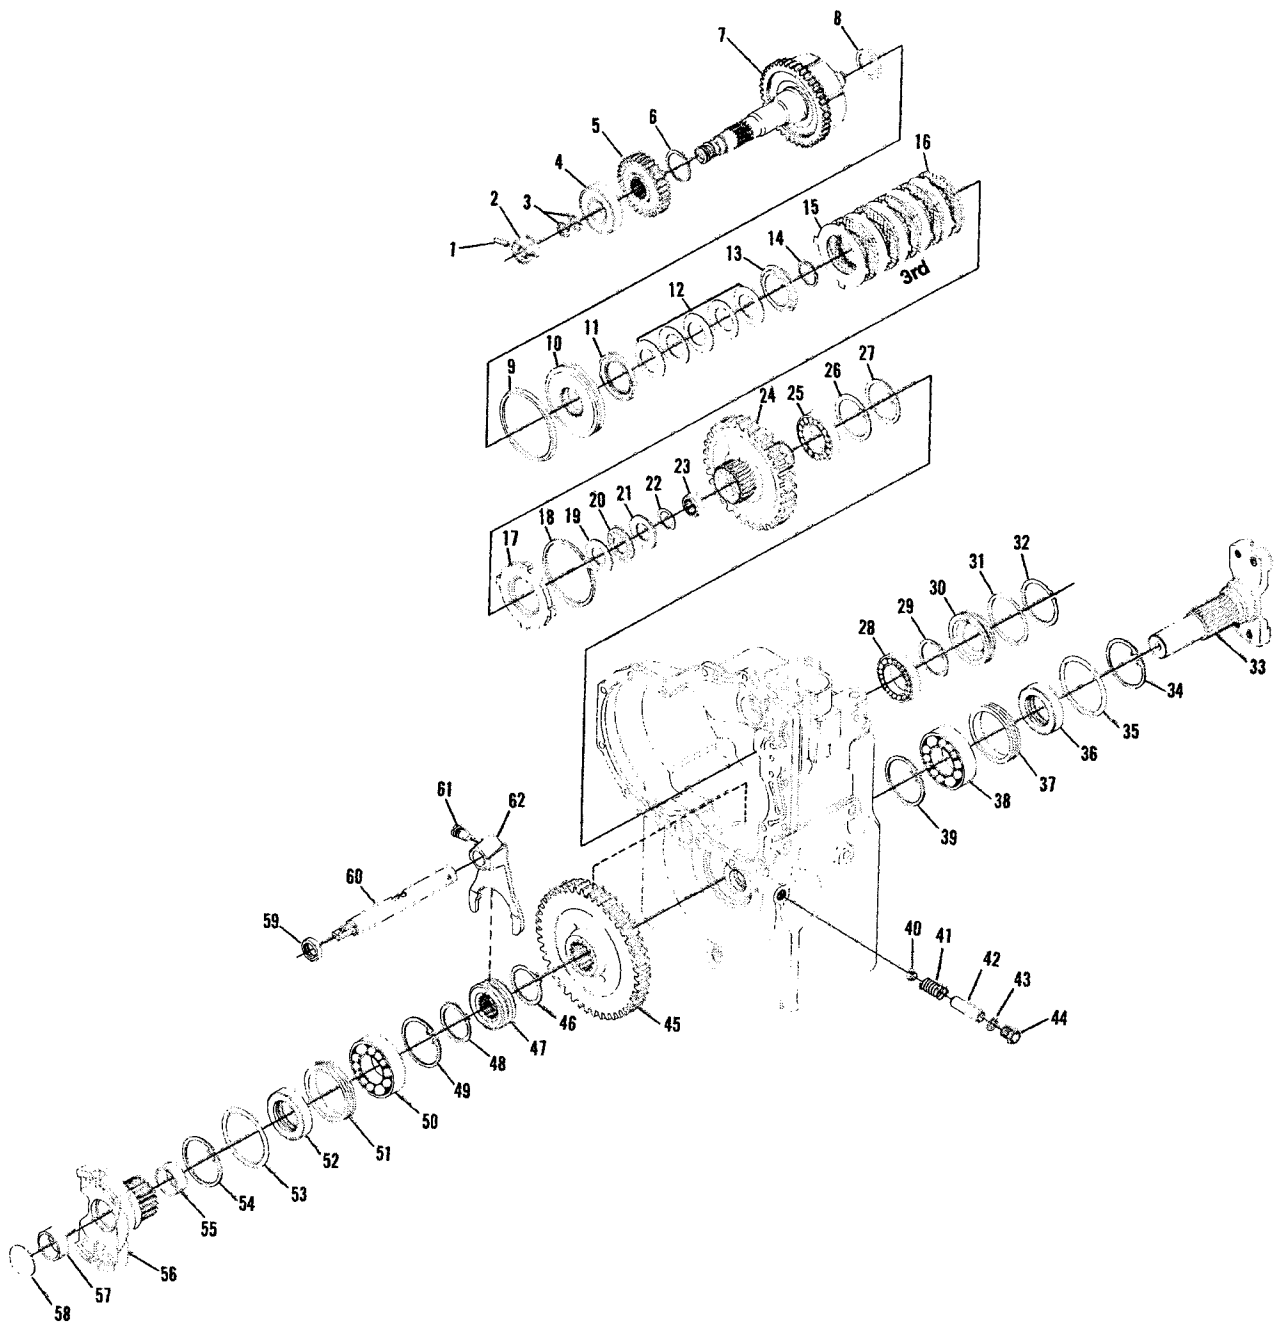


Figure E

T12000
3RD AND OUTPUT SHAFT GROUP WITH DISCONNECT

ITEM	DESCRIPTION	QUANTITY	ITEM	DESCRIPTION	QUANTITY
1	Sleeve Locating Screw	1	32	Output Shaft Bearing Snap Ring	1
2	Oil Distributor Sleeve	1	33	Output Shaft and Brake Flange	1
3	Piston Ring	2	34	Output Shaft Bearing "O" Ring	1
4	Bearing and Seal Assembly	1	35	Output Shaft Sleeve "O" Ring	1
5	1st Drive Gear	1	36	Output Shaft Oil Seal	1
6	Gear Hub Snap Ring	1	37	Oil Seal Sleeve	1
7	3rd Shaft, Drum, and Plug Assembly	1	38	Output Shaft Bearing	1
8	Clutch Piston Inner Seal	1	39	Output Shaft Bearing "O" Ring	1
9	Clutch Piston Outer Seal	1	40	Disconnect Detent Ball	1
10	Clutch Piston and Ball Seat Assembly	1	41	Disconnect Detent Spring	1
11	Clutch Piston Wear Plate	1	42	Disconnect Overshift Stop Pin	1
12	Disc Washer (Spring)	5	43	Detent Plug "O" Ring	1
13	Snap Ring Retainer	1	44	Disconnect Detent Plug	1
14	Retainer Snap Ring	1	45	Output Shaft Gear	1
15	Outer Disc	5	46	Gear Retaining Ring	1
16	Inner Disc	5	47	Disconnect Shift Hub	1
17	End Plate	1	48	Flange Retaining Ring	1
18	End Plate Snap Ring	1	49	Output Shaft Bearing Snap Ring	1
19	Clutch Gear Thrust Washer	1	50	Output Shaft Bearing	1
20	Clutch Gear Thrust Washer Bearing	1	51	Oil Seal Sleeve	1
21	Clutch Gear Thrust Washer	1	52	Output Shaft Oil Seal	1
22	Thrust Washer Retaining Snap Ring	1	53	Oil Seal Sleeve "O" Ring	1
23	3rd Clutch Gear Bearing	1	54	Output Shaft Bearing Snap Ring	1
24	3rd Gear and Shaft	1	55	Bushing	1
25	Rear Bearing	1	56	Output Flange	1
26	Rear Bearing Retaining Snap Ring	1	57	Bushing	1
27	Output Shaft Bearing Snap Ring	1	58	Flange Plug	1
28	Output Shaft Bearing	1	59	Disconnect Shift Fork Rod Oil Seal	1
29	Output Shaft Bearing Retaining Snap Ring ..	1	60	Disconnect Shift Fork Rod	1
30	Plug—Capped End	1	61	Disconnect Shift Fork Lockscrew	1
31	Oil Seal Sleeve "O" Ring	1	62	Disconnect Shift Fork	1

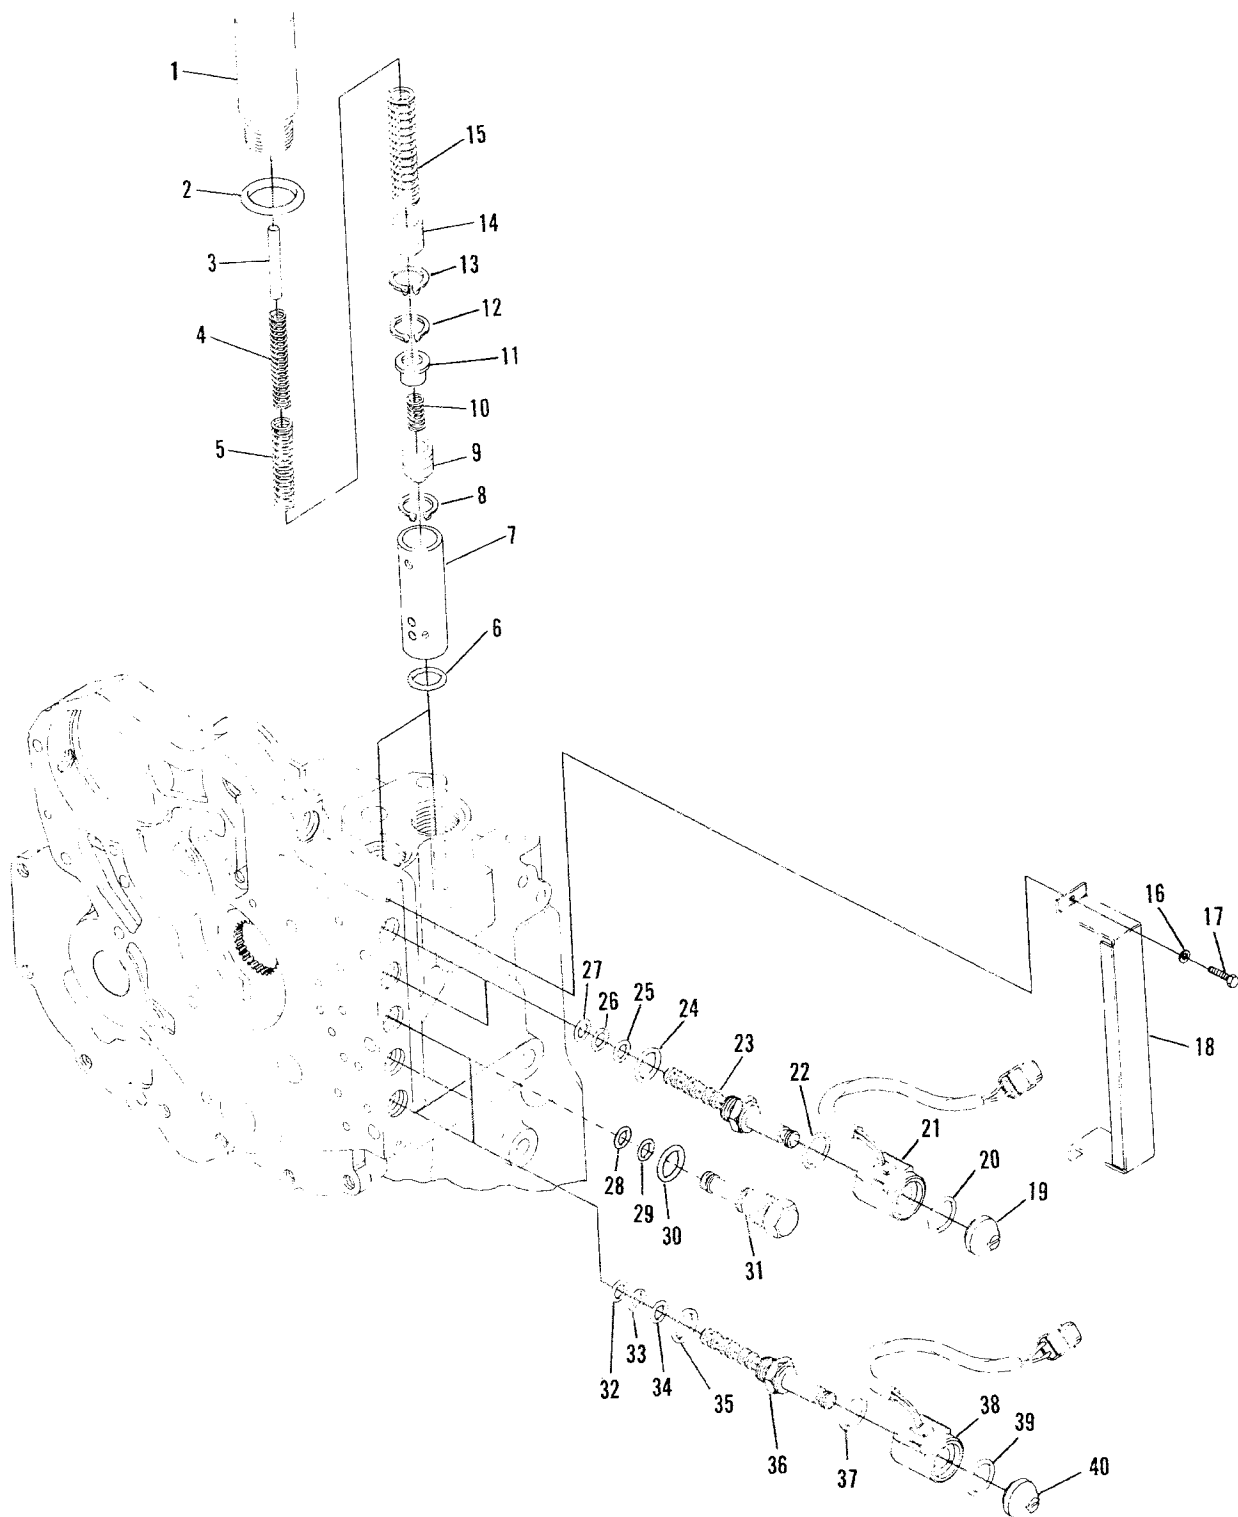


Figure F

**T12000
CONTROL VALVE GROUP**

ITEM	DESCRIPTION	QUANTITY	ITEM	DESCRIPTION	QUANTITY
1	Modulator Valve Housing	2	22	Coil to Cartridge "O" Ring	2
2	Modulator Housing "O" Ring	2	23	Valve Cartridge, 4 Way, Incl. Items 24, 25, 26, 27	2
3	Stop Pin	2	24	Cartridge "O" Ring	2
4	Spring — Inner	2	25	Cartridge "O" Ring	2
5	Spring — Middle	2	26	Cartridge "O" Ring	2
6	Sleeve "O" Ring	2	27	Cartridge "O" Ring	2
7	Modulation Housing Sleeve	2	28	Cartridge "O" Ring	1
8	Modulation Housing Sleeve Snap Ring ...	2	29	Cartridge "O" Ring	1
9	Regulator Spool	2	30	Cartridge "O" Ring	1
10	Spring	2	31	Solenoid Bore Plug, Used at Fwd.-High and Low, Incl. Items 28, 29, 30. Bore Plug Used with 3 Speed Only	1
11	Spring Retainer	2	32	Cartridge "O" Ring	2
12	Spring Retainer Snap Ring	2	33	Cartridge "O" Ring	2
13	Accumulator Spool Snap Ring	2	34	Cartridge "O" Ring	2
14	Accumulator Spool	2	35	Cartridge "O" Ring	2
15	Spring — Outer	2	36	Valve Cartridge, 4 Way, Incl. Items 31, 32, 33, 34	2
16	Cover Screw Lockwasher	2	37	Coil to Cartridge "O" Ring	2
17	Cover Screw	2	38	Solenoid Coil	2
18	Protective Cover	1	39	Nut to Coil "O" Ring	2
19	Valve Cartridge Retainer Nut	2	40	Valve Cartridge Retainer Nut	2
20	Nut to Coil "O" Ring	2			
21	Solenoid Coil	2			

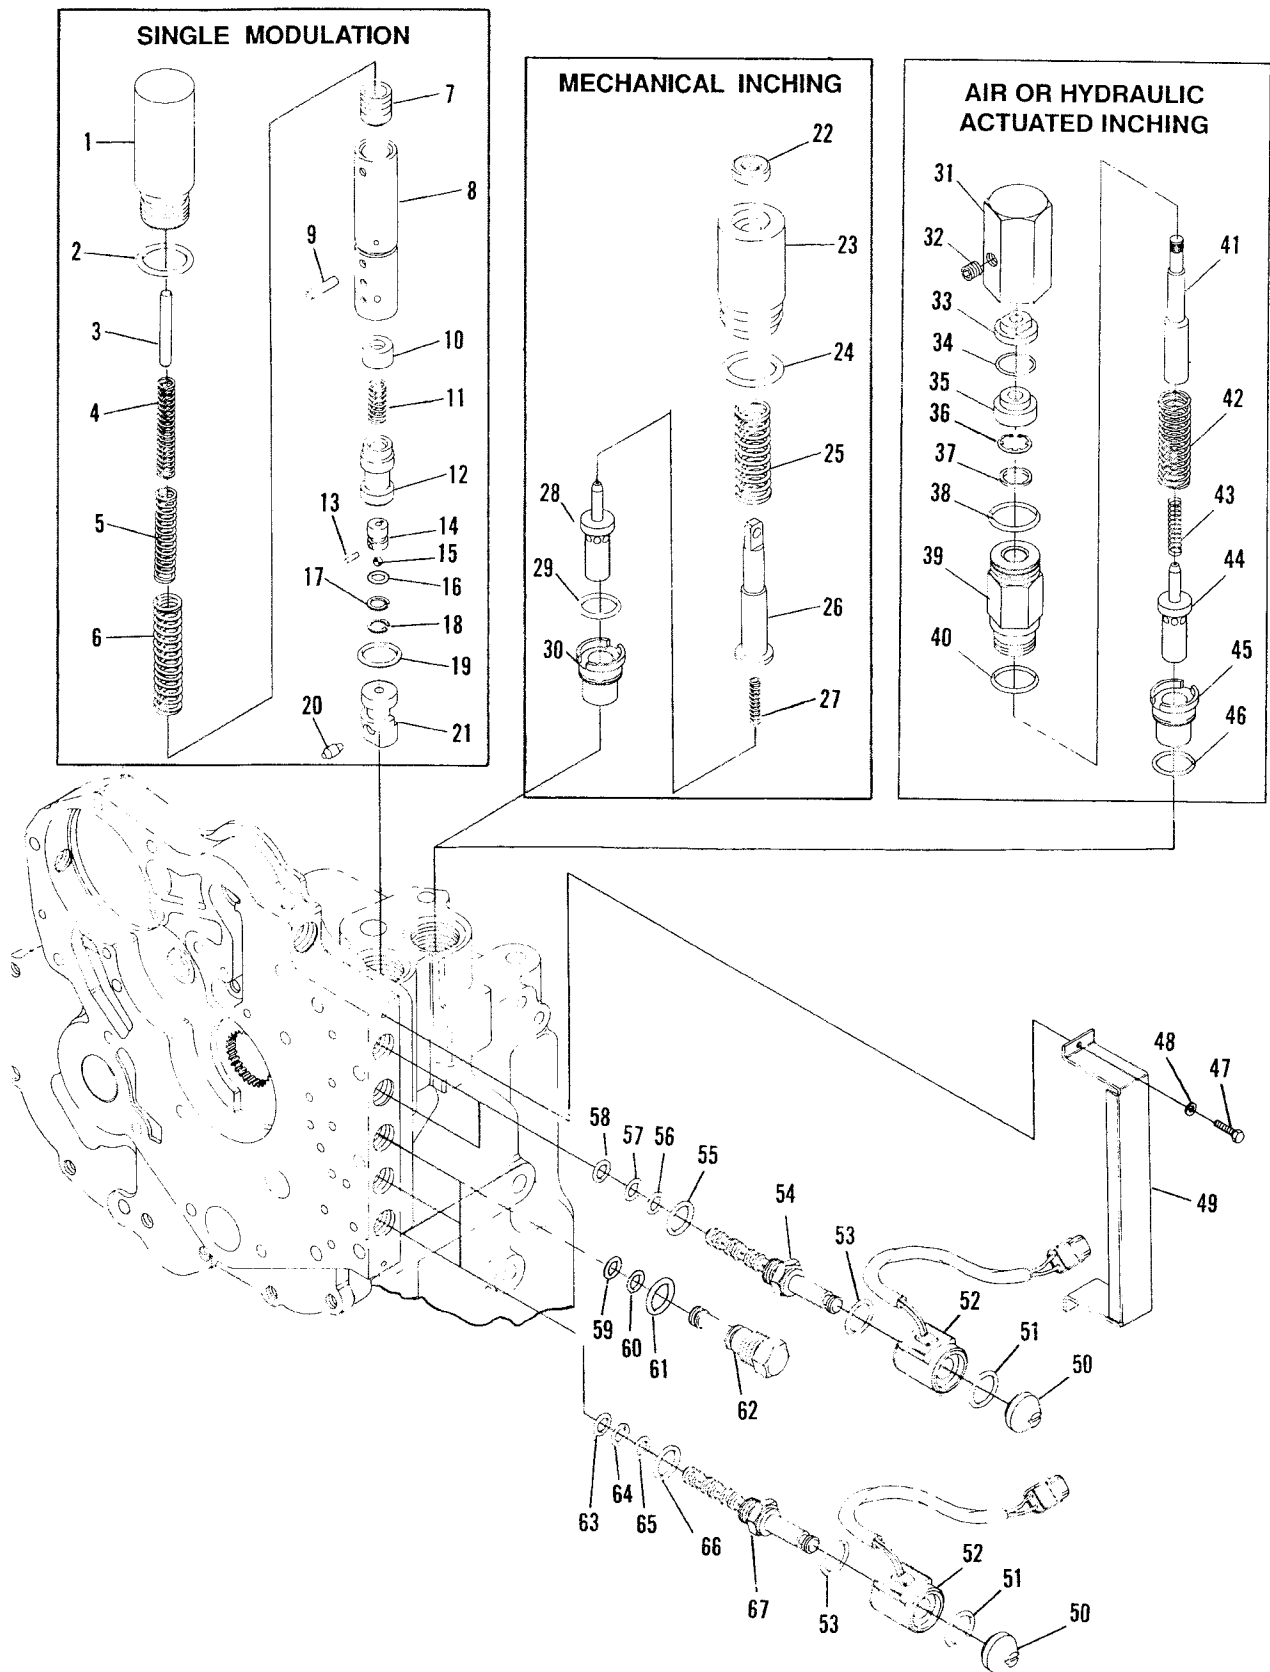


Figure G

T12000
CONTROL VALVE GROUP WITH SINGLE MODULATION, INCHING

ITEM	DESCRIPTION	QUANTITY	ITEM	DESCRIPTION	QUANTITY
1	Modulator Valve Housing	1	35	Hydraulic Inching Lower Piston	1
2	Modulator Housing "O" Ring	1	36	Hydraulic Inching Body Snap Ring	1
3	Stop Pin	1	37	Hydraulic Inching Body Seal	1
4	Spring — Inner	1	38	Hydraulic Inching "O" Ring	1
5	Spring — Middle	1	39	Hydraulic Inching Body	1
6	Spring — Outer	1	40	Hydraulic Inching Body to Case "O" Ring	1
7	Accumulator Spool	1	41	Hydraulic Inching Actuator Rod	1
8	Modulation Housing Sleeve	1	42	Hydraulic Inching Return Spring	1
9	Pin	1	43	Hydraulic Inching Regulator Spring	1
10	Regulator Spool Stop	1	44	Hydraulic Inching Spool	1
11	Spring	1	45	Hydraulic Inching Sleeve	1
12	Regulator Spool	1	46	Hydraulic Inching "O" Ring	1
13	Pin	1	47	Cover Screw	2
14	Regulator Spool Sleeve	1	48	Cover Screw Lockwasher	2
15	Ball	1	49	Protective Cover	1
16	Spool Sleeve "O" Ring	1	50	Valve Cartridge Retainer Nut	4
17	Snap Ring	1	51	Nut to Coil "O" Ring	4
18	Snap Ring	1	52	Solenoid Coil	4
19	Sleeve "O" Ring	1	53	Coil to Cartridge "O" Ring	4
20	Shuttle Spool	1	54	Valve Cartridge, 4 Way, Incl. Items 55, 56, 57, 58	2
21	Shuttle Sleeve	1	55	Cartridge "O" Ring	2
22	Oil Seal	1	56	Cartridge "O" Ring	2
23	Inching Housing	1	57	Cartridge "O" Ring	2
24	Inching Housing "O" Ring	1	58	Cartridge "O" Ring	2
25	Inching Return Spring	1	59	Cartridge "O" Ring	1
26	Inching Actuator Rod	1	60	Cartridge "O" Ring	1
27	Inching Regulator Spring	1	61	Cartridge "O" Ring	1
28	Inching Spool	1	62	Solenoid Bore Plug (Used with 3 Speed Only)	1
29	Inching Sleeve "O" Ring	1	63	Cartridge "O" Ring	2
30	Inching Sleeve	1	64	Cartridge "O" Ring	2
31	Hydraulic Inching Cover	1	65	Cartridge "O" Ring	2
32	Hydraulic Inching Cover Plug	3	66	Cartridge "O" Ring	2
33	Hydraulic Inching Upper Piston	1	67	Valve Cartridge, 4 Way, Incl. Items 63, 64, 65, 66	2
34	Hydraulic Inching Upper Piston Seal	1			

4 - 6 SPEED


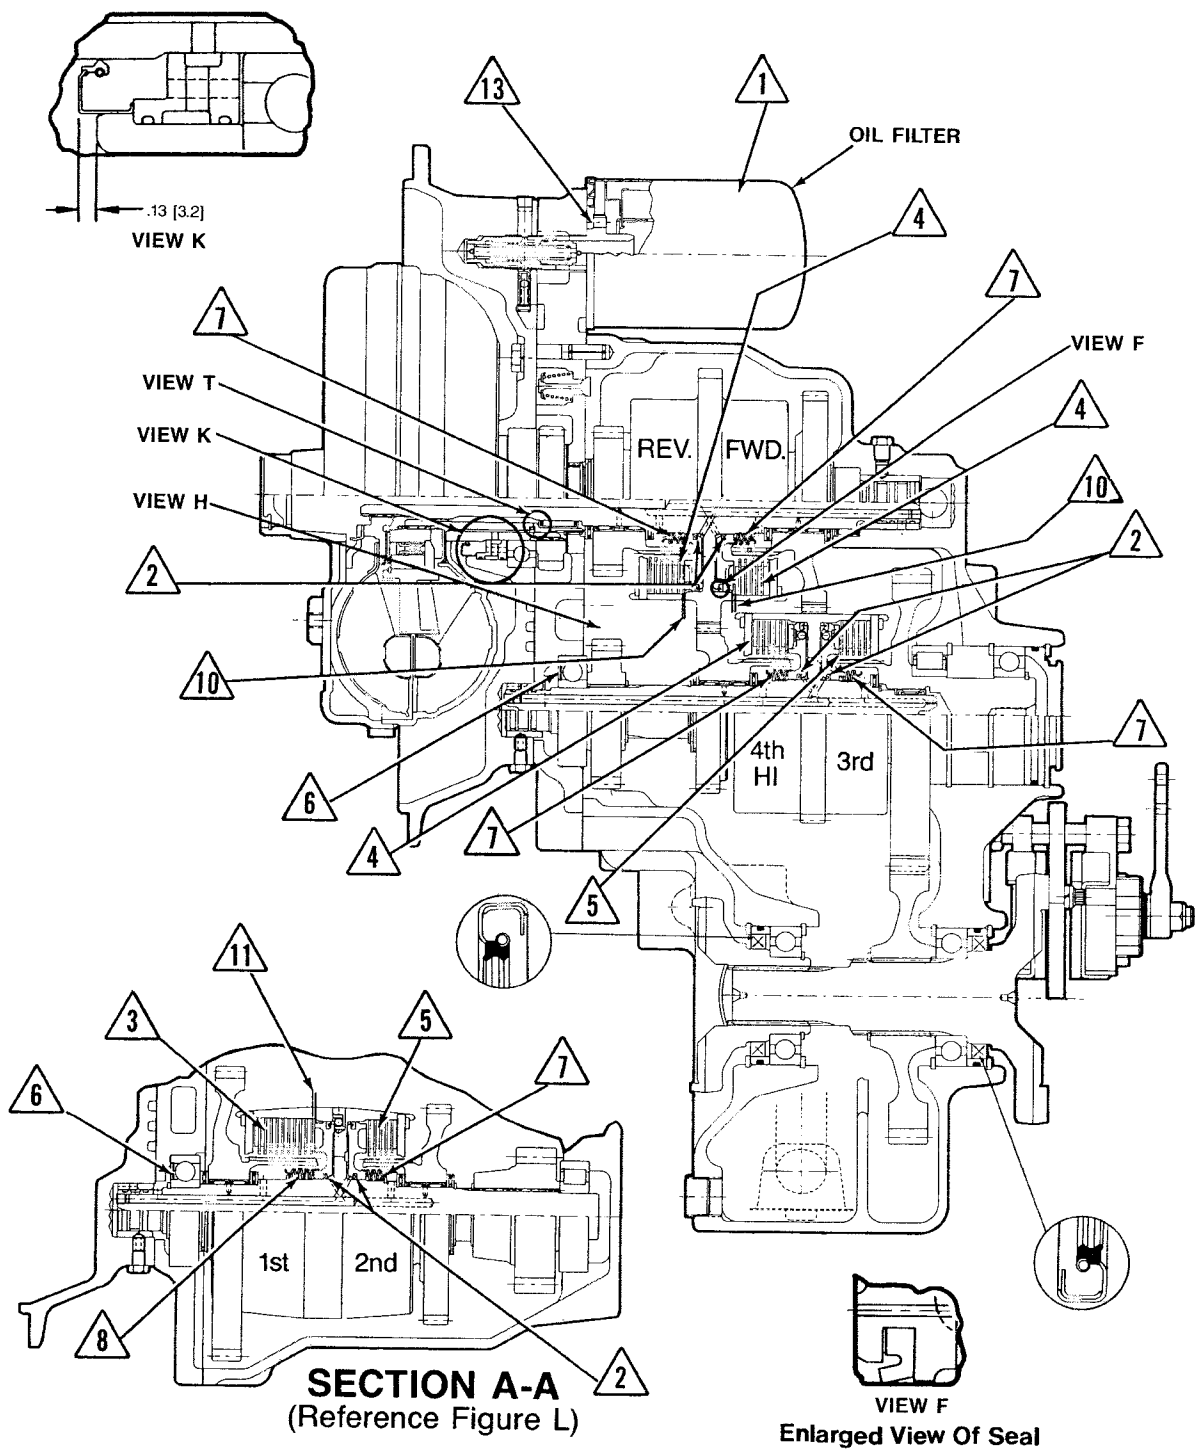


Figure H

A technical diagram of a piston ring assembly. On the left, a circular cross-section of a piston is shown with a rectangular piston ring seated in a groove. An arrow points from the word "EXPANDER" to a small rectangular component inside the ring. Another arrow points from the words "PISTON RING" to the outer ring itself. To the right of the piston are two separate views of the piston ring: a curved, semi-circular cross-section and a straight, rectangular cross-section, both showing internal segments and grooves.

Figure 1

- 1 Assemble oil filter and tighten to 20-25 lbf-ft [27-34 N·m].
- 2 Teflon seals must be sized prior to assembly.
- 3 10 outer steel plates — 10 inner plates — Alternately assemble, starting with outer steel plate.
- 4 6 outer steel plates — 6 inner plates — Alternately assembly, starting with outer steel plate.
- 5 5 outer steel plates — 5 inner plates — Alternately assembly, starting with outer steel plate.
- 6 Shield bearing — assembly with shield as shown.
- 7 Fwd. Rev. 2nd and 3rd, clutch return disc springs. Concave side of first disc spring to be placed against clutch piston wear sleeve. Remaining four springs to be stacked alternately as shown.



- 8 Low clutch return disc springs concave side of first disc spring to be placed against clutch piston wear sleeve. Remaining six springs to be stacked alternately as shown.



- 10 Clearance between clutch piston and steel separator plate to be .048-.108 [1.22-2.74]. If over .108 [2.74] clearance, add one steel outer disc under end plate.
- 11 Clearance between clutch piston and steel separator plate to be .080-.135 [2.03-3.43]. If over .135 [3.43] clearance, add one steel outer disc under end plate.
- 13 Tighten regulator sleeve to 45-50 lbf-ft [61-68 N·m].
- 14 Use solenoid bore plug in middle position for 3-speed version only.
- 15 Solenoid cartridge to be assembled and tightened to 16-20 lbf-ft [22-27 N·m].
- 16 Assemble speed sensor adjusting bushing using Loctite No. 262 or No. 270 and stake threaded area three places equally spaced.
- 19 M10 x 1.17 - 1.20.
- 20 M10 x 2.32 - 2.4.
- 21 Use 5/16-18 x 5.00 screw.
- 22 Use 5/16-18 x 3.500 screw.

- 23 Use 3/8-16 x 5.00 screw.
- 24 Use 5/16-18 x 3.250 screw.
- 25 Use 5/16-18 x 2.00 screw.
- 26 Use 3/8-18 x 3.250 screw.
- 27 Use 5/16-24 nut.
- 28 Use 5/16-24 nut.
- 29 Use 3/8-24 nut.
- 30 Tighten all cartridge nuts to 4-5 lbf-ft [5-7 N·m].

ASSEMBLY NOTES:

Use Permatex and Loctite only where specified.

All lead in chamfers for oil seals, piston rings, and "O" rings must be smooth and free from burrs. Inspect before assembly.

Lubricate all piston ring grooves and "O" rings with oil before assembly.

Apply a thin coat of grease between seal lips on lip type seals prior to assembly.

Apply a thin coat of Permatex No. 2 or Loctite No. 641 to O.D. of all oil seals before assembly.

Apply a thin coat of Loctite No. 592 or No. 506 Dryseal to all pipe plugs.

After assembly of parts using Loctite or Permatex, there must not be any free or excess material which might enter the oil circuit.


19 & 20 Clean mounting surfaces and tapped holes with solvent. Dry thoroughly, being certain tapped holes are dry and clean. Install components and special self-locking screws. Tighten screws to proper torque per chart.

NOTE:

Assembly of components must be completed within a 15-minute period from start of screw installation. The special screw is to be used for one installation only. If the screw is removed for any reason, it must be replaced. The epoxy left in the tapped holes must be removed with the proper tap and cleaned with solvent. Dry holes thoroughly and use a new screw for reinstallation.

If special capscrews are not available, clean epoxy from threads and dry thoroughly. Apply Loctite #262 thread locker to threads. Install capscrews in the proper locations and tighten to specified torque (See Torque Chart).

Figure J

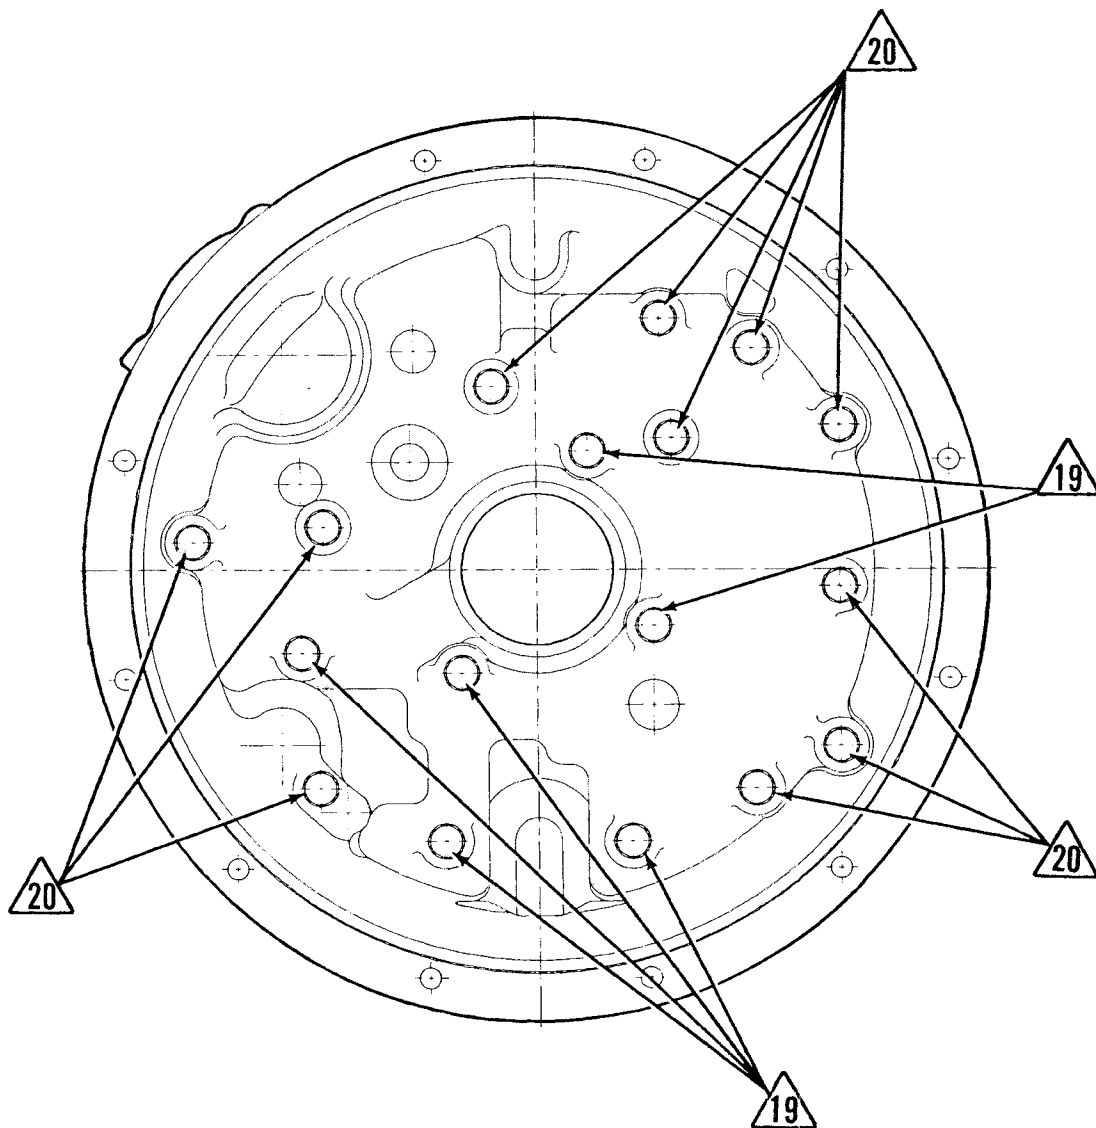

TORQUE SPECIFICATION FOR LUBRICATED OR PLATED SCREWS AND NUTS				
NOMINAL SIZE	GRADE 8.8 or 9.8		GRADE 10.9	
	COARSE THREAD		COARSE THREAD	
	lbf·ft	[N·m]	lbf·ft	[N·m]
M10	30-37	[40-50]	44-48	[60-65]
M12	50-55	[65-75]	74-81	[100-110]

PIPE PLUG TORQUE CHART		
THREAD NPTF	TORQUE	
	lbf·ft	[N·m]
1/16-27	5-7	[7-9]
1/8-27	7-10	[9-14]
1/4-18	15-20	[20-27]
3/8-18	25-30	[34-41]
1/2-14	30-35	[41-47]
3/4-10	40-45	[54-61]

PERMANENT PLUG METRIC		
THREAD SIZE	TORQUE	
	lbf·ft	[N·m]
M18 x 1.5 6H	25-30	[34-41]
M26 x 1.5 6H	45-50	[61-68]


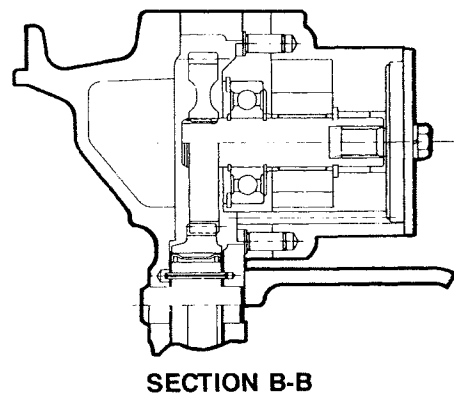


Figure K



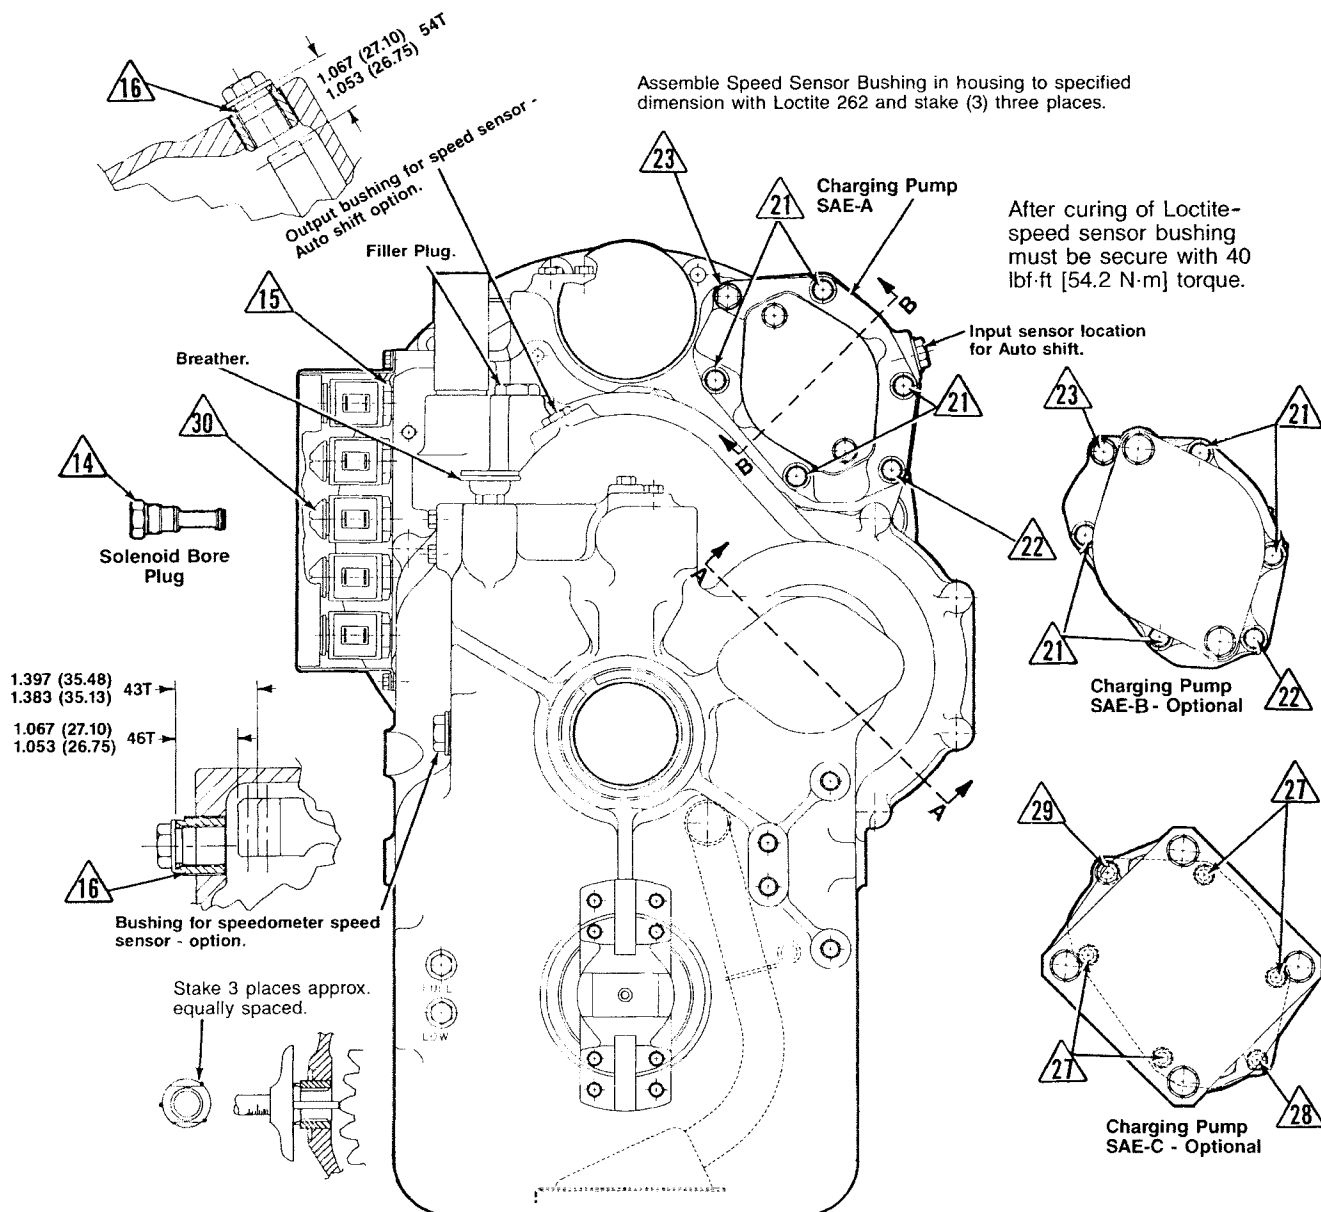

TORQUE SPECIFICATION FOR LUBRICATED OR PLATED SCREWS AND NUTS								
NOMINAL SIZE	GRADE 5 				GRADE 8 			
	FINE THREAD		COARSE THREAD		FINE THREAD		COARSE THREAD	
	lbf-ft	[N·m]	lbf-ft	[N·m]	lbf-ft	[N·m]	lbf-ft	[N·m]
.2500	9-11	[12-15]	8-10	[11-14]	11-13	[15-18]	9-11	[12-15]
.3125	16-20	[22-27]	12-16	[16-22]	28-32	[38-43]	26-30	[35-41]
.3750	26-29	[35-39]	23-25	[31-34]	37-41	[50-56]	33-36	[45-49]
.4375	41-45	[56-61]	37-41	[50-56]	58-64	[79-87]	52-57	[71-77]
.5000	64-70	[87-95]	57-63	[77-85]	90-99	[122-134]	80-88	[108-119]
.5625	91-100	[123-136]	82-90	[111-122]	128-141	[174-191]	115-127	[156-172]
.6250	128-141	[174-191]	113-124	[153-168]	180-198	[224-268]	159-175	[216-237]
.7500	223-245	[302-332]	200-220	[271-298]	315-347	[427-470]	282-310	[382-420]

Figure L

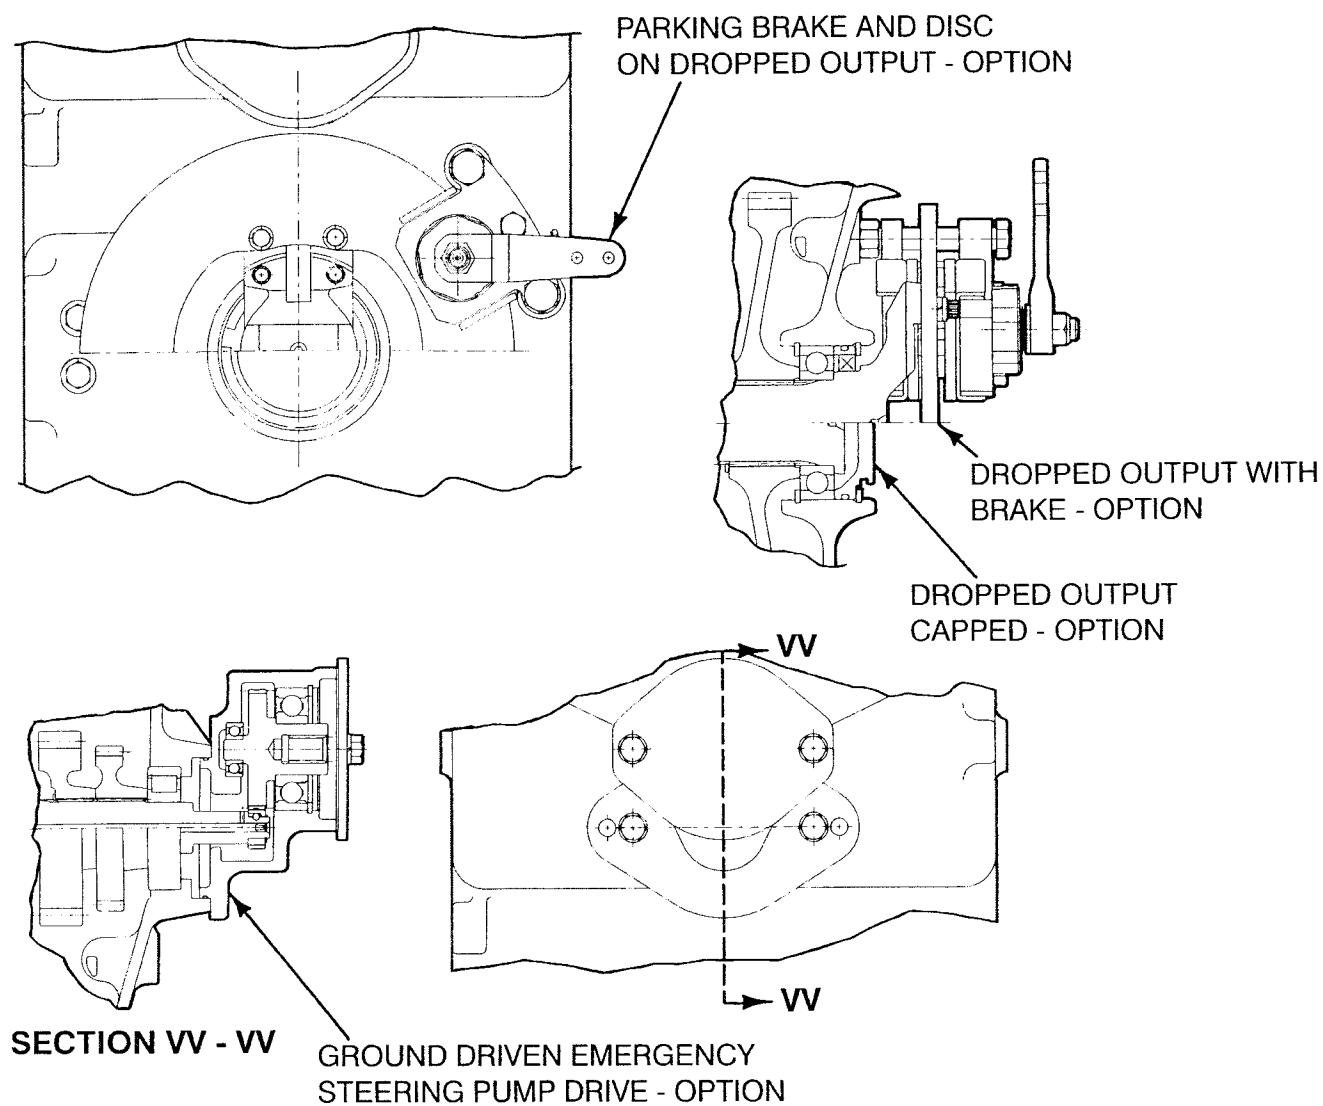


Figure M

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There is no text or other markings on the paper.

MAINTENANCE AND SERVICE

The instructions contained herein cover the disassembly and reassembly of the transmission in a sequence that would normally be followed after the unit has been removed from the machine and is to be completely overhauled. It must also be understood that this is a basic T12000 intermediate drop output transmission with many options. The units are very similar to trouble-

shoot, disassemble, repair, and reassemble.

Caution: Cleanliness is of extreme importance and an absolute must in repair and overhaul of this unit. Before attempting any repairs, the exterior of the unit must be thoroughly cleaned to prevent the possibility of dirt and foreign matter entering the mechanism.

DISASSEMBLY

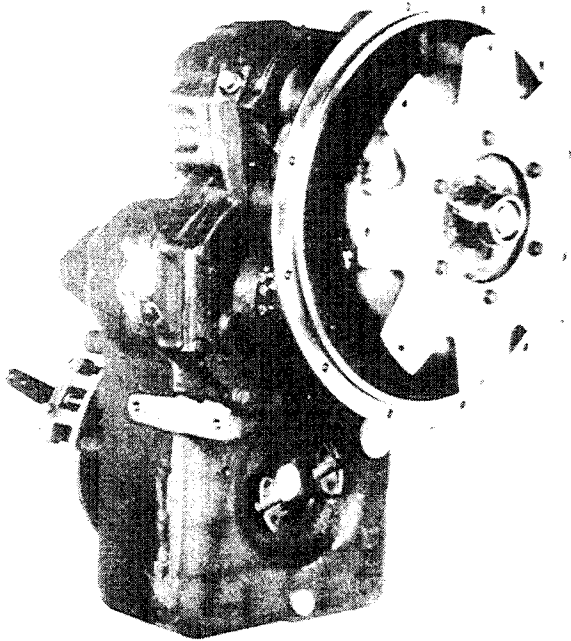


Figure 1

Side view of T12000 intermediate drop transmission.

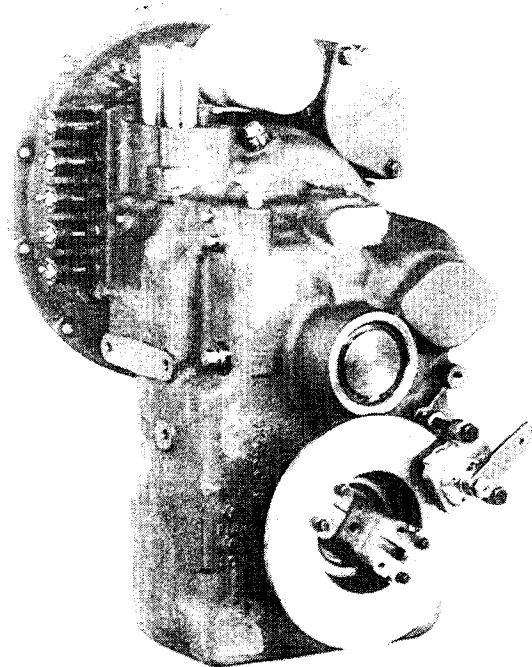


Figure 2

Rear view showing disc brake and electric control.

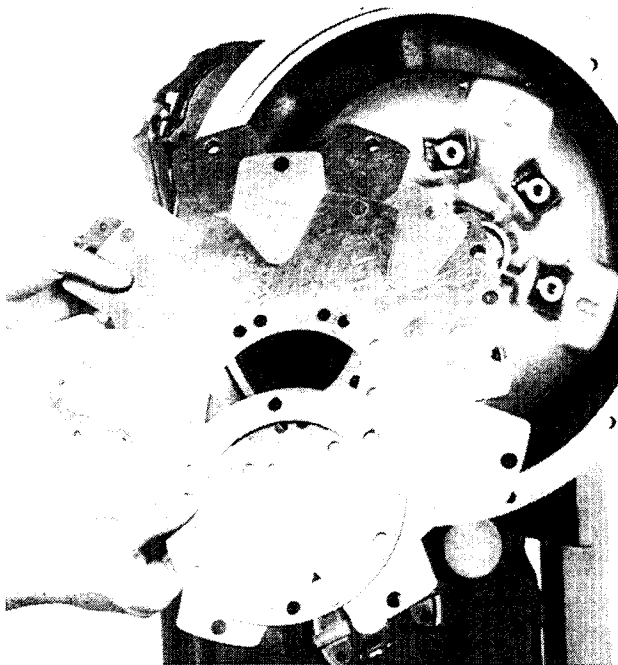


Figure 3

Remove drive plate attaching capscrews and washers. Remove drive plate and backing ring.

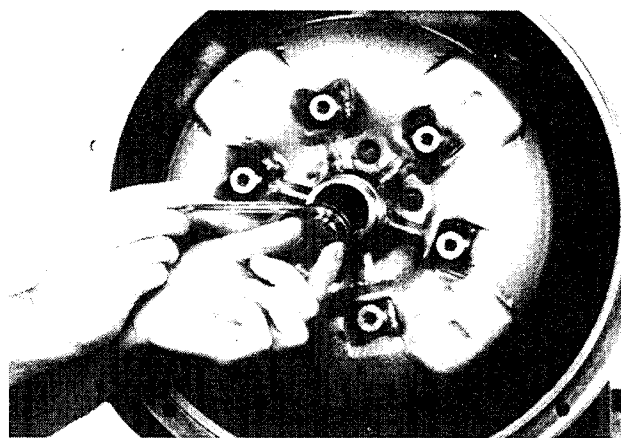


Figure 5

Remove plug and "O" ring.

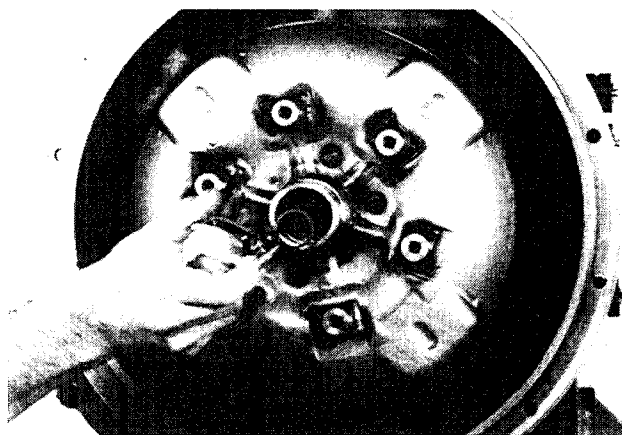


Figure 6

Remove torque converter to turbine shaft retainer ring.

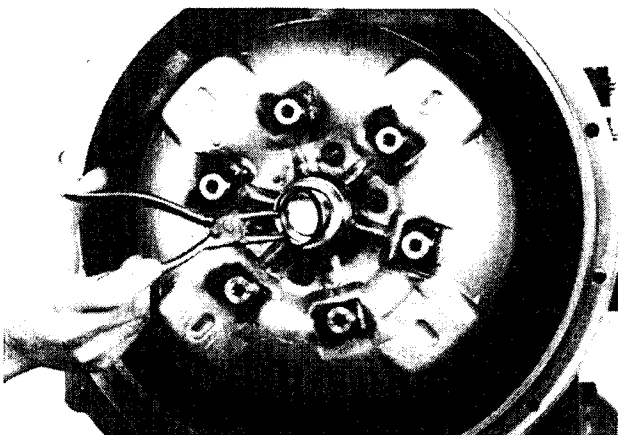


Figure 4

Remove torque converter plug retainer ring.

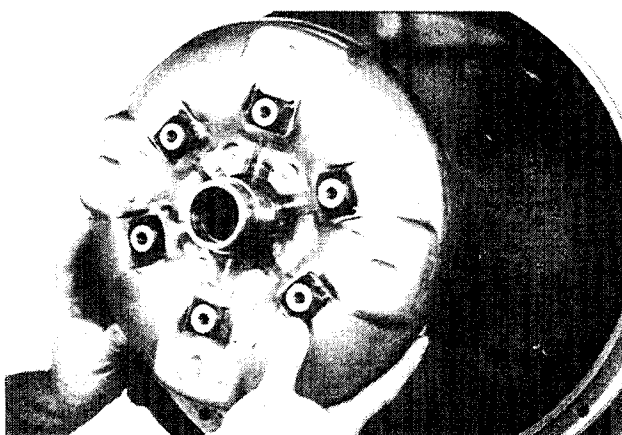


Figure 7

Remove torque converter assembly.

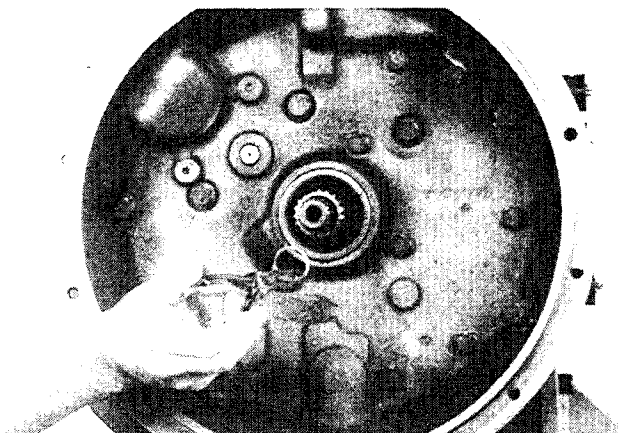


Figure 8

Remove torque converter to shaft locating ring.

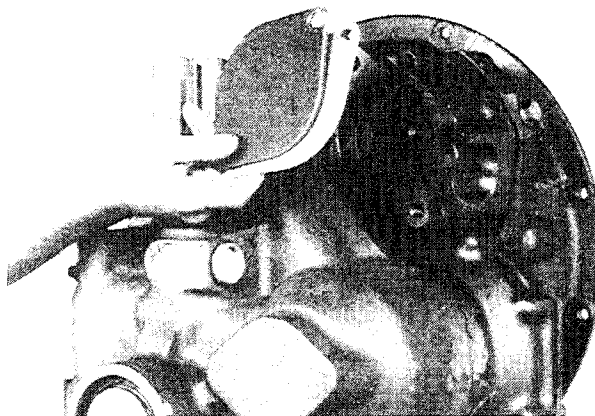


Figure 11

Remove charging pump permanent pump hole cover. (Not used when auxiliary pump is used.)

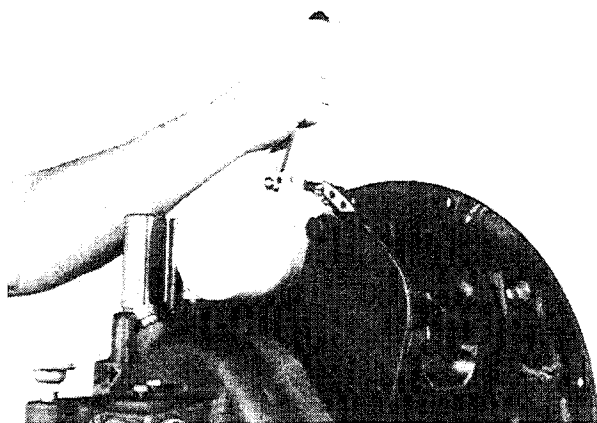


Figure 9

Remove filter assembly.

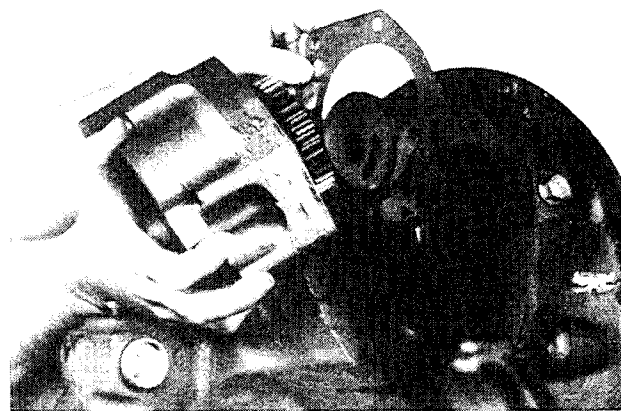


Figure 12

Remove pump mounting bolts and washers. Remove pump and gasket.

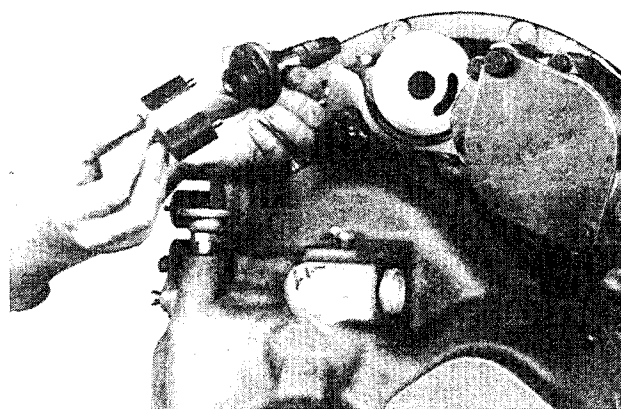


Figure 10

Remove pressure regulator and regulator sleeve.
NOTE: Special tool can be fabricated. (See Figure 407a.)

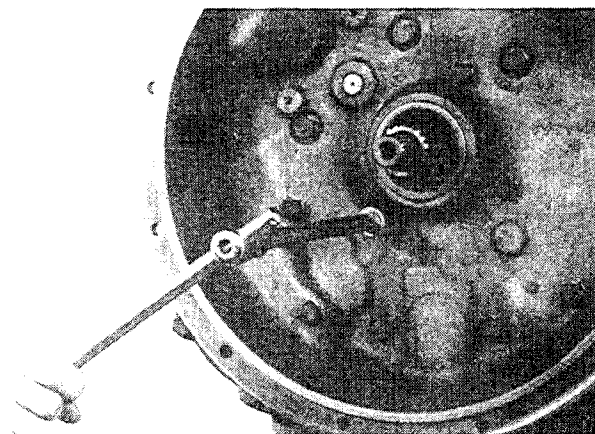


Figure 13

Remove converter housing to transmission case bolts and washers.

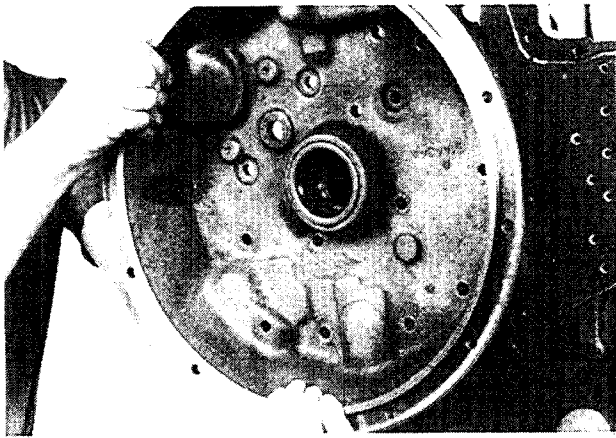


Figure 14
Remove converter housing and gasket.

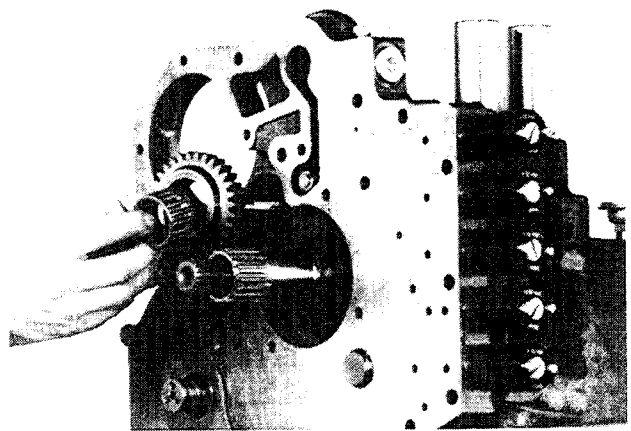


Figure 17
Remove pump drive gear and bearing.

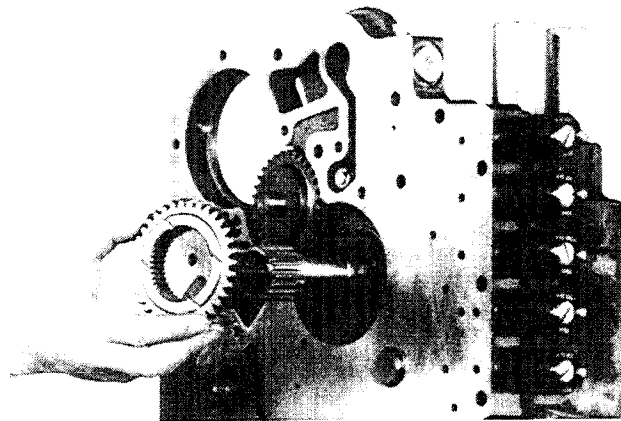


Figure 15
Remove impeller hub gear.

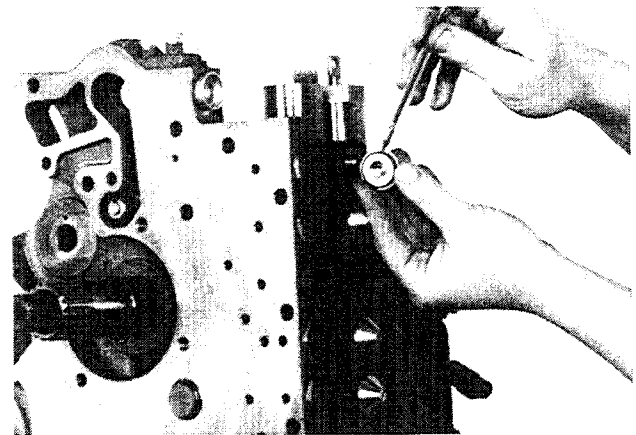


Figure 18
Remove solenoid valve cartridge retainer nut and "O" ring.

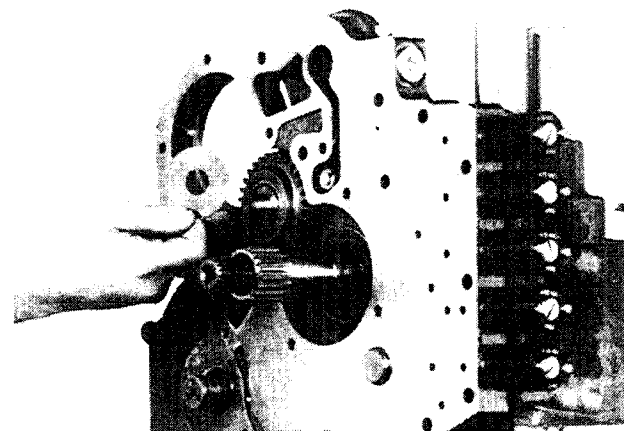


Figure 16
Remove pump drive idler gear washer.

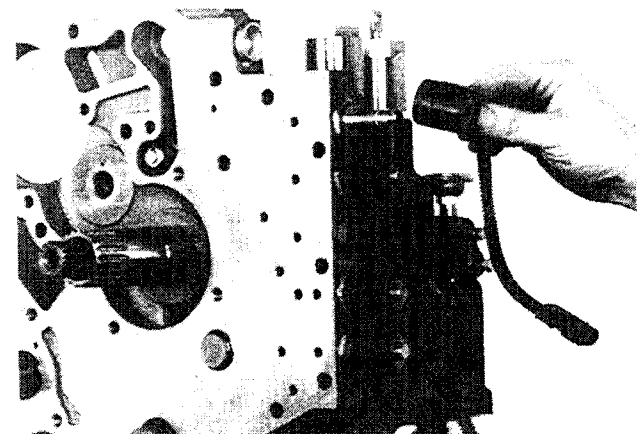


Figure 19
Remove solenoid coil and "O" ring.

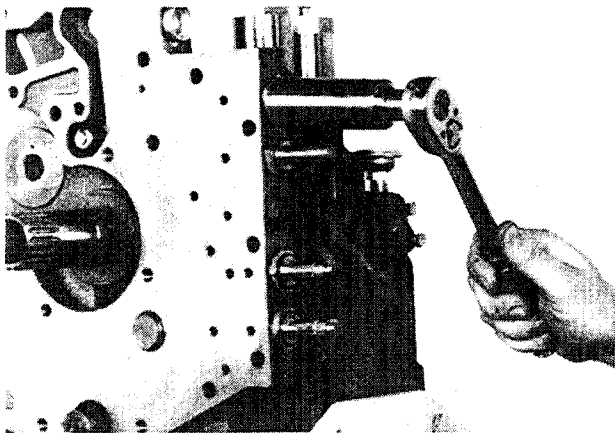


Figure 20
Remove valve cartridge and "O" ring.

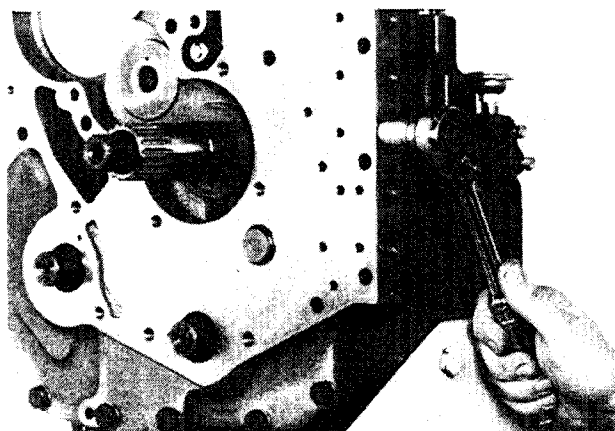


Figure 21
Repeat procedures Figures 18 through 21 for remaining solenoid valves. **NOTE:** A 3 speed will have a bore plug in the center bore. Remove bore plug.

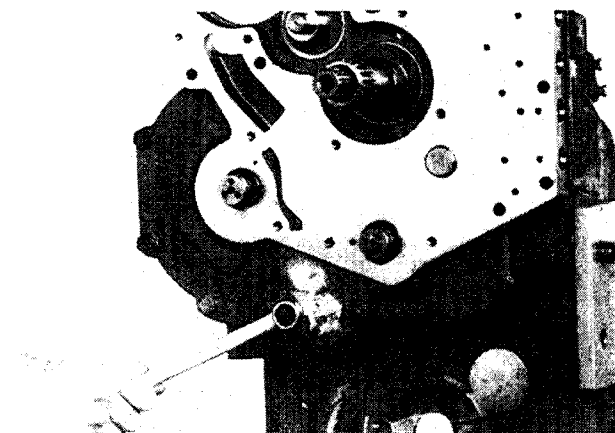


Figure 22
Remove spacer plate bolts and washers.

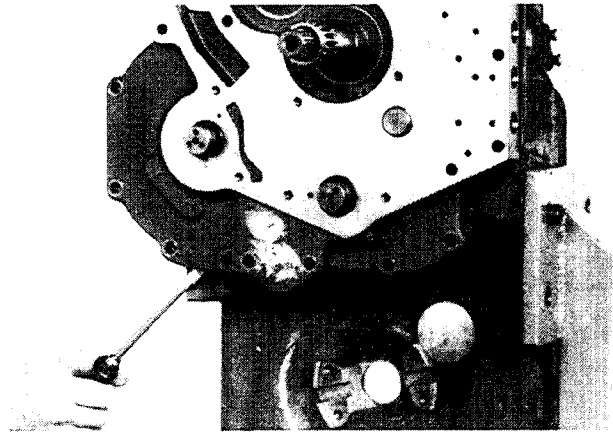


Figure 23
Pry spacer plate away from transmission case at dowel pin holes.

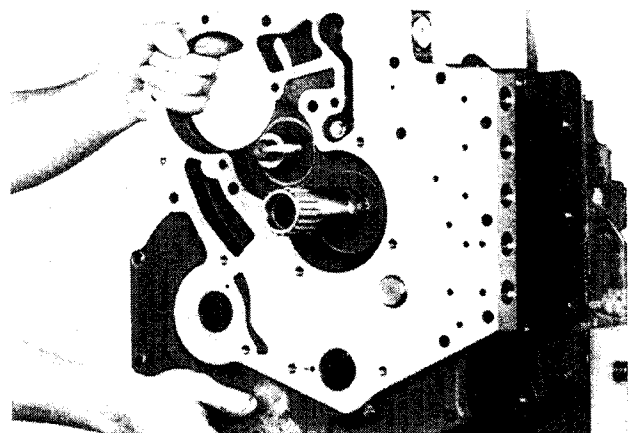


Figure 24
Remove spacer plate and gasket.

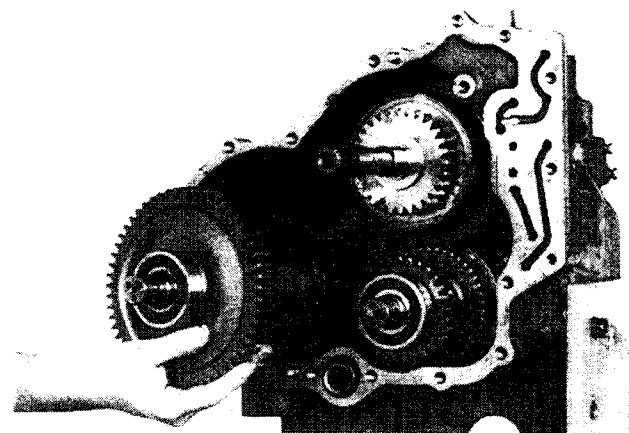


Figure 25
Remove 1st and 2nd clutch assembly.

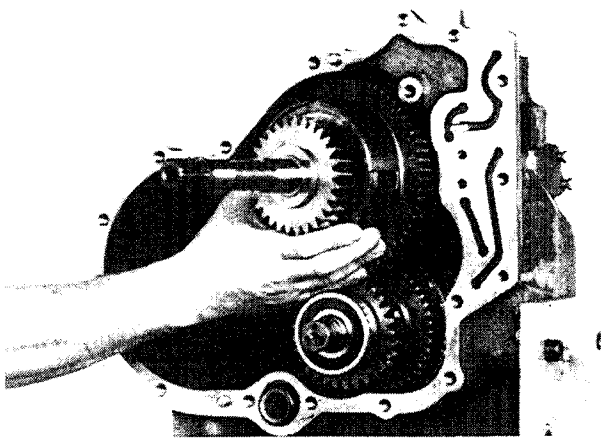


Figure 26

Remove forward and reverse clutch assembly.

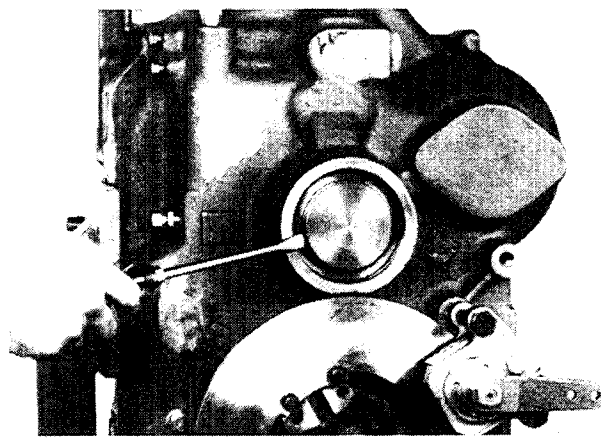


Figure 29

Pry bore plug from housing.

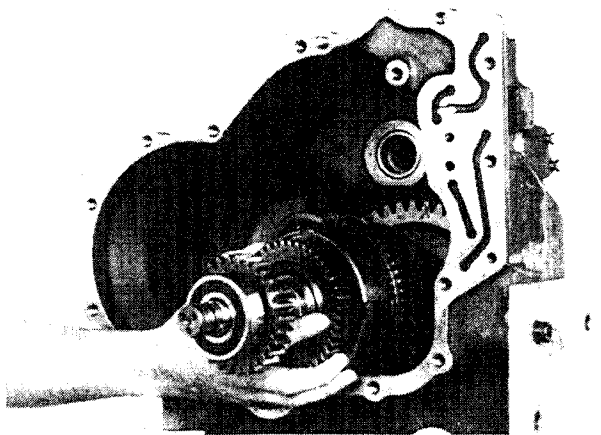


Figure 27

Remove high and 3rd clutch assembly. **NOTE:** A 3 speed will only have 3rd clutch.

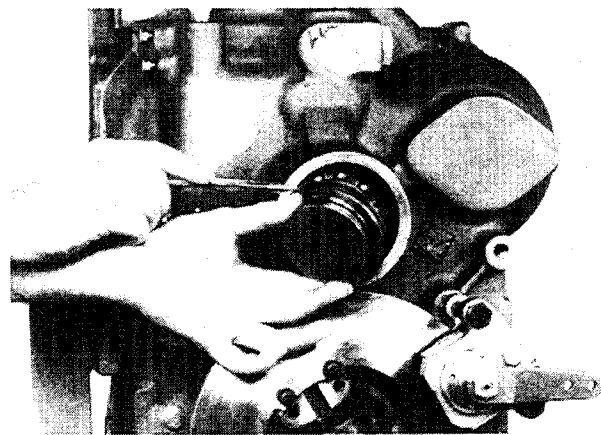


Figure 30

Note "O" ring on bore plug.

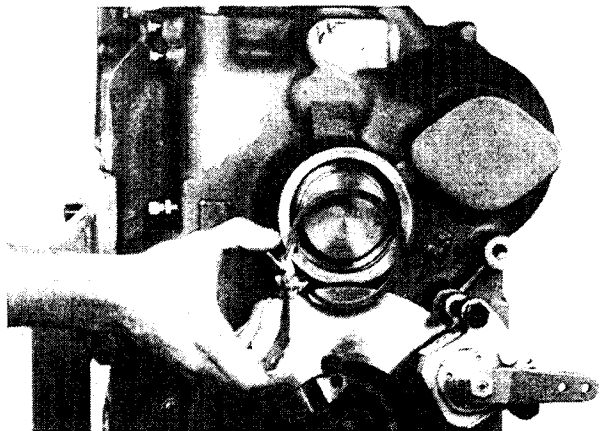


Figure 28

Remove intermediate shaft bore plug retainer ring.

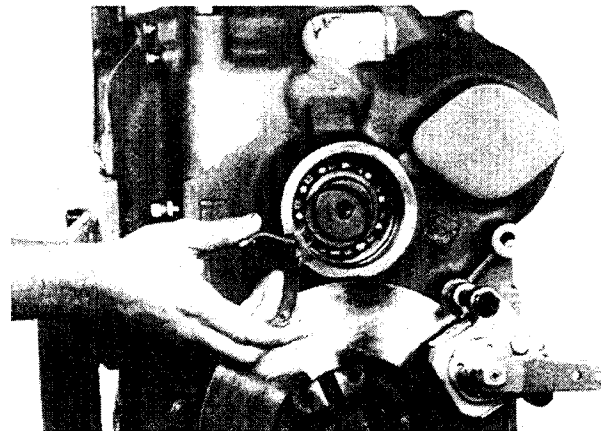


Figure 31

Remove 3rd clutch to bearing retainer ring.

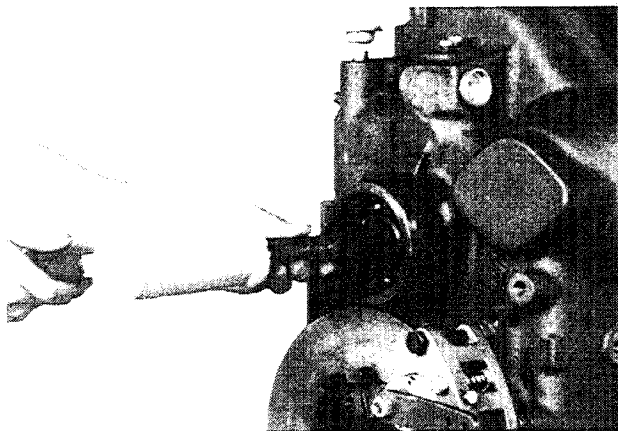


Figure 32

Tap 3rd clutch gear and hub from bearing.

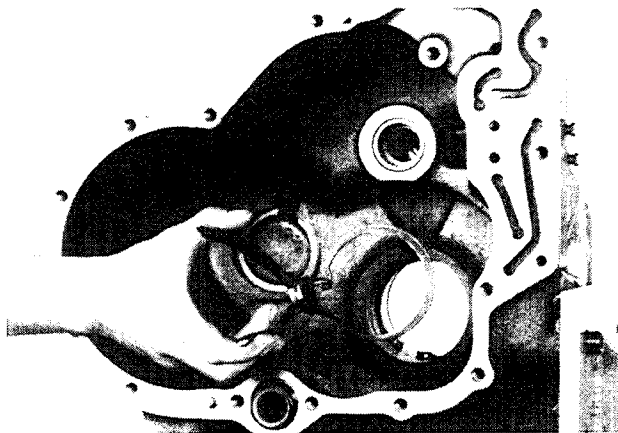


Figure 35

Remove inner bearing locating ring.

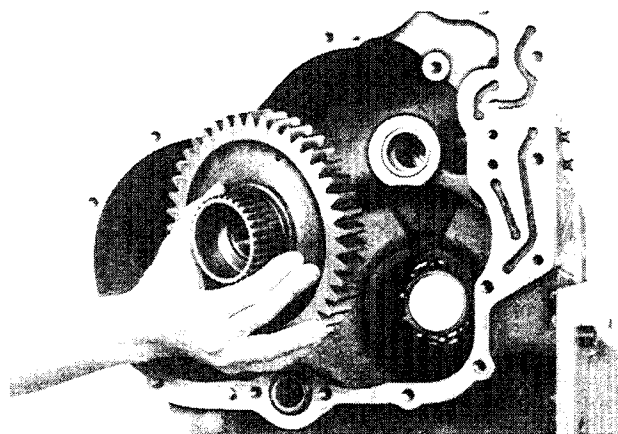


Figure 33

Remove gear and hub.

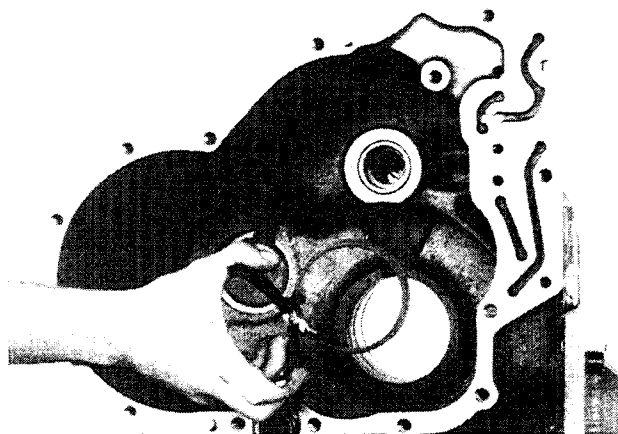


Figure 36

Remove outer bearing locating ring.

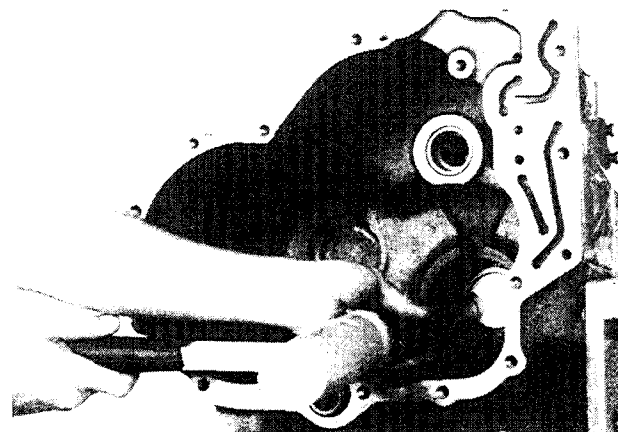


Figure 34

Tap 3rd clutch rear bearing from housing.

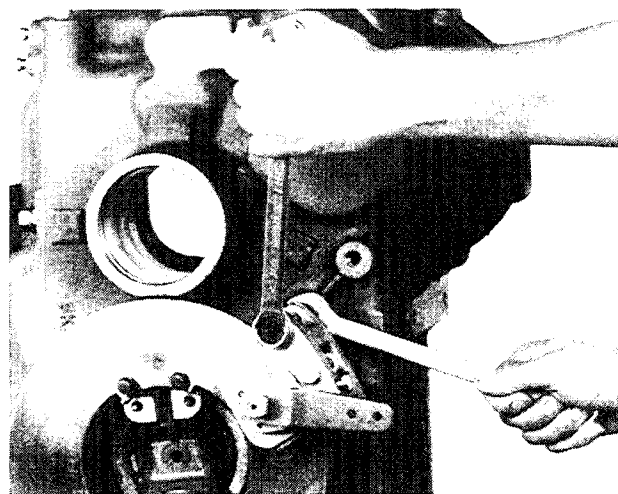


Figure 37

Remove brake disc assembly bolts from brake and housing. **NOTE:** Brake is an option and will not be on all units.

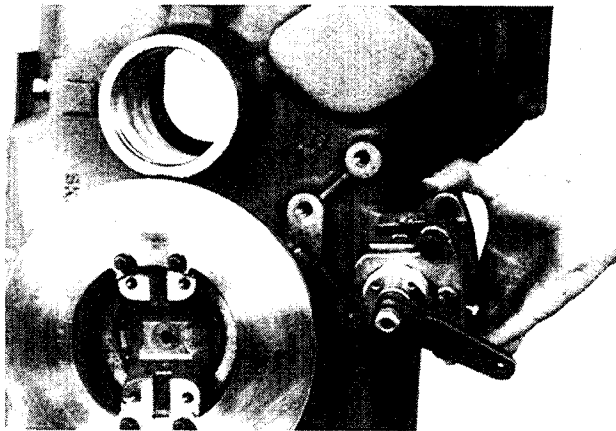


Figure 38
Remove brake caliper assembly.

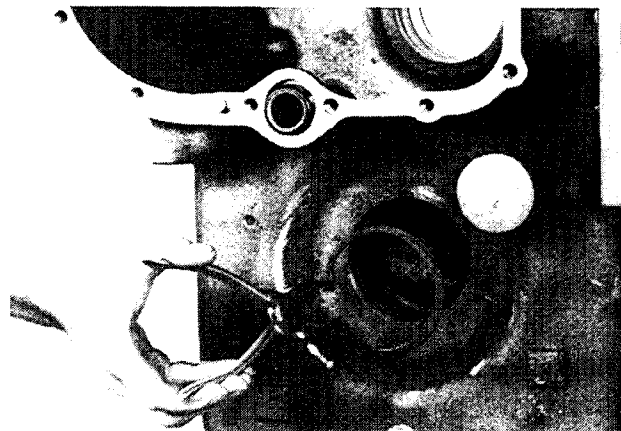


Figure 41
Remove bearing locating ring.

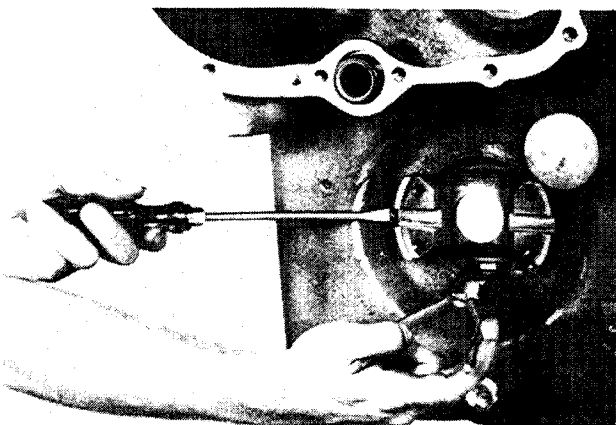


Figure 39
Turn front output flange as shown. Remove retainer ring from ring groove and pry output flange from housing.
NOTE: For units with front axle disconnect see Figure 416, page 76.

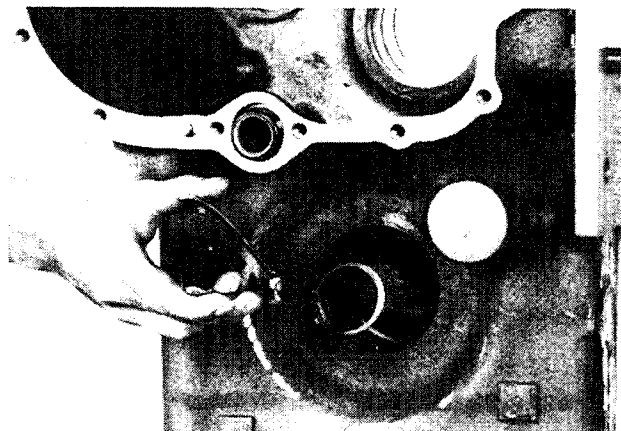


Figure 42
Remove output gear to shaft retainer ring.

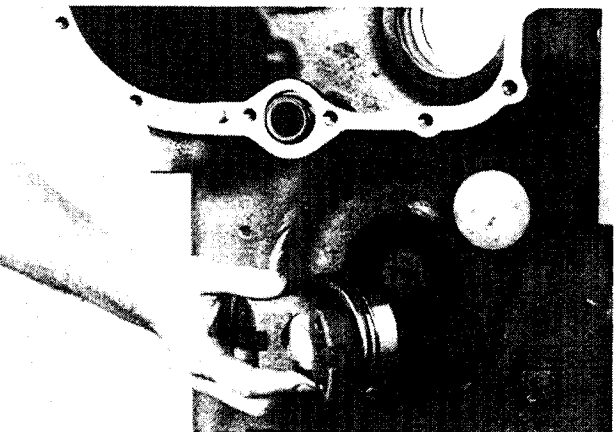


Figure 40
Output flange, oil seal sleeve, and front bearing removed.

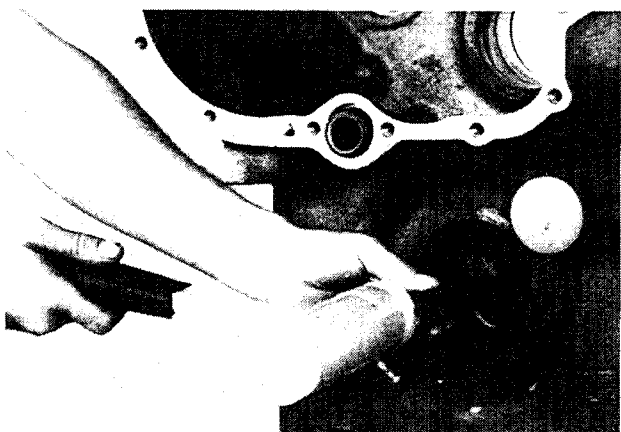


Figure 43
Tap output shaft and flange from housing.

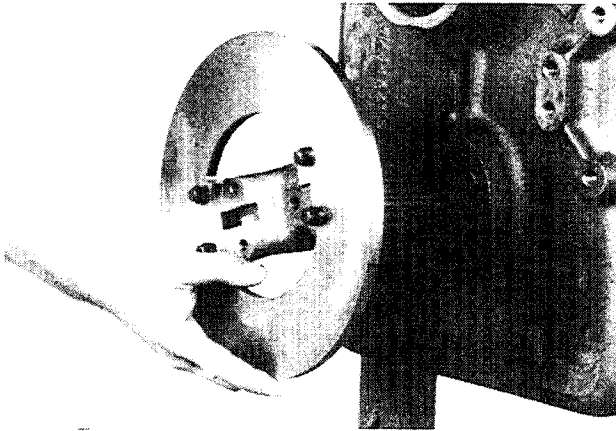


Figure 44

Flange removed. **NOTE:** Brake disc is optional and was removed with flange.

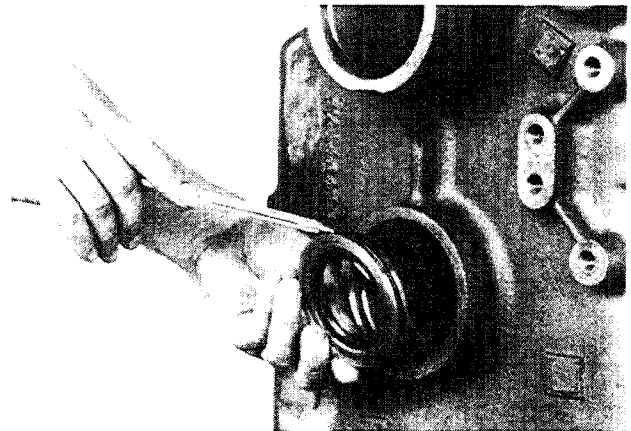


Figure 47

Remove sleeve and "O" ring.

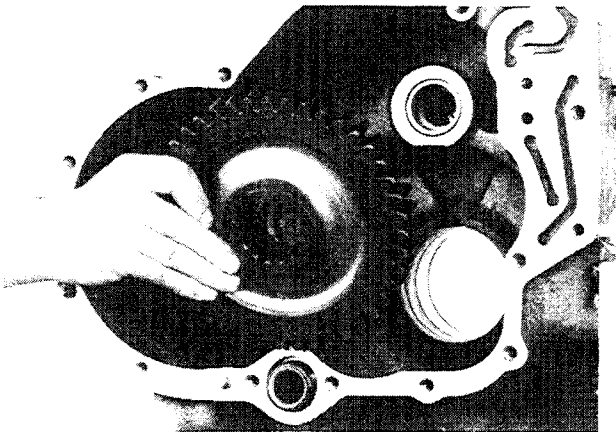


Figure 45

Remove output gear.

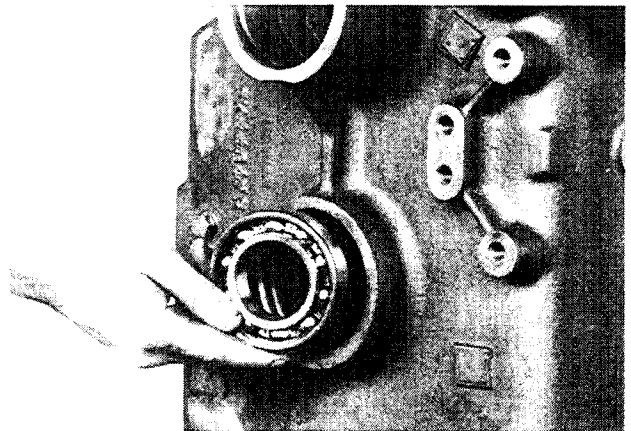


Figure 48

Remove output shaft rear bearing.

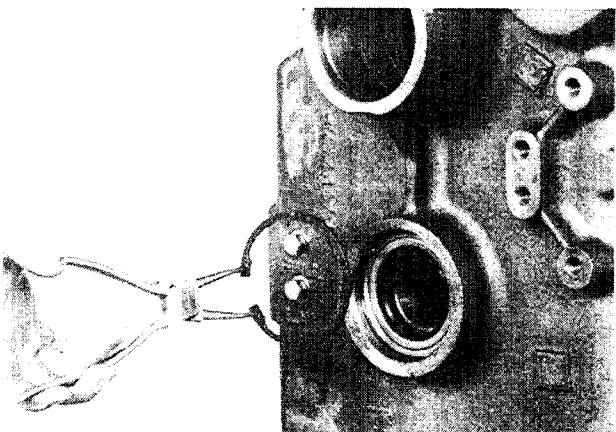


Figure 46

Remove flange oil seal sleeve retainer ring.

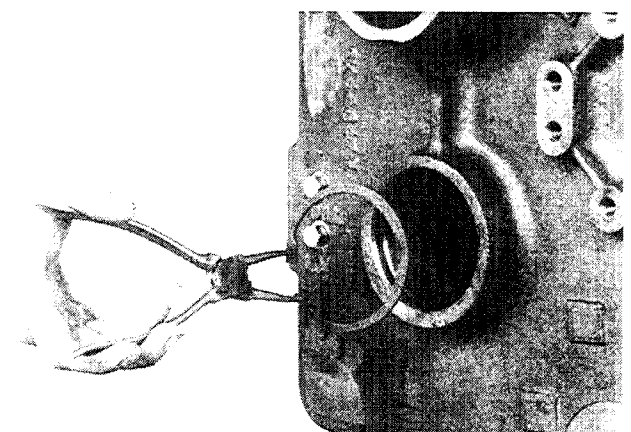


Figure 49

Remove bearing locating ring.

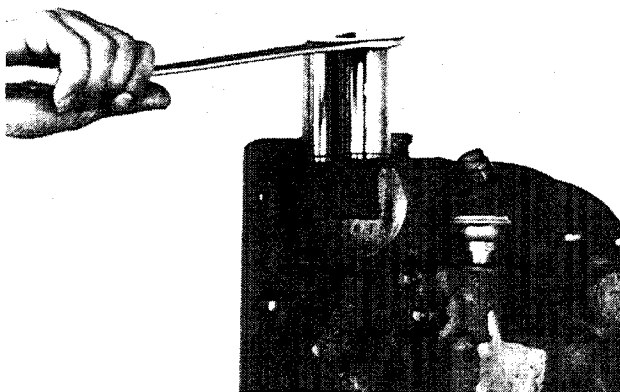


Figure 50

Remove modulator valve housing. **NOTE:** For single modulation and mechanical inching, see Figure 458, page 83.

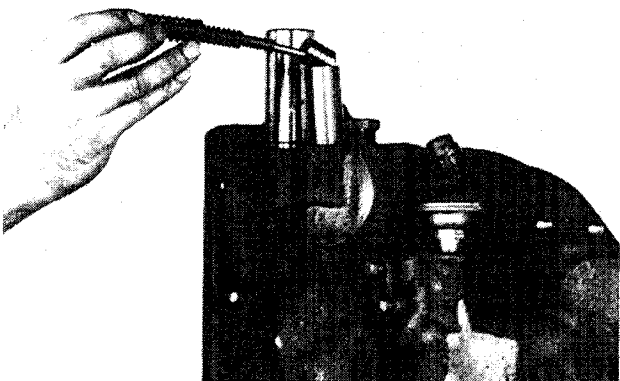


Figure 51

Remove inner, middle, and outer springs. Remove valve stop pin and accumulator spool. Remove regulator spool and sleeve assembly.

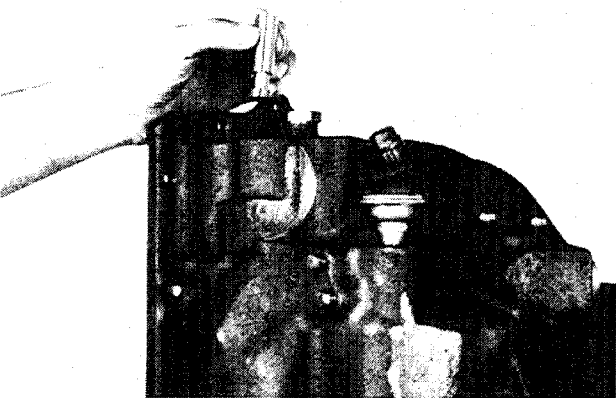


Figure 52

Remove diverter sleeve. **NOTE:** Diverter sleeve has a 5/16-24 threaded hole in end of it. A threaded rod screwed into end of it will facilitate removal of diverter sleeve.

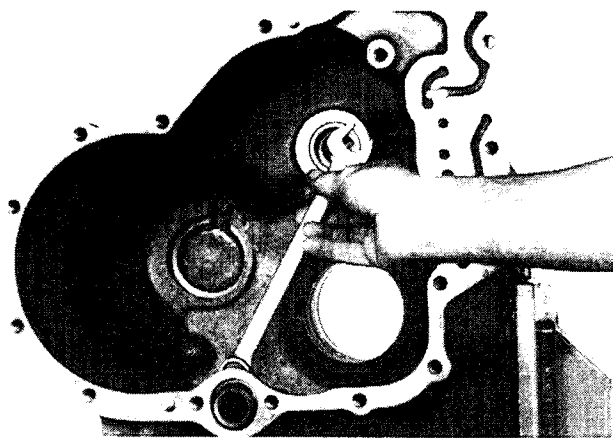


Figure 53

Remove supply tube clamp screw. **NOTE:** Clamp screw cannot be reused. For reassembly a new screw must be used.

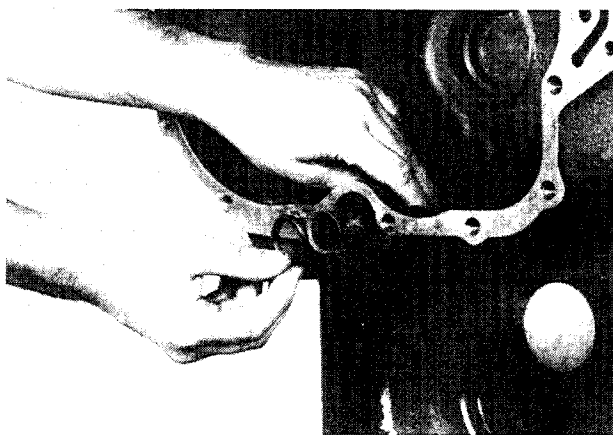


Figure 54

Remove supply tube "O" ring.

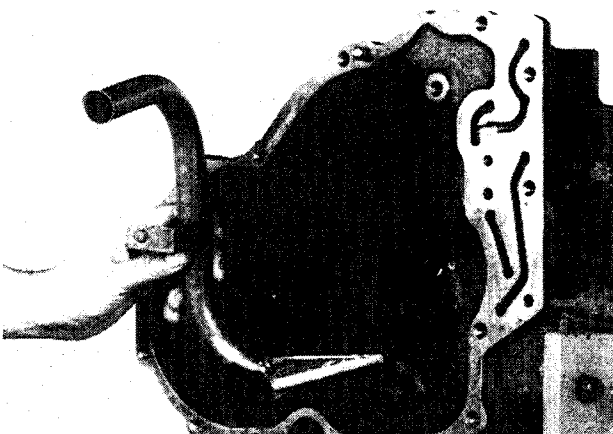


Figure 55

Remove supply tube and screen assembly.

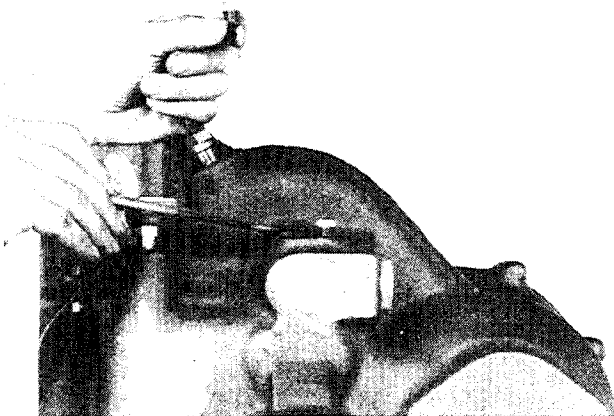


Figure 56

Remove oil sleeve distributor lock screw plug. Remove lock screw.

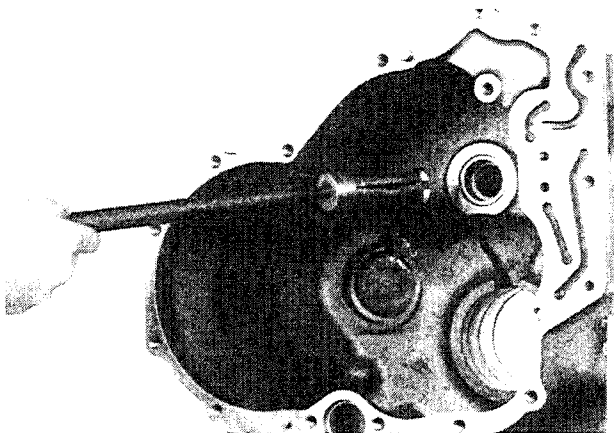


Figure 57

Use a hammer puller as shown to remove distributor sleeve.

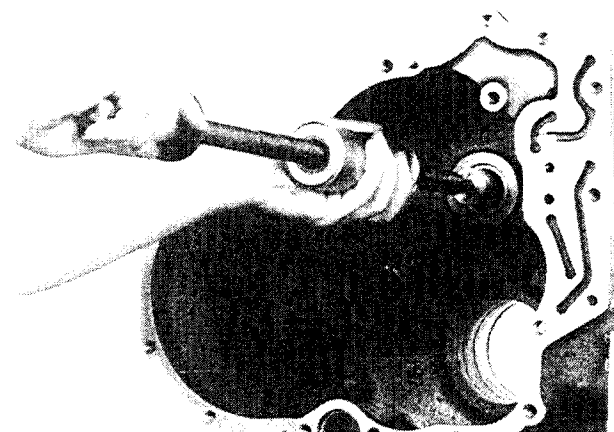


Figure 58

Sleeve being removed. Remove pilot bearing.

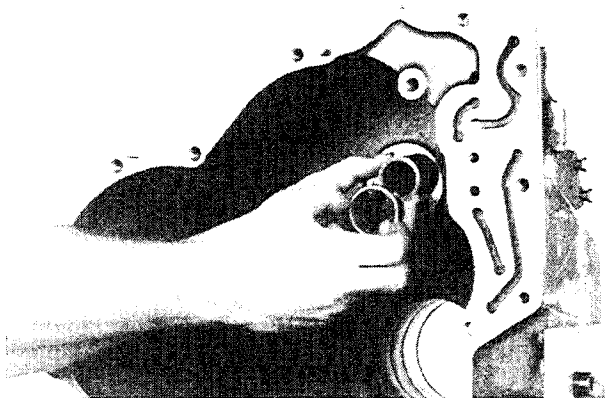


Figure 59

Pilot bearing and oil distributor sleeve removed.

DISASSEMBLY AND REASSEMBLY OF LOW (1ST) AND 2ND CLUTCH

DISASSEMBLY LOW (1ST) BEING DISASSEMBLED

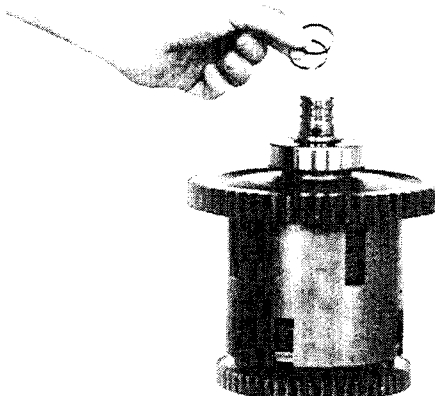


Figure 60

Remove clutch shaft oil sealing rings.

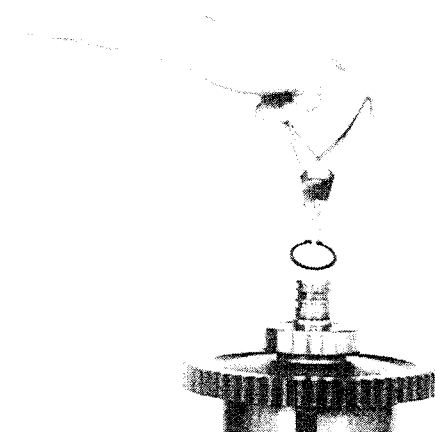


Figure 61

Remove front bearing retainer ring.

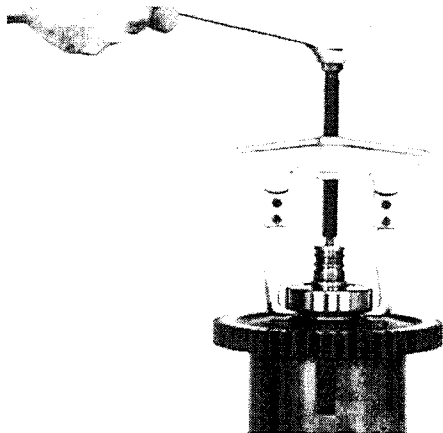


Figure 62

Remove front bearing.

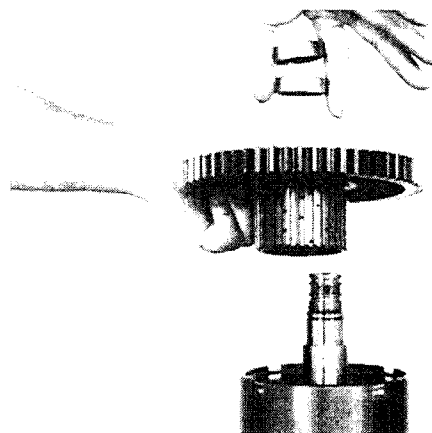


Figure 65

Clutch gear and pilot bearings removed.

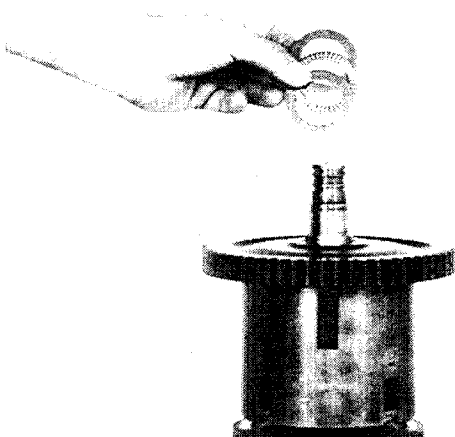


Figure 63

Remove outer thrust washer, bearing, and inner thrust washer.

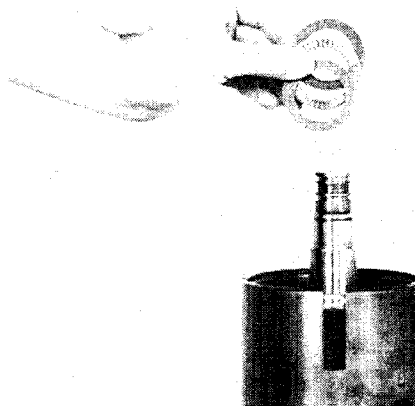


Figure 66

Remove outer thrust washer, thrust bearing, and inner thrust washer.

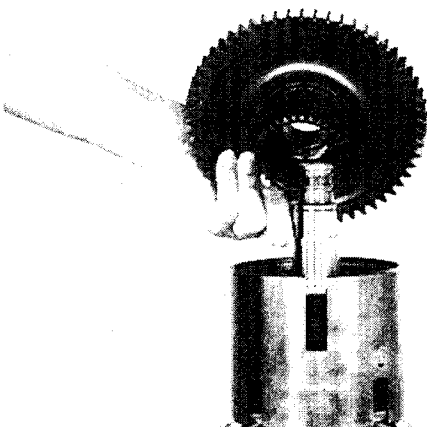


Figure 64

Remove clutch gear and disc hub.

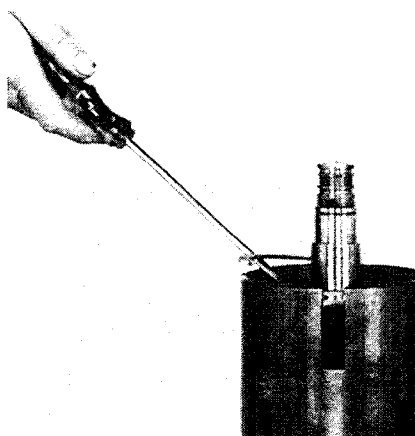


Figure 67

Remove clutch disc end plate retainer ring.

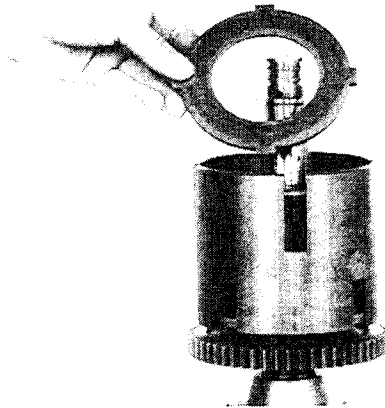


Figure 68
Remove clutch disc end plate.

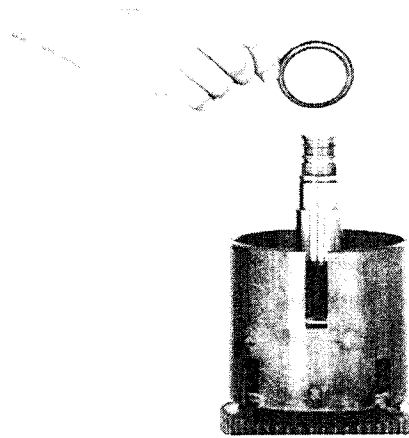


Figure 71
Remove retainer ring retainer.

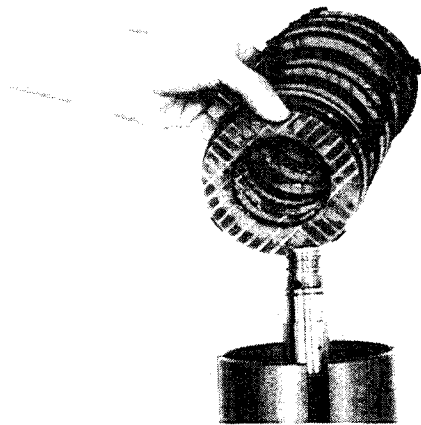


Figure 69
Remove inner and outer clutch discs.

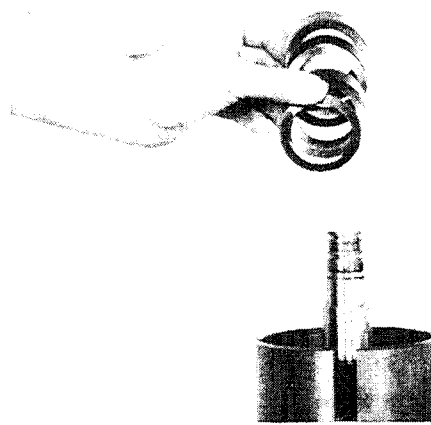


Figure 72
Remove disc springs. **Note:** See page 104.

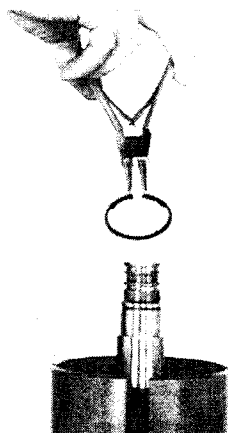


Figure 70
Compress disc springs and remove retainer ring.

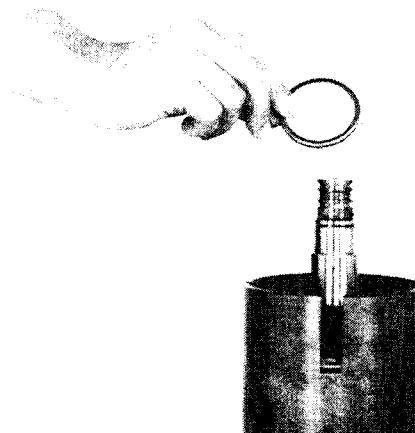


Figure 73
Remove clutch piston wear plate.

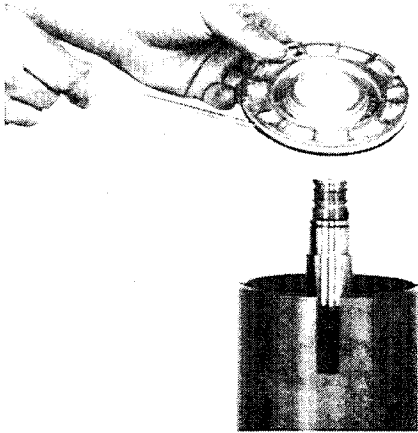


Figure 74

Turn clutch over and tap clutch shaft on a block of wood to remove clutch piston.

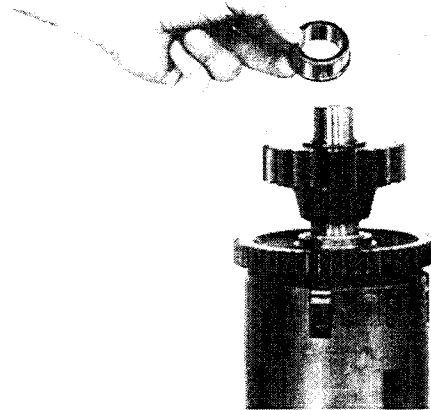


Figure 77

Remove inner race from shaft.

2ND CLUTCH DISASSEMBLY

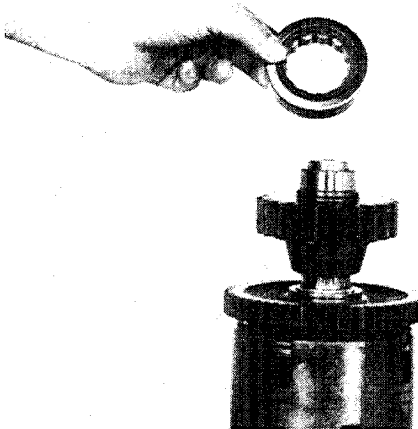


Figure 75

Remove clutch shaft rear bearing.

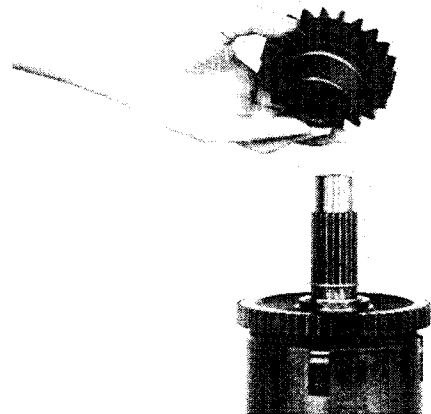


Figure 78

Remove gear from shaft.

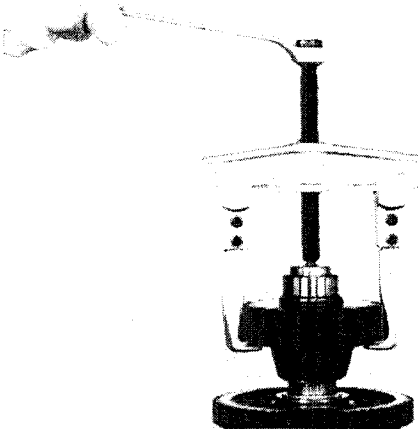


Figure 76

Using a gear puller as shown, remove gear and rear bearing inner race.

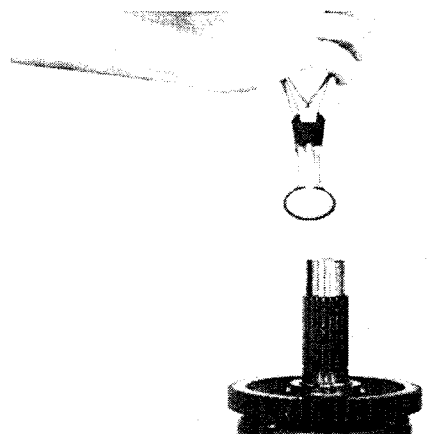


Figure 79

Remove gear locating ring from shaft.

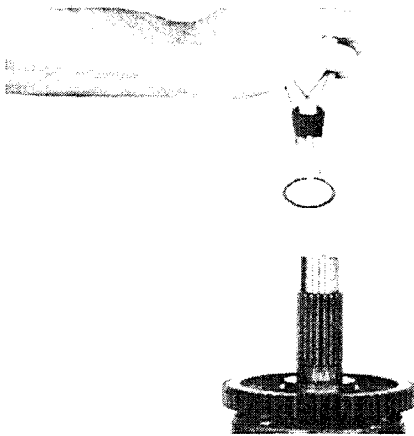


Figure 80

Remove thrust bearing and clutch gear retainer ring.

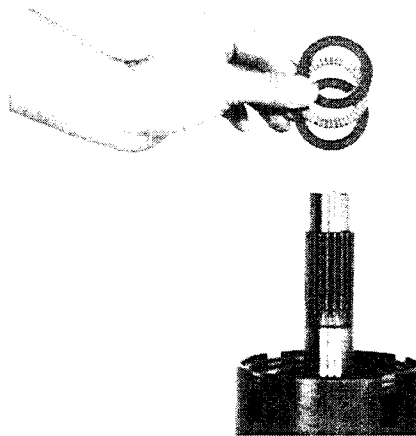


Figure 83

Remove outer thrust washer, thrust bearing, and inner thrust washer.

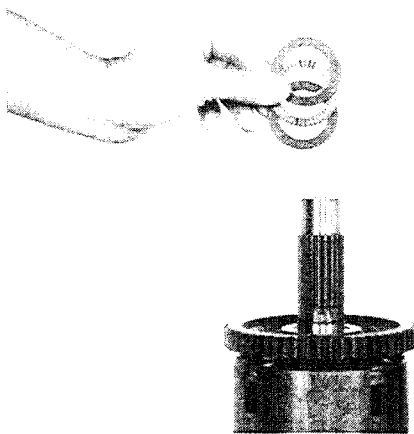


Figure 81

Remove outer thrust washer, thrust bearing, and inner thrust washer.

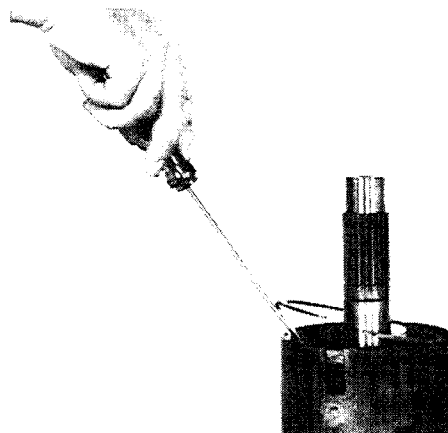


Figure 84

Remove clutch disc end plate retainer ring.

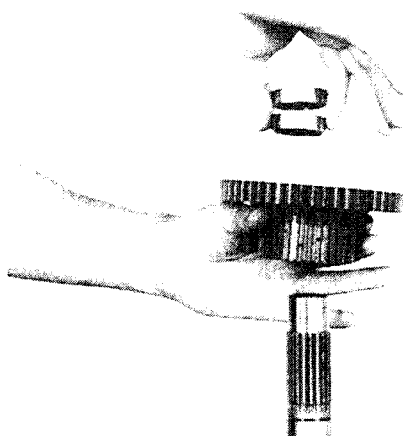


Figure 82

Remove clutch gear and hub and gear bearings.

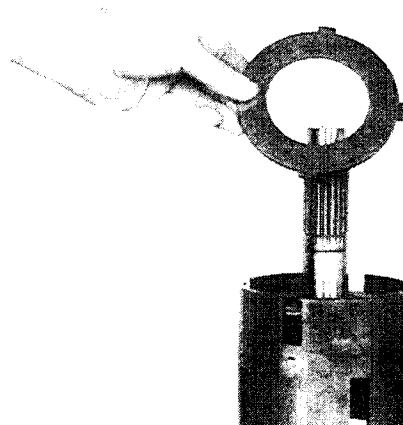


Figure 85

Remove end plate.

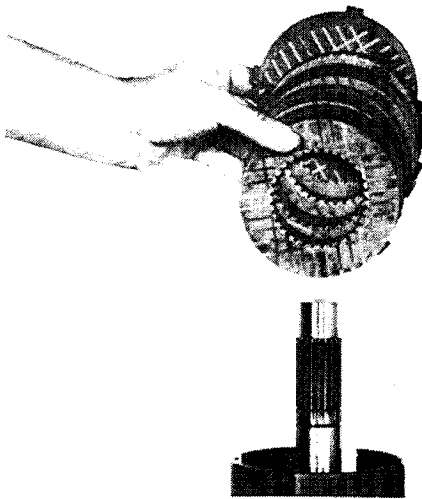


Figure 86

Remove clutch discs.

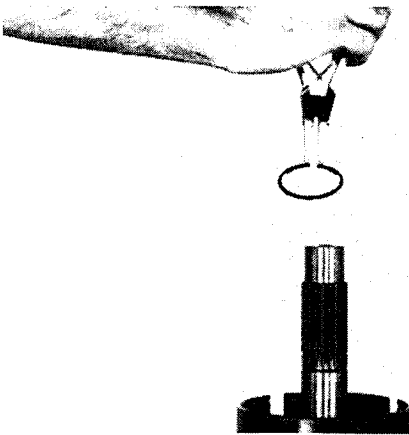


Figure 87

Compress disc springs and remove retainer ring.

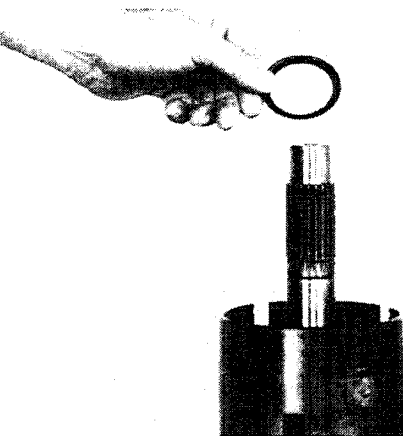


Figure 88

Remove retainer ring retainer.

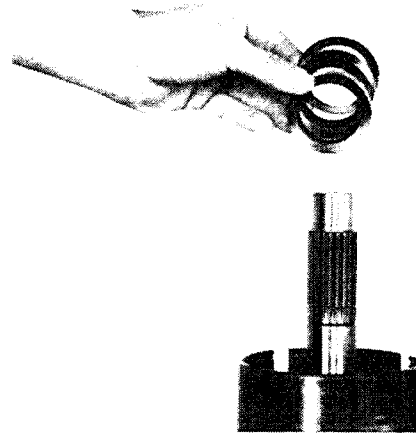


Figure 89

Remove disc springs. **Note:** See page 104.

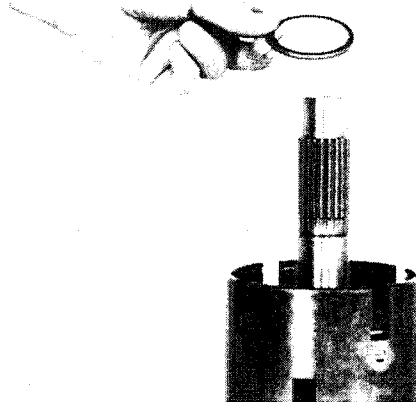


Figure 90

Remove clutch piston wear plate.

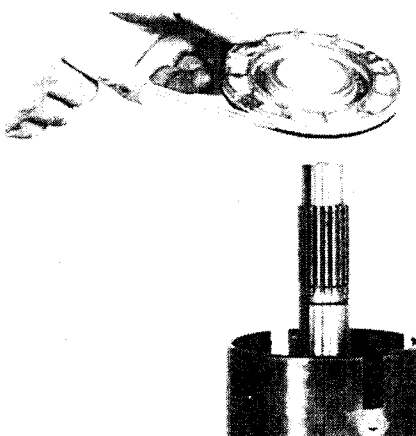


Figure 91

Remove clutch piston.

REASSEMBLY OF LOW (1ST) CLUTCH (See cleaning and inspection page)

Two bleed valves in clutch drum must be clean and free of any foreign material.

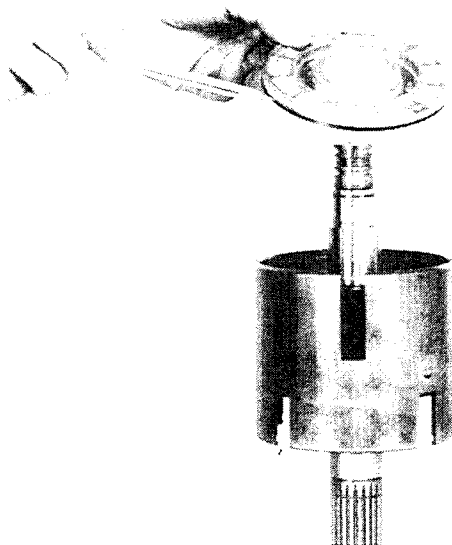


Figure 92

Install clutch piston outer seal ring.

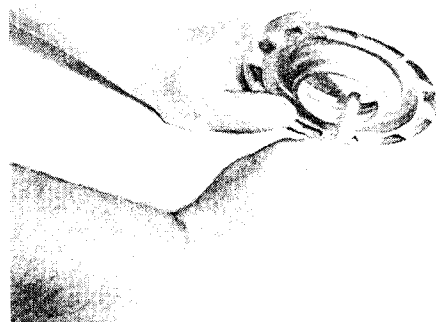


Figure 93

Install clutch piston inner seal ring. **NOTE:** Ring must be sized before installing in clutch drum. Sizing is best accomplished by rotating piston while holding a round object against the new seal ring as shown. Rotate piston until seal ring is flush with outer diameter of piston.

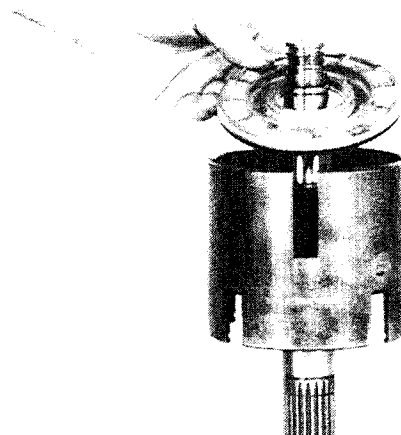


Figure 94

Position piston in low clutch drum as shown. Use caution as not to damage inner and outer piston sealing rings.

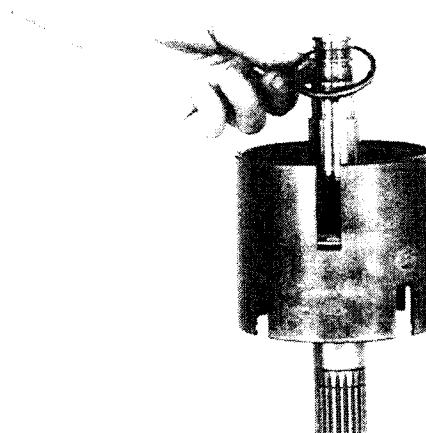


Figure 95

Position clutch piston wear plate on piston.

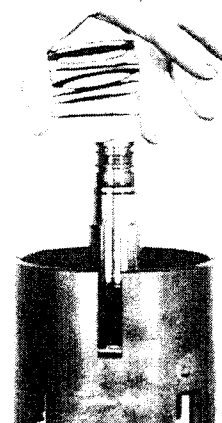


Figure 96

Install piston return disc springs. First spring with large diameter of bevel toward wear plate. Alternate seven (7) springs. **Note:** See page 104.

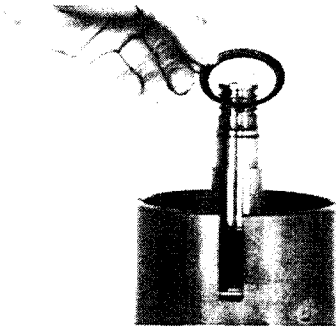


Figure 97

Position return spring retainer on clutch shaft.

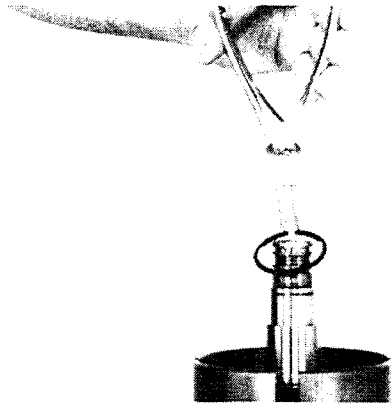


Figure 98

Start ring on shaft with snap ring pliers.

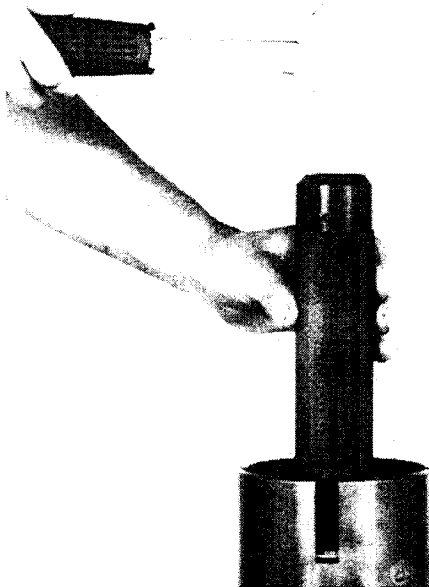


Figure 99

Use a sleeve with the proper inner diameter to fit over shaft and against retainer ring. A sharp blow with a soft hammer will compress springs and seat retainer ring. Be sure ring is in full position in groove.

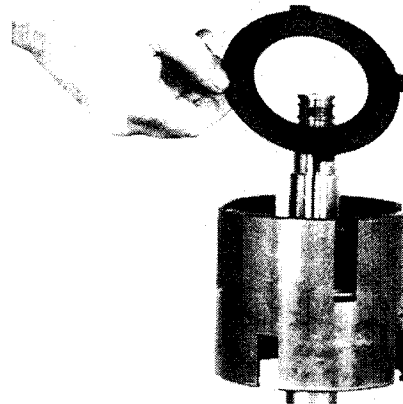


Figure 100

Install first steel (outer) clutch disc.

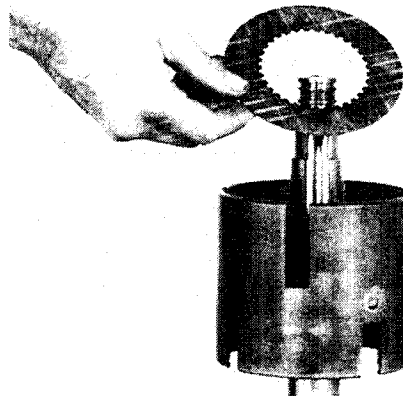


Figure 101

Install first friction (inner) clutch disc. Alternate steel and friction until ten (10) steel and ten (10) friction discs are in position.

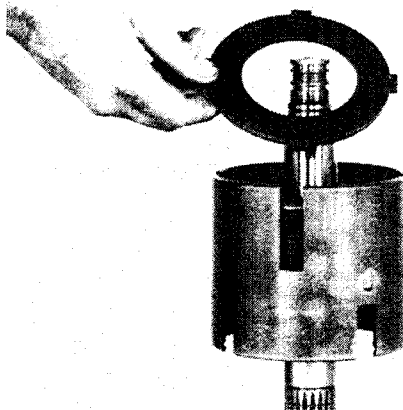


Figure 102

Install clutch disc end plate.

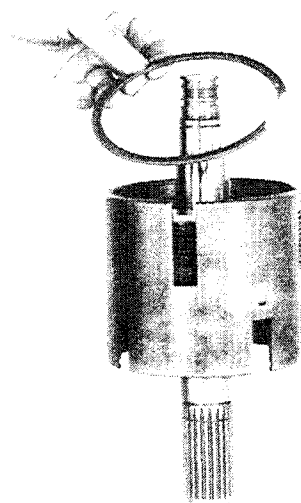


Figure 103
Install end plate retainer ring.

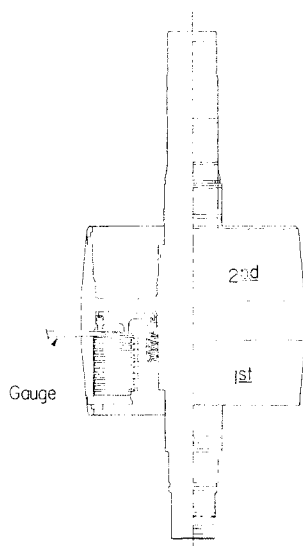


Figure 103a

NOTE: Low (1st) clutch pack must be checked for clutch disc clearance.

Stand the clutch assembly on end. The clutch discs on the bottom will fall to the end plate.

Measure the distance between the clutch piston and the first steel disc by inserting a feeler gauge or taper gauge through the slots in the clutch drum.

The required clearance is .080-.135 [2,03-3,43].

If the clearance is greater than .135 [3,43], add one steel disc under the end plate.

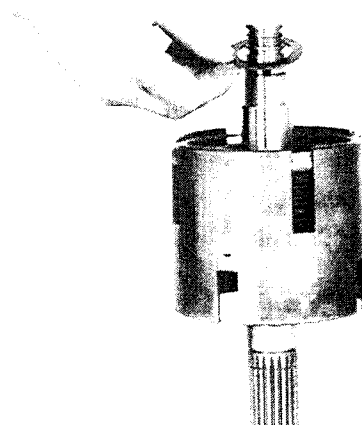


Figure 104
Position thrust bearing inner washer on clutch shaft.

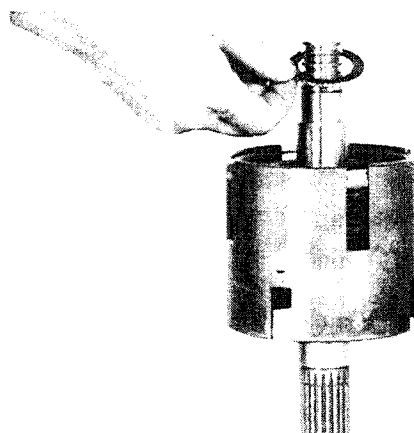


Figure 105
Position thrust bearing on clutch shaft against inner thrust bearing washer.

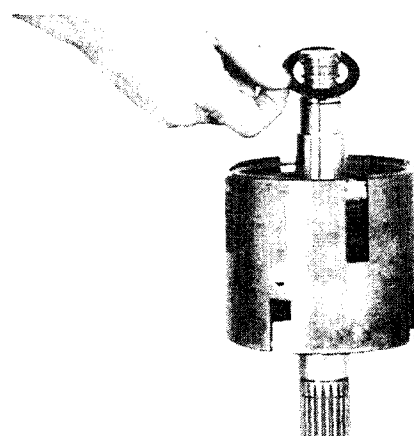


Figure 106
Install outer thrust bearing washer against bearing.

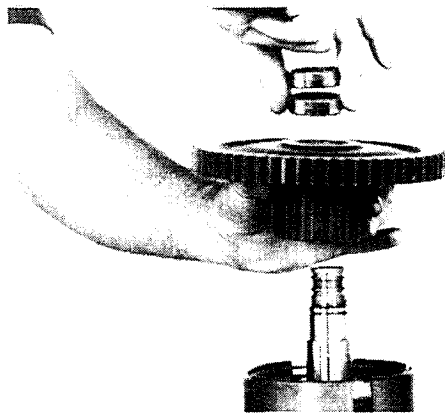


Figure 107

Press bearings in clutch gear and disc hub, being certain bearings are pressed flush with face of gear on both sides.

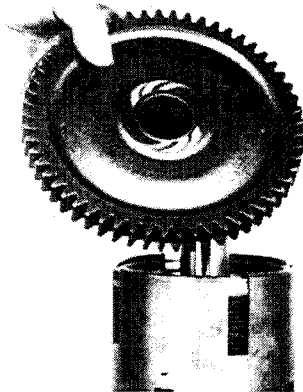


Figure 108

Install the clutch gear in the clutch assembly by aligning the clutch hub teeth with the clutch inner discs. Be sure the clutch hub is in full position in the clutch assembly. Do not force this operation.

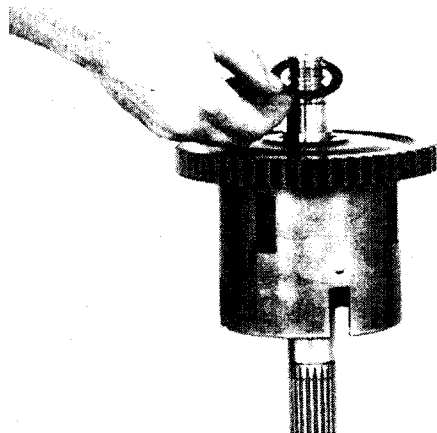


Figure 109

Position inner thrust washer on shaft.

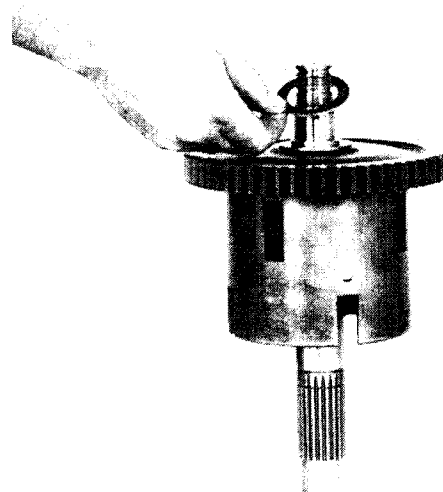


Figure 110

Position thrust bearing on shaft.

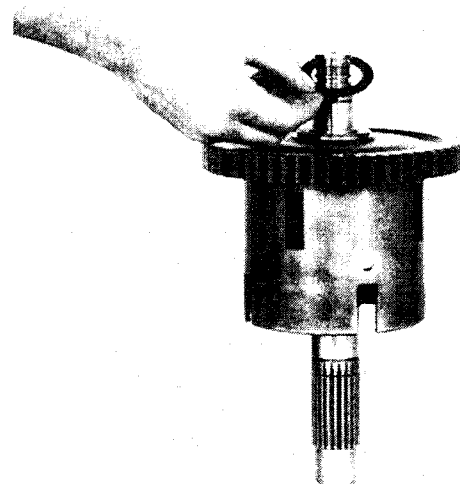


Figure 111

Position outer thrust washer on shaft.

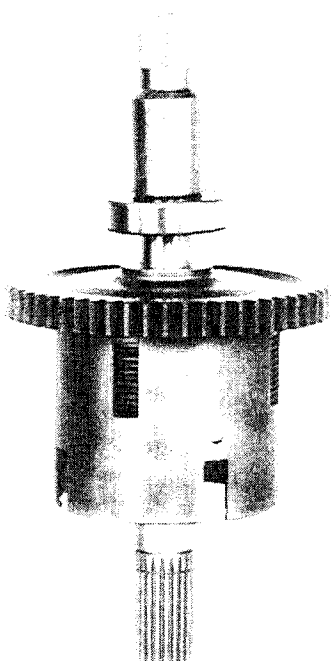


Figure 112

Install clutch shaft front bearing. **NOTE:** Bearing has shield in it. This shield must be up.

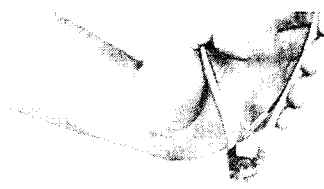


Figure 113

Install front bearing retainer ring.

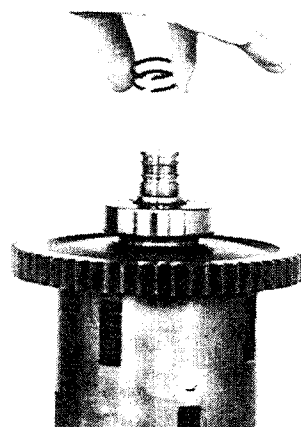


Figure 114

Install clutch shaft oil sealing rings. Grease rings to facilitate reassembly into front housing.

2ND CLUTCH REASSEMBLY

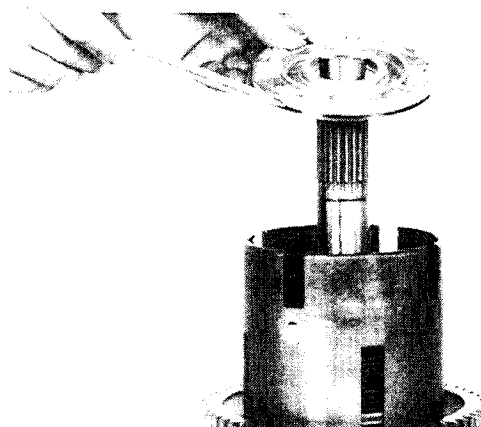


Figure 115

Install inner and outer clutch piston seal rings. Size inner ring as explained in Figure 93.

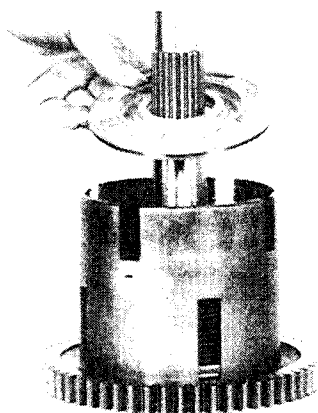


Figure 116

Position piston in clutch drum, using caution as not to damage piston sealing rings.

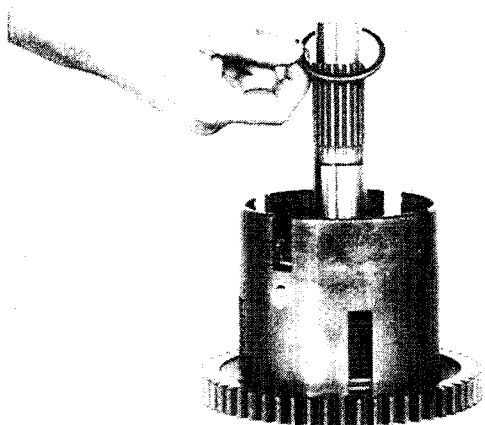


Figure 117
Install clutch piston wear plate.

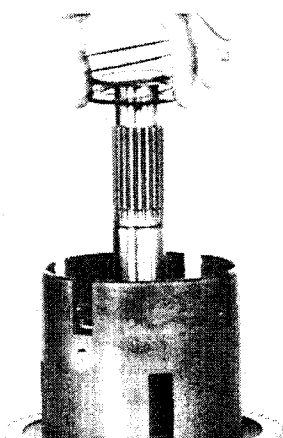


Figure 118
Install piston return disc springs. First spring with large diameter of bevel toward wear plate. Alternate five (5) springs. **Note:** See page 104.

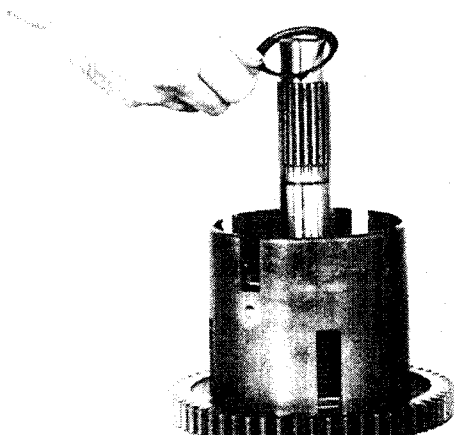


Figure 119
Position return spring ring retainer on clutch shaft.

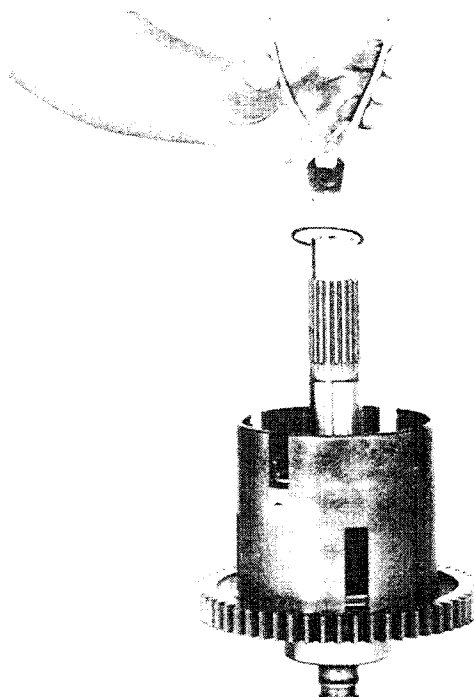


Figure 120
Start ring on shaft with snap ring pliers.

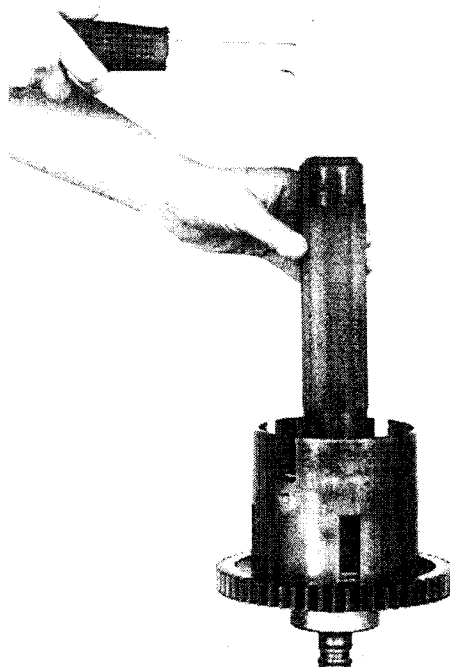


Figure 121
Use a sleeve with the proper inner diameter to fit over shaft and against retainer ring. A sharp blow with a soft hammer will compress springs and seat retainer ring. Be sure ring is in full position in groove.

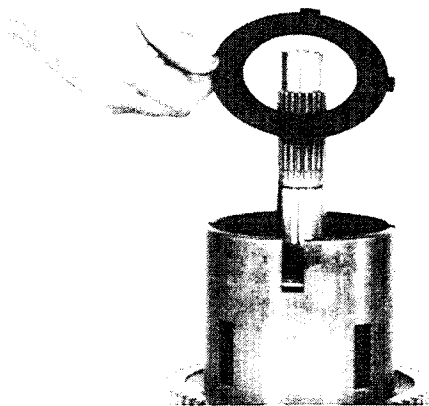


Figure 122
Install first steel (outer) clutch disc.

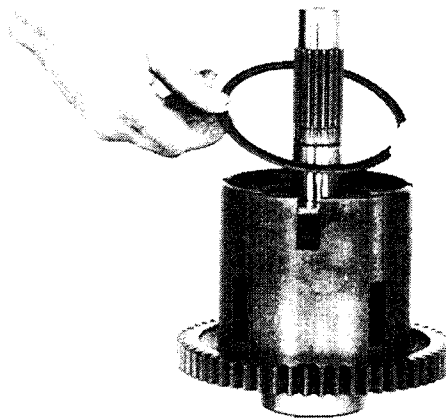


Figure 125
Install end plate retainer ring.

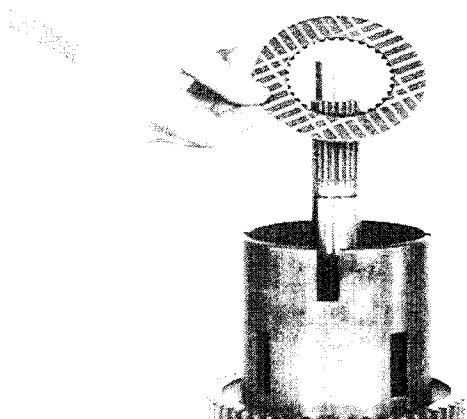


Figure 123
Install first friction (inner) clutch disc. Alternate steel and friction until five (5) steel and five (5) friction discs are in position.

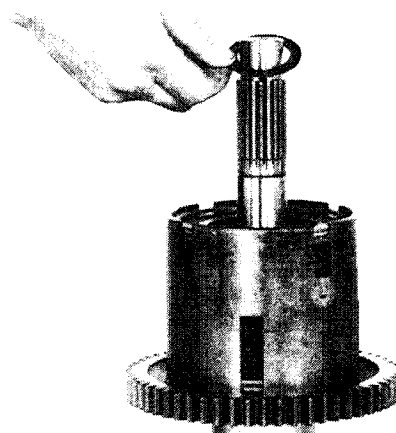


Figure 126
Position thrust bearing inner washer on clutch shaft.

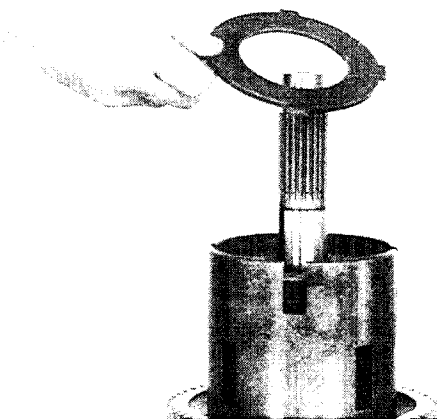


Figure 124
Install clutch disc end plate.

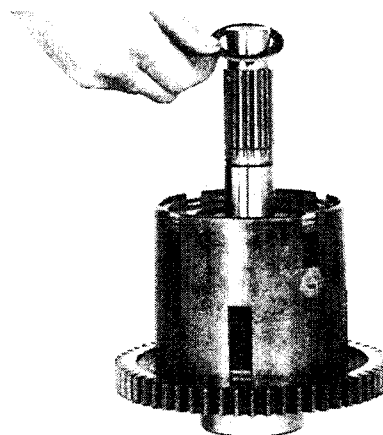


Figure 127
Position thrust bearing on clutch shaft against inner thrust bearing washer.

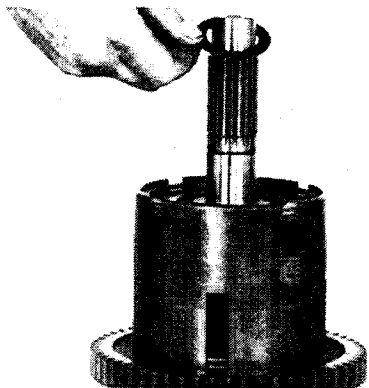


Figure 128

Install outer thrust bearing washer against thrust bearing.

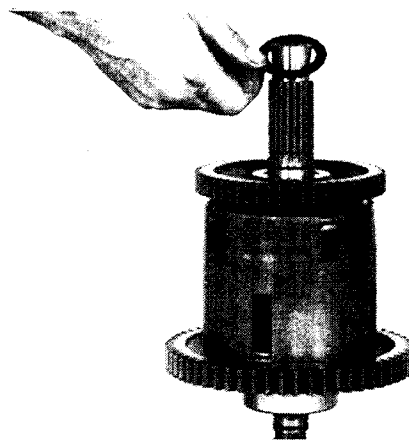


Figure 131

Position thrust bearing inner washer on clutch shaft.

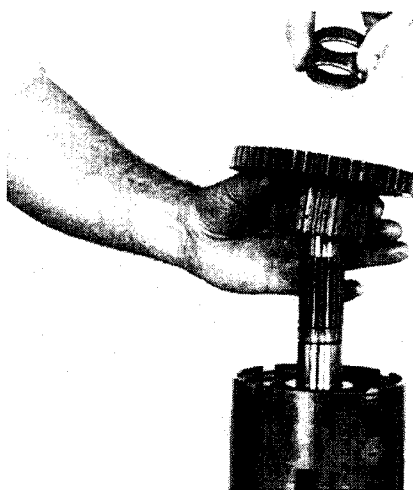


Figure 129

Press needle bearings in clutch gear and disc hub, being certain bearings are pressed flush with face of gear on both sides.

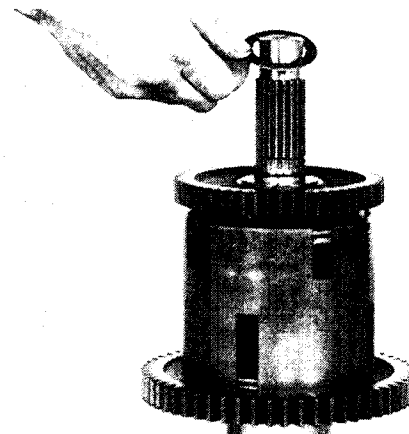


Figure 132

Position thrust bearing on clutch shaft against inner thrust bearing washer.

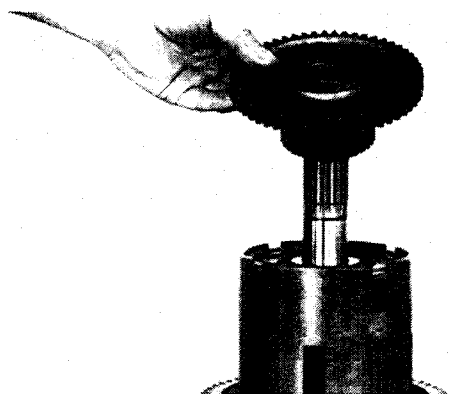


Figure 130

Install the clutch gear in the clutch assembly by aligning the clutch hub teeth with the clutch inner discs. Be sure the clutch hub is in full position in the clutch assembly. Do not force this operation.

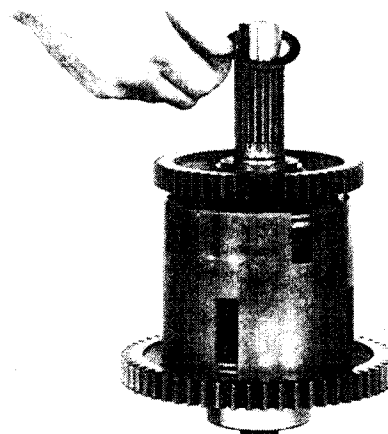


Figure 133

Install outer thrust bearing washer against bearing.

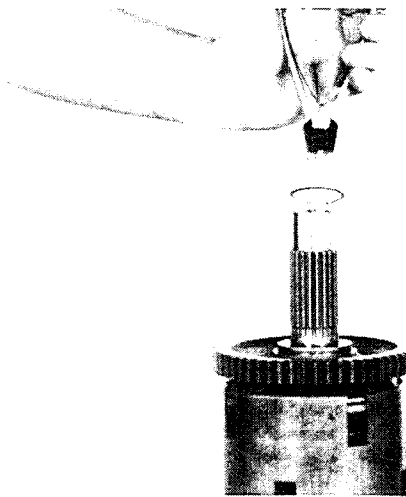


Figure 134
Install thrust washer retainer ring.

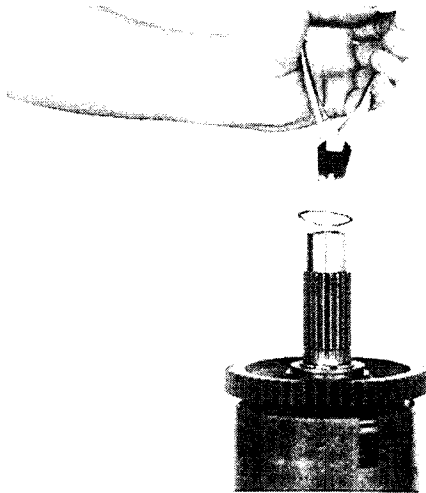


Figure 135
Install clutch shaft gear locating ring.

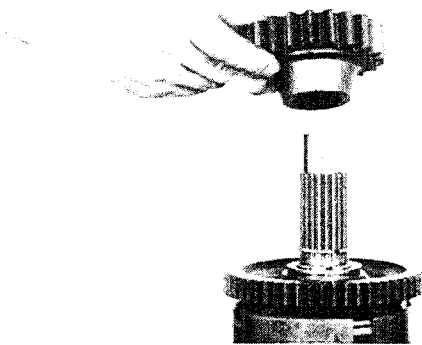


Figure 136
Install clutch shaft gear on clutch shaft with long hub of gear down.

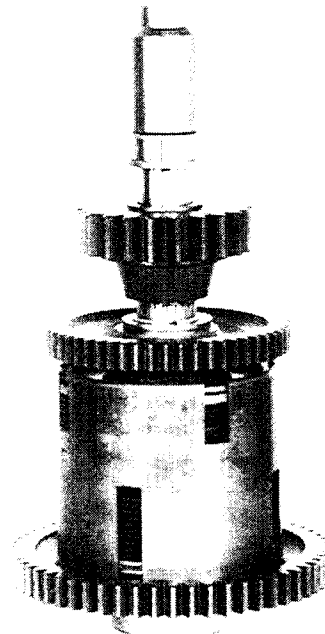


Figure 137
Install rear bearing inner race on clutch shaft with bearing race shoulder down.

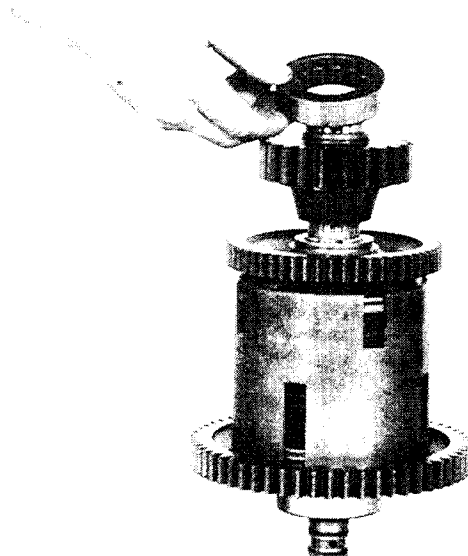


Figure 138
Position rear bearing on bearing race.

**DISASSEMBLY AND REASSEMBLY OF
3RD AND 4TH (HIGH) CLUTCH**

**4TH CLUTCH USED ON 4 AND 6 SPEED MODELS
ONLY**

DISASSEMBLY

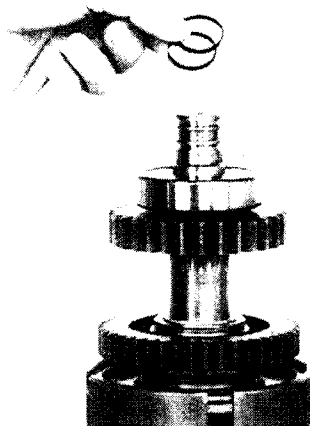


Figure 139

Remove clutch shaft oil sealing rings.

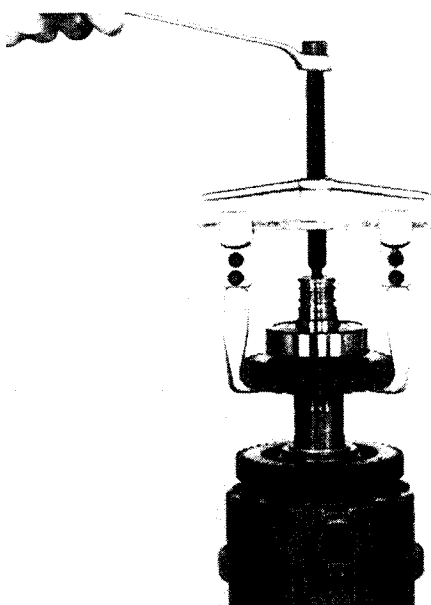


Figure 140

Using a gear puller as shown, remove clutch gear and front bearing.

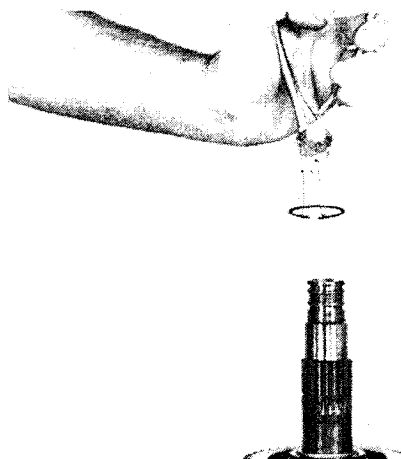


Figure 141

Remove clutch gear locating ring. For 3 speed models, proceed to Figure 155.

4TH (HIGH) CLUTCH DISASSEMBLY

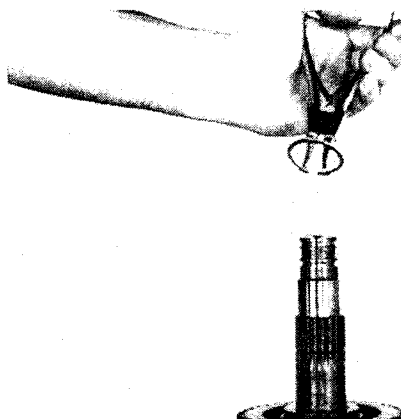


Figure 142

Remove outer thrust washer retainer ring.

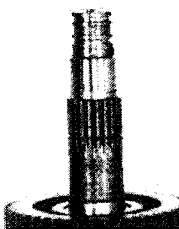


Figure 143

Remove outer thrust washer, thrust bearing, and inner thrust washer.

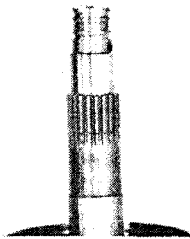
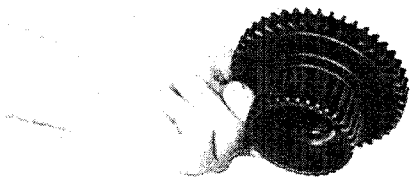


Figure 144

Remove clutch gear and disc hub.

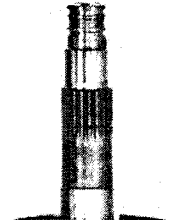


Figure 145

Remove bearings and spacer from clutch gear.

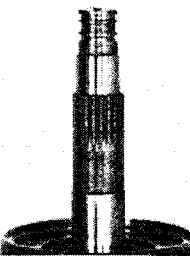


Figure 146

Remove outer thrust washer, thrust bearing, and inner thrust washer.

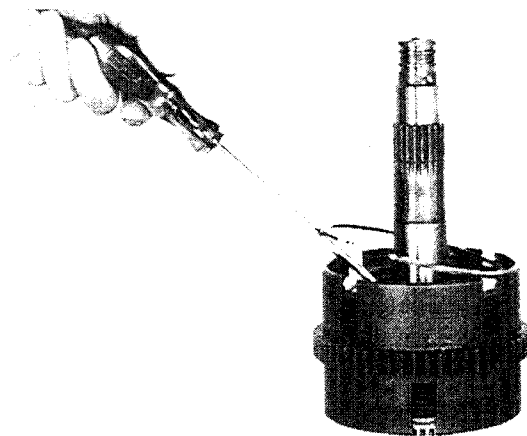


Figure 147

Remove end plate retainer ring.

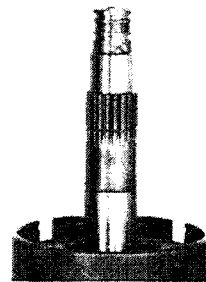


Figure 148

Remove end plate.

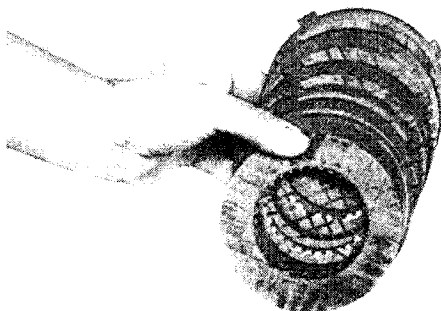


Figure 149

Remove clutch discs.

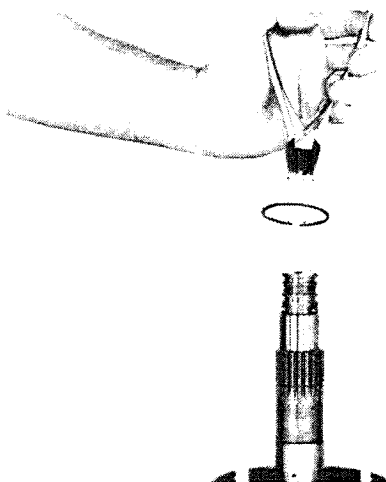


Figure 150

Compress disc springs and remove retainer ring.

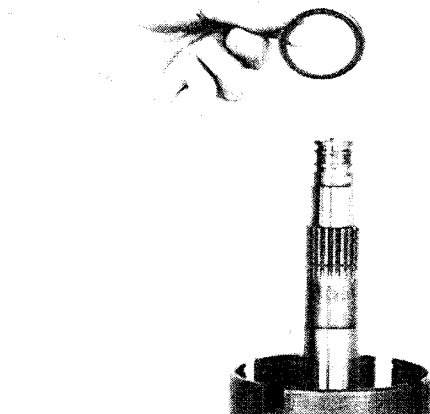


Figure 151

Remove retainer ring retainer.



Figure 152

Remove disc springs. **Note:** See page 104.

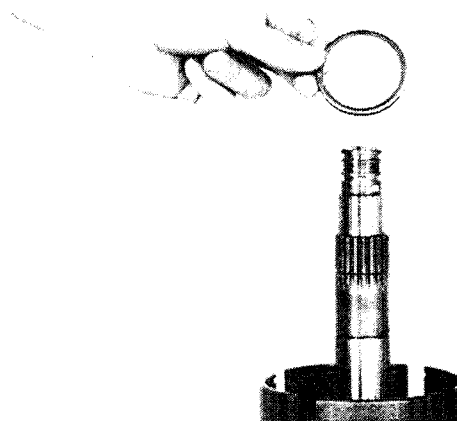


Figure 153

Remove clutch piston wear plate.

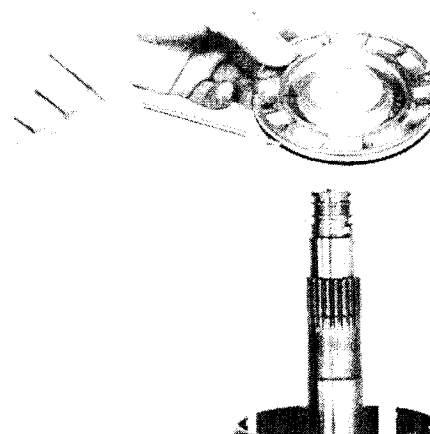


Figure 154

Remove clutch piston.

DISASSEMBLY OF 3RD CLUTCH



Figure 155

Remove thrust washer retainer ring. Remove outer thrust washer, thrust bearing, and inner thrust washer.

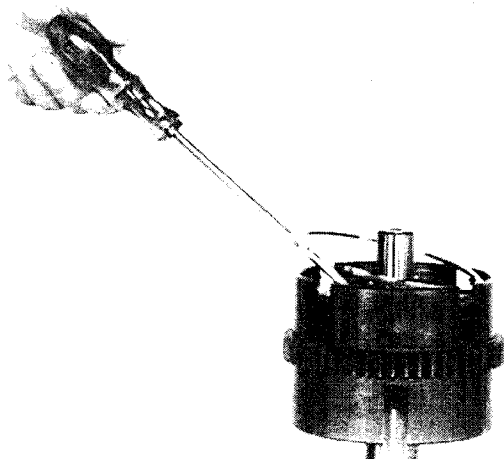


Figure 156
Remove end plate retainer ring.

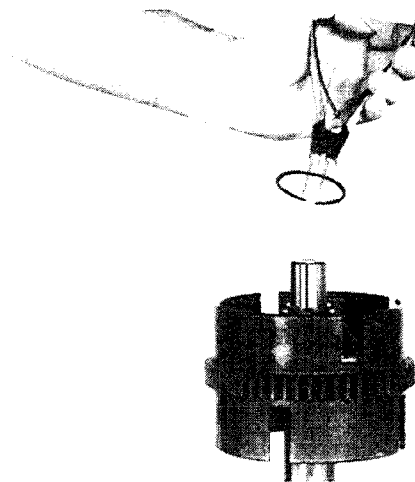


Figure 159
Compress disc springs and remove retainer ring.

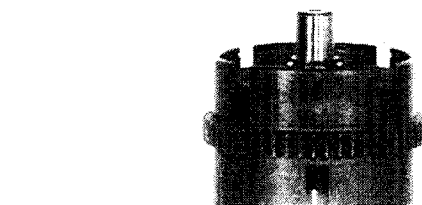
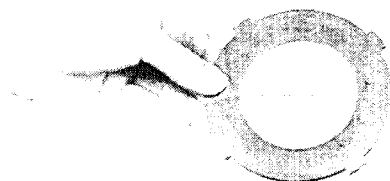


Figure 157
Remove end plate.

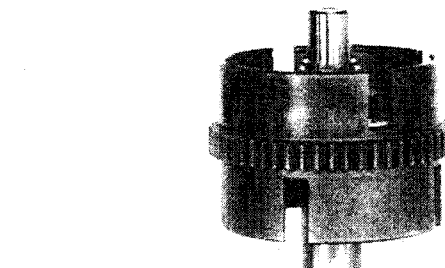



Figure 160
Remove retainer ring retainer.

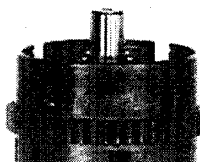


Figure 158
Remove clutch discs.

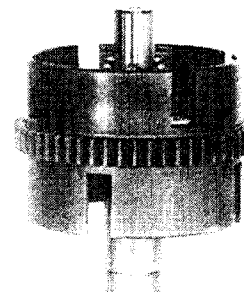


Figure 161
Remove disc springs. **Note:** See page 104.

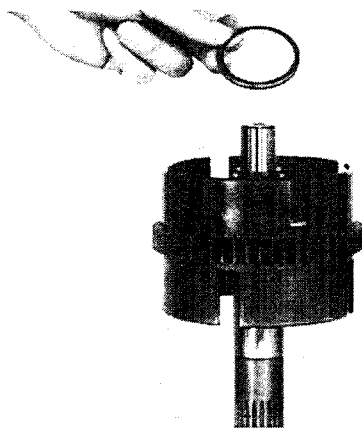


Figure 162
Remove clutch piston wear plate.

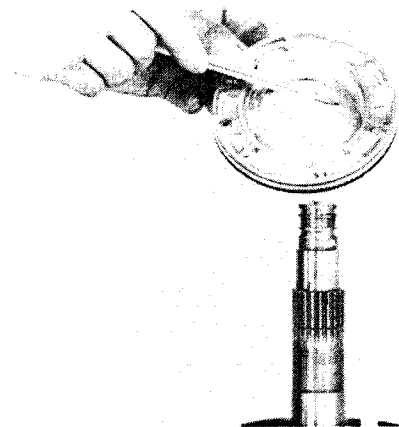


Figure 163
Remove clutch piston.

REASSEMBLY OF 4TH CLUTCH
(See cleaning and inspection page.)
(For 3 speed, proceed to Figure 183.)

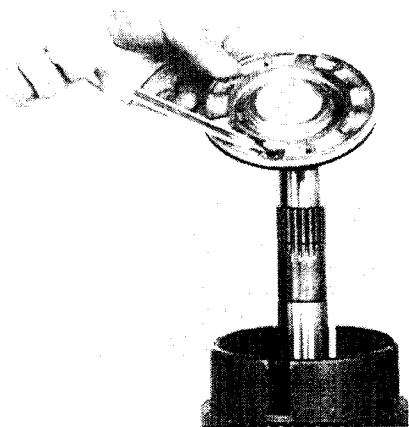


Figure 164
Clutch piston bleed ball must be clean and free of any foreign material.

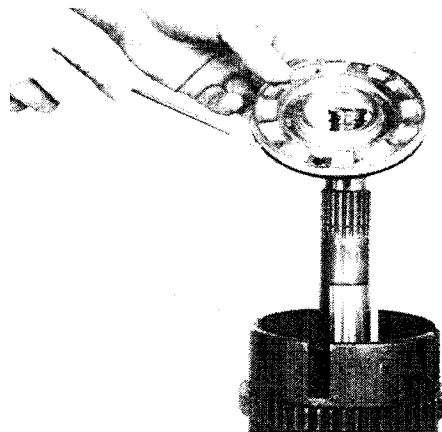


Figure 165
Install inner and outer clutch piston seal rings. Size inner ring as explained in Figure 93. Install clutch piston in clutch drum. Use caution as not to damage sealing rings.

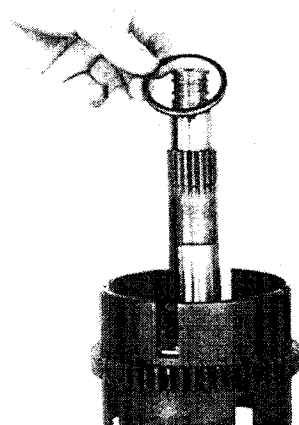


Figure 166
Install clutch piston wear plate.

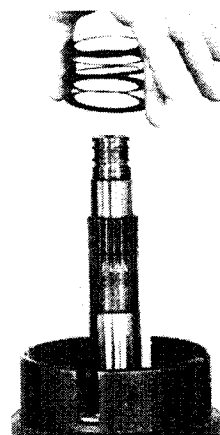


Figure 167
Install piston return disc springs. First spring with large diameter of bevel toward wear plate. Alternate five (5) springs. **Note:** See page 104.

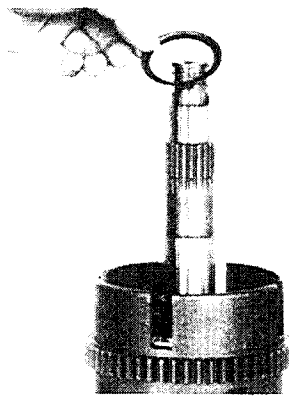


Figure 168

Position return spring ring retainer on clutch shaft.

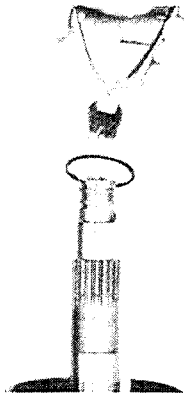


Figure 169

Start ring on shaft with snap ring pliers.

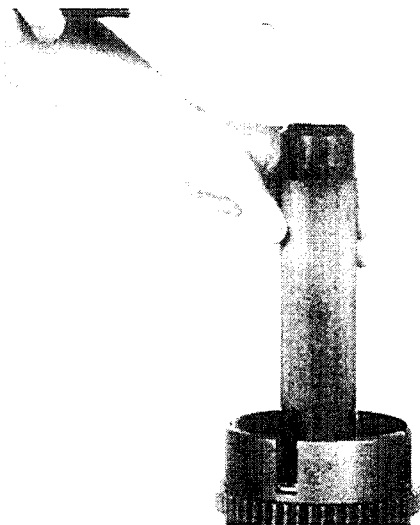


Figure 170

Use a sleeve with the proper inner diameter to fit over shaft and against retainer ring. A sharp blow with a soft hammer will compress springs and seat retainer ring. Be sure ring is in full position in groove.

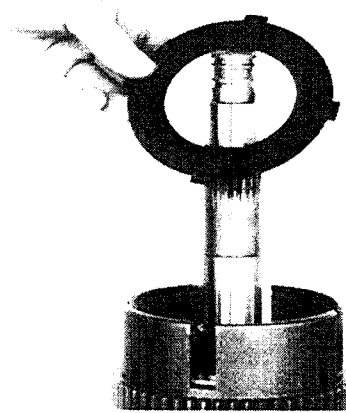


Figure 171

Install first steel (outer) clutch disc.

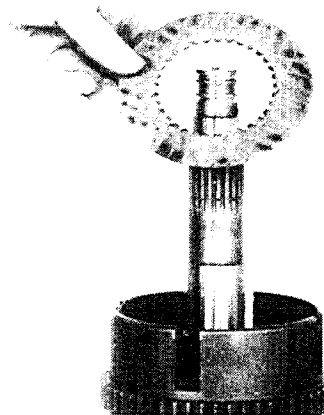


Figure 172

Install first friction (inner) clutch disc. Alternate steel and friction until six (6) steel and six (6) friction discs are in position.

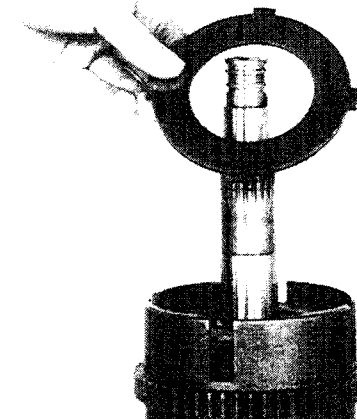


Figure 173

Install clutch disc end plate.

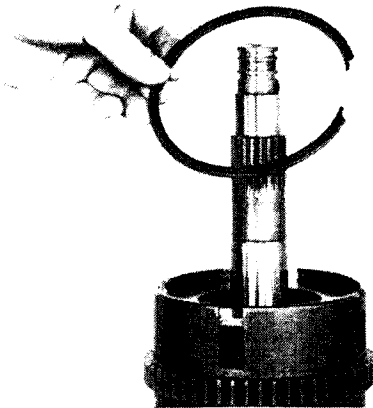


Figure 174

Install end plate retainer ring.

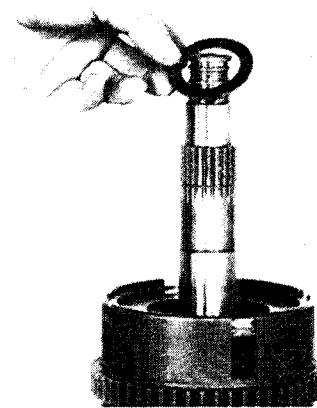


Figure 175

Position thrust bearing inner washer on clutch shaft.

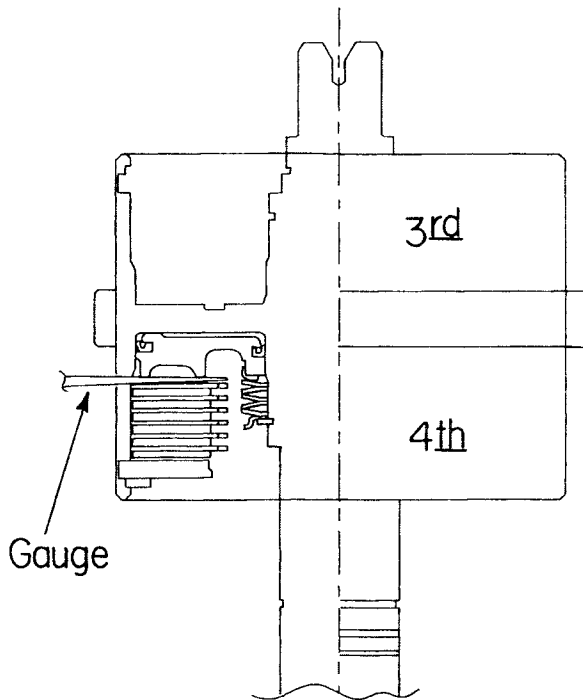


Figure 174a

NOTE: 4th (high) clutch pack must be checked for clutch disc clearance.

Stand the clutch assembly on end. The clutch discs on the bottom will fall to the end plate.

Measure the distance between the clutch piston and the first steel disc by inserting a feeler gauge or taper gauge through the slots in the clutch drum.

The required clearance is .048-.108 [1,22-2,74].

If the clearance is greater than .108 [2,74], add one steel disc under the end plate.

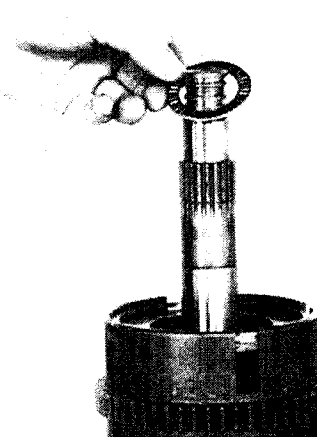


Figure 176

Position thrust bearing on clutch shaft against inner thrust bearing washer.

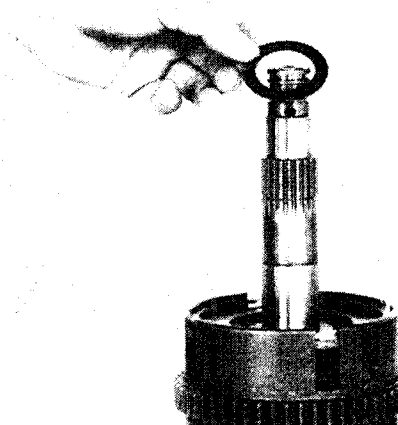


Figure 177

Install outer thrust bearing washer against bearing.

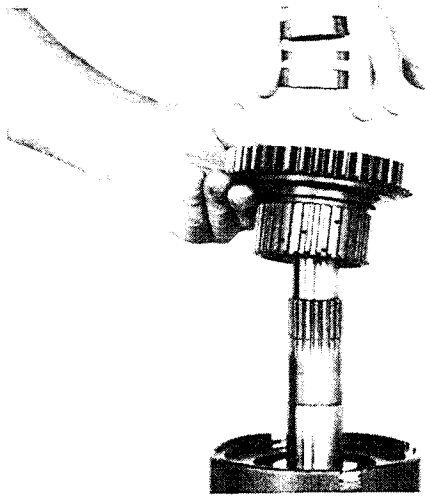


Figure 178

Press one bearing in clutch gear. Install bearing spacer next to bearing. Press second bearing in gear, being certain bearings are pressed flush with face of gears on both sides. Install the clutch gear in the clutch assembly by aligning the clutch hub teeth with the clutch inner discs. Be sure the clutch hub is in full position in the clutch assembly. Do not force this operation.

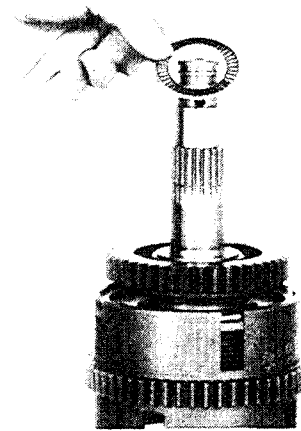


Figure 180

Position thrust bearing on shaft.

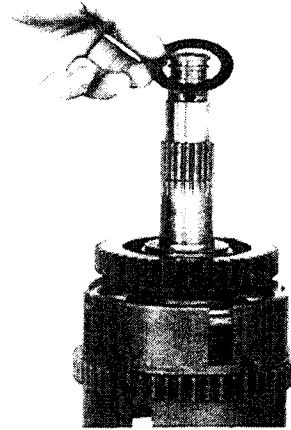


Figure 181

Position outer thrust washer on shaft.

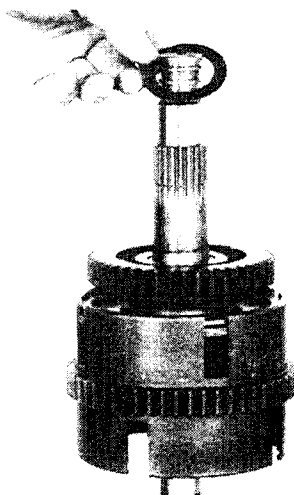


Figure 179

Position inner thrust washer on shaft.

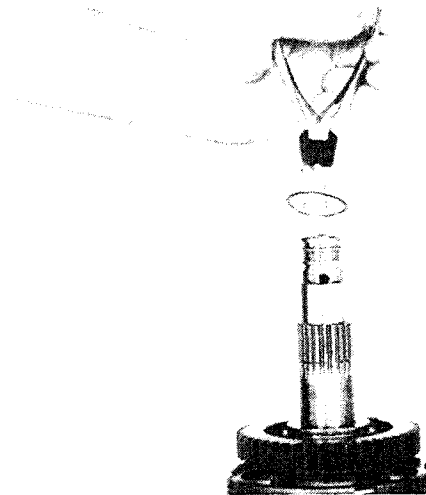


Figure 182

Install thrust washer retainer ring.

NOTE: 3 speed clutch drum not as shown.



Figure 183

Install clutch shaft gear locating ring.

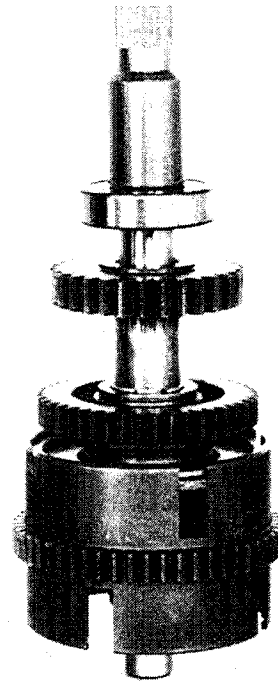


Figure 185

Install clutch shaft front bearing. **NOTE:** Bearing has a shield in it. This shield must be up.

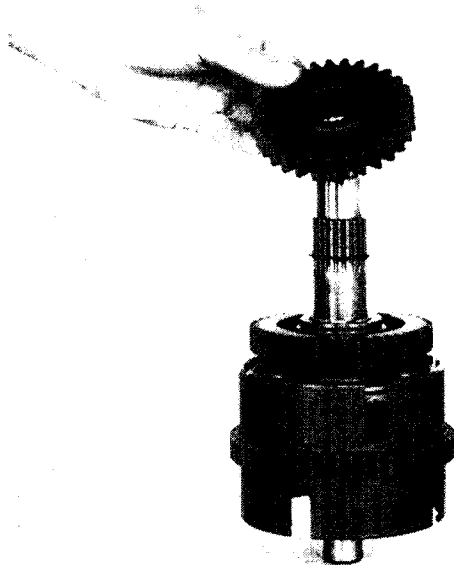


Figure 184

Position gear on clutch shaft.

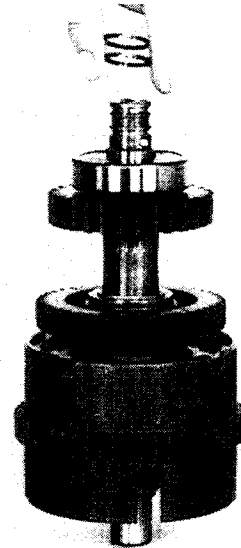


Figure 186

Install clutch shaft oil sealing rings. Grease rings to facilitate reassembly into front housing.

3RD CLUTCH REASSEMBLY

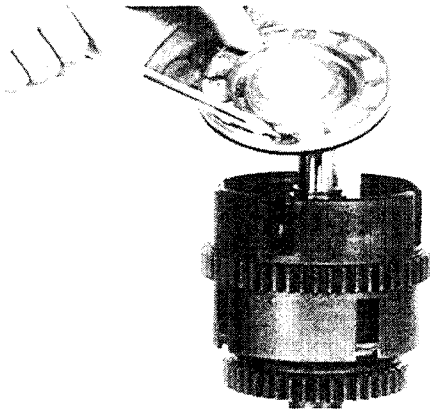


Figure 187

Clutch piston bleed ball must be clean and free of any foreign material.

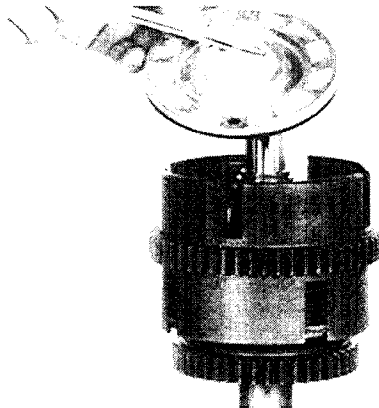


Figure 188

Install inner and outer clutch piston seal rings. Size inner ring as explained in Figure 93. Install clutch piston in clutch drum. Use caution as not to damage sealing rings.

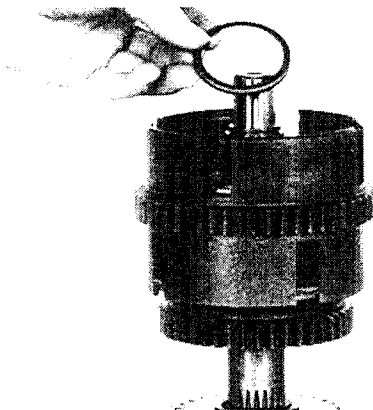


Figure 189

Install clutch piston wear plate.

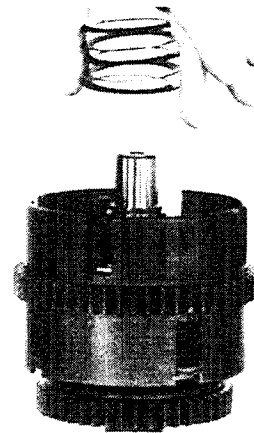


Figure 190

Install piston return disc springs. First spring with large diameter of bevel toward wear plate. Alternate five (5) springs. **Note:** See page 104.

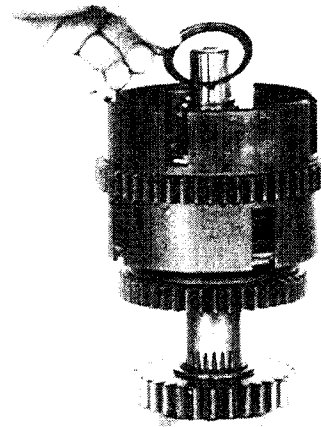


Figure 191

Position return spring ring retainer on clutch shaft.

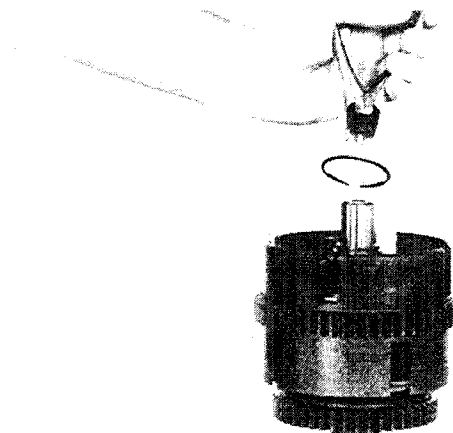


Figure 192

Start ring on shaft with snap ring pliers.

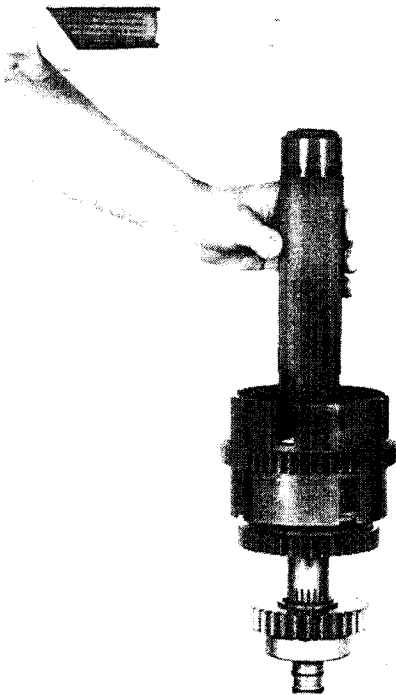


Figure 193

Use a sleeve with the proper inner diameter to fit over shaft and against retainer ring. A sharp blow with a soft hammer will compress springs and seat retainer ring. Be sure ring is in full position in groove.

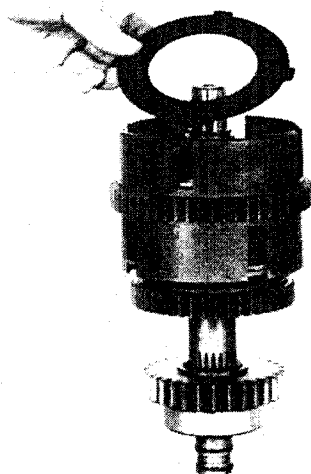


Figure 194

Install first steel (outer) clutch disc.

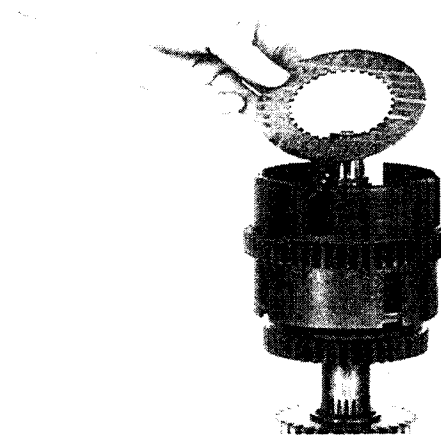


Figure 195

Install first friction (inner) clutch disc. Alternate steel and friction until five (5) steel and five (5) friction discs are in position.

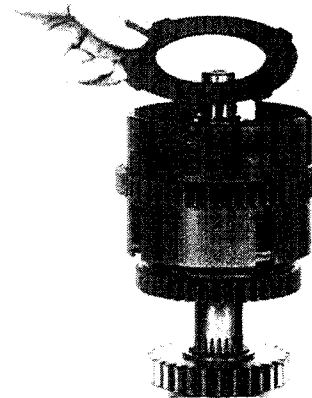


Figure 196

Install clutch disc end plate.

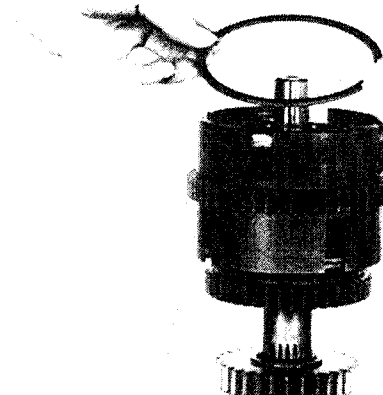


Figure 197

Install end plate retainer ring.

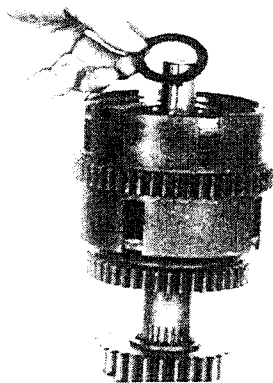


Figure 198

Position thrust bearing inner washer on clutch shaft.

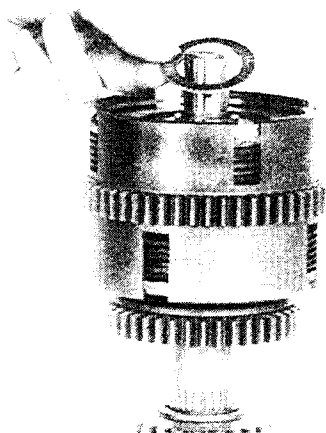


Figure 199

Position thrust bearing on clutch shaft against inner thrust bearing washer.

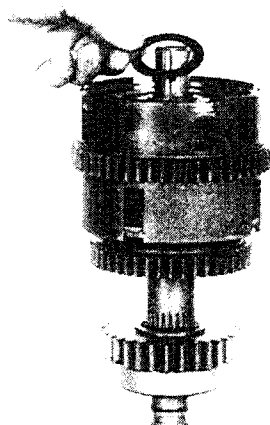


Figure 200

Install outer thrust bearing washer against thrust bearing. Install thrust washer retainer ring.

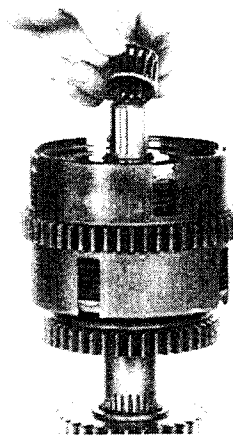


Figure 201

Install 3rd clutch pilot bearing on clutch shaft. A coat of high quality grease will hold pilot bearing in position.

DISASSEMBLY AND REASSEMBLY OF FORWARD AND REVERSE CLUTCHES

NOTE: A 3 speed transmission will not have external gear teeth on the forward and reverse clutch drum.

REVERSE CLUTCH BEING DISASSEMBLED

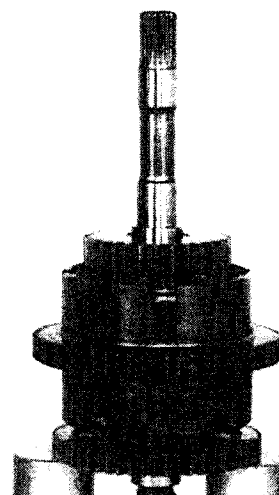


Figure 202

Remove outer thrust washer, thrust bearing, and inner thrust washer.

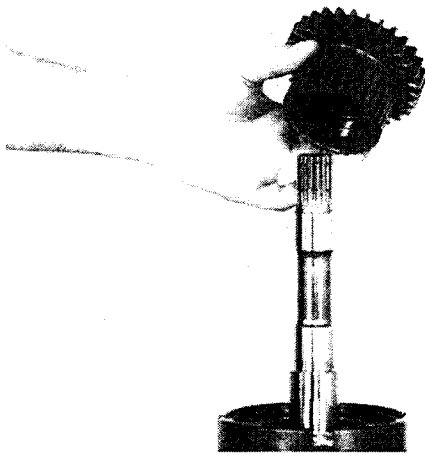


Figure 203
Remove clutch gear and disc hub.

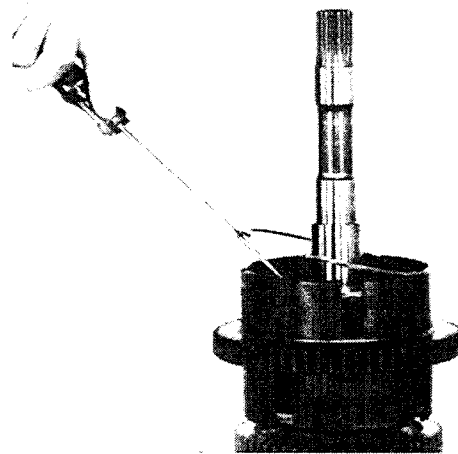


Figure 206
Remove end plate retainer ring.

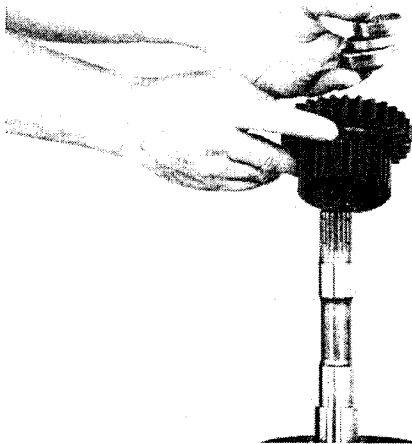


Figure 204
Remove bearings and spacer from clutch gear.

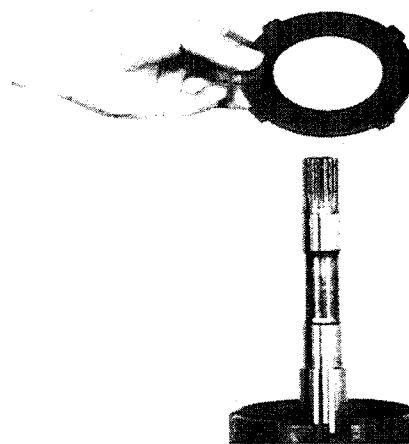


Figure 207
Remove end plate.

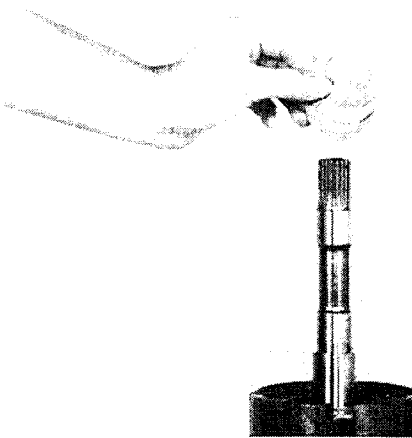


Figure 205
Remove outer thrust washer, thrust bearing, and inner thrust washer.

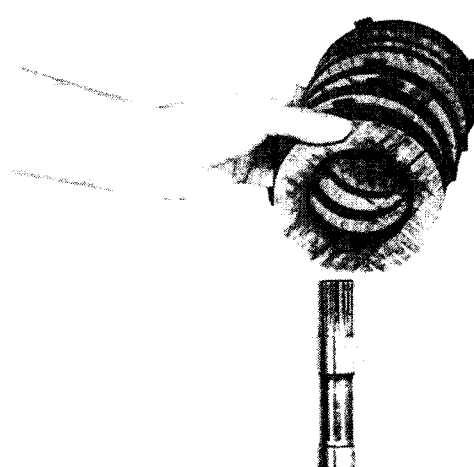


Figure 208
Remove clutch discs.

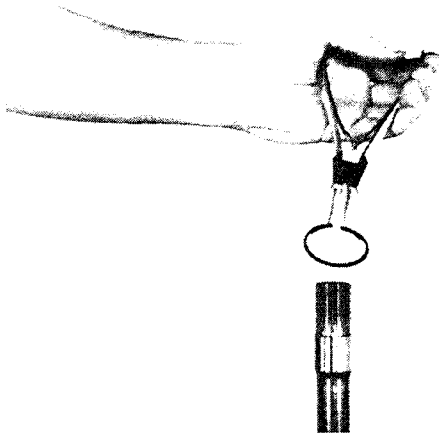


Figure 209
Compress disc springs and remove retainer ring.

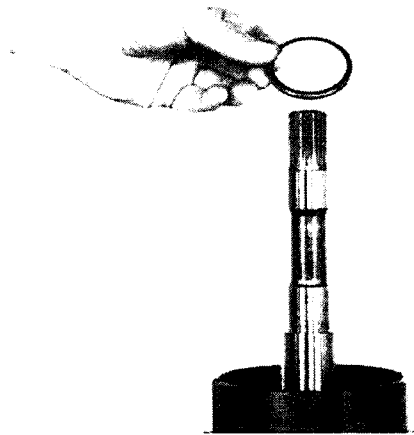


Figure 212
Remove clutch piston wear plate.

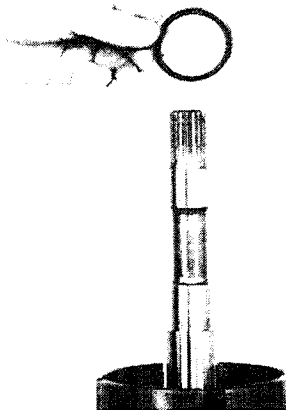


Figure 210
Remove retainer ring retainer.

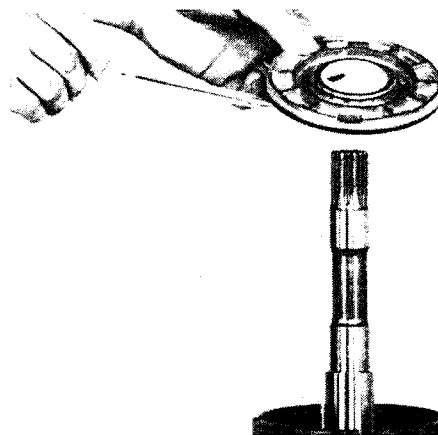


Figure 213
Remove clutch piston.

DISASSEMBLY OF FORWARD CLUTCH

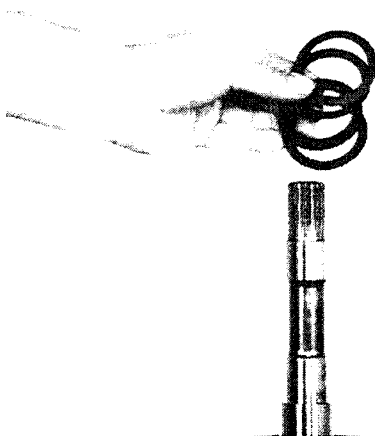


Figure 211
Remove disc springs. **Note:** See page 104.

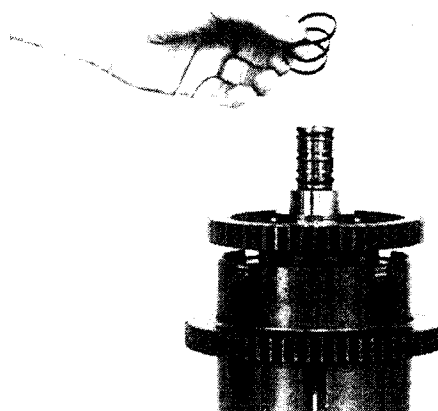


Figure 214
Remove clutch shaft oil sealing rings.

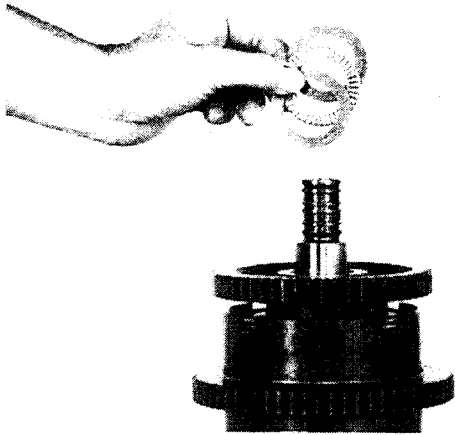


Figure 215

Remove outer thrust washer, thrust bearing, and inner thrust washer.

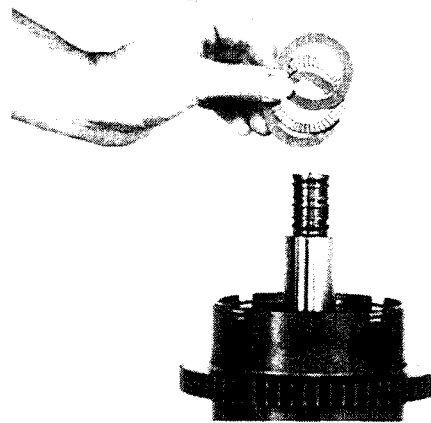


Figure 218

Remove outer thrust washer, thrust bearing, and inner thrust washer.

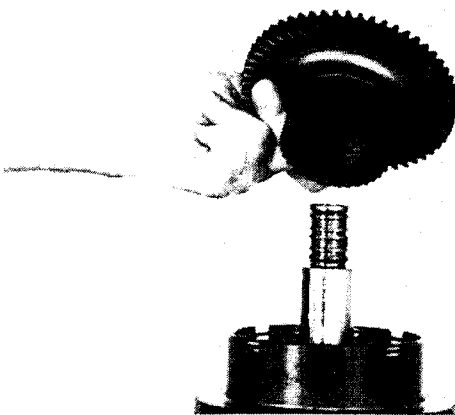


Figure 216

Remove clutch gear and disc hub.

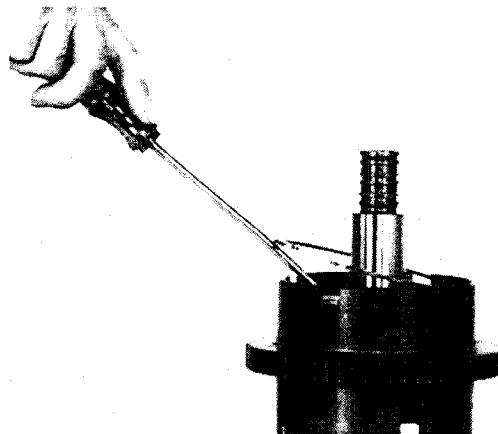


Figure 219

Remove end plate retainer ring.

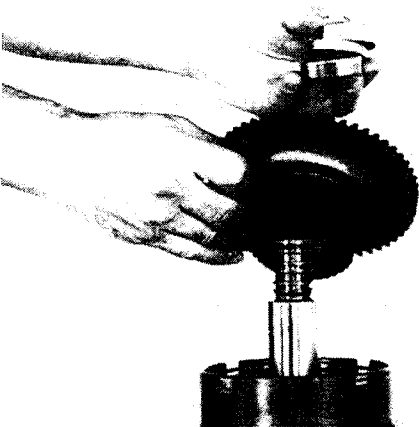


Figure 217

Remove bearings and spacer from clutch gear.

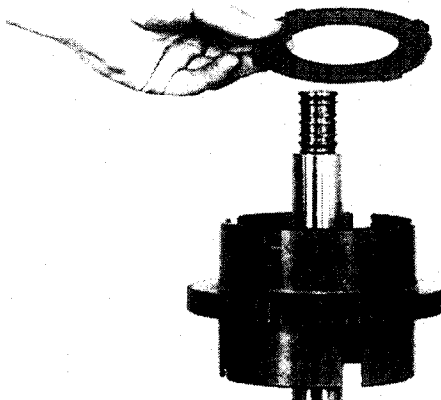


Figure 220

Remove end plate.

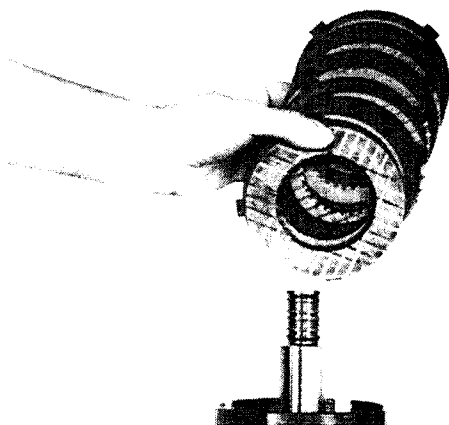


Figure 221
Remove clutch discs.

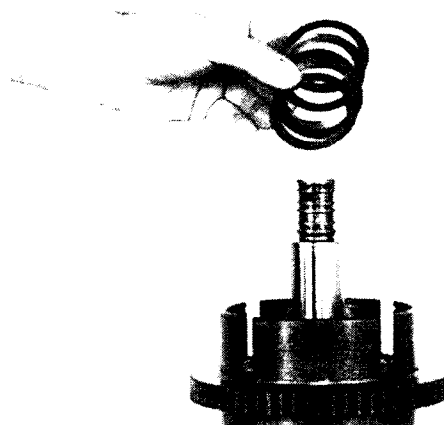


Figure 224
Remove disc springs. **Note:** See page 104.

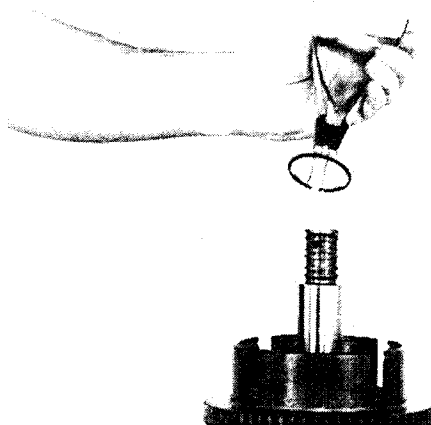


Figure 222
Compress disc springs and remove retainer ring.

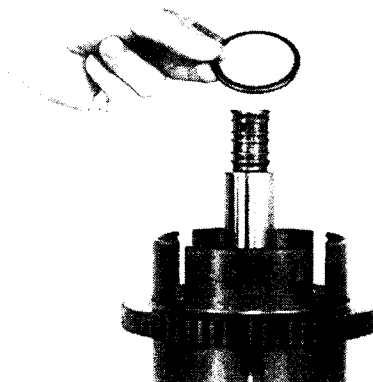


Figure 225
Remove clutch piston wear plate.

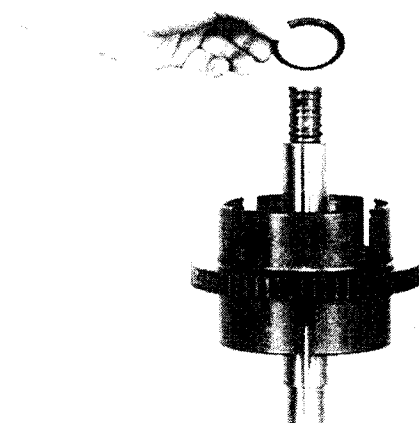


Figure 223
Remove retainer ring retainer.

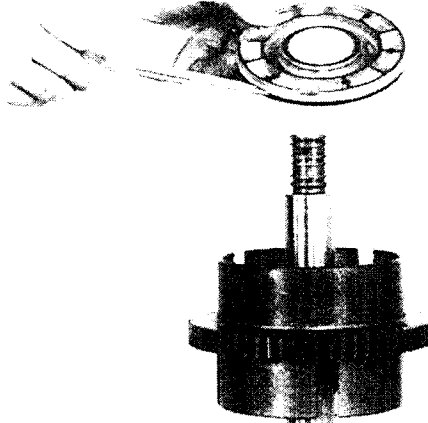


Figure 226
Remove clutch piston.

REASSEMBLY OF FORWARD CLUTCH
(See cleaning and inspection page.)

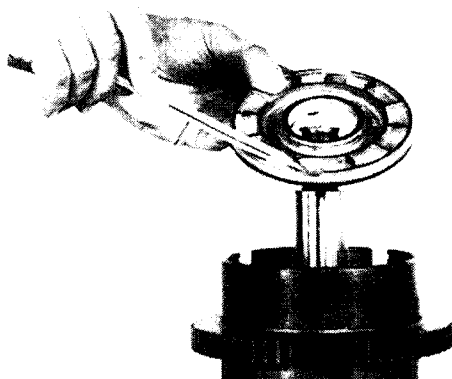


Figure 227

Clutch piston bleed orifice must be clean and free of any foreign material.

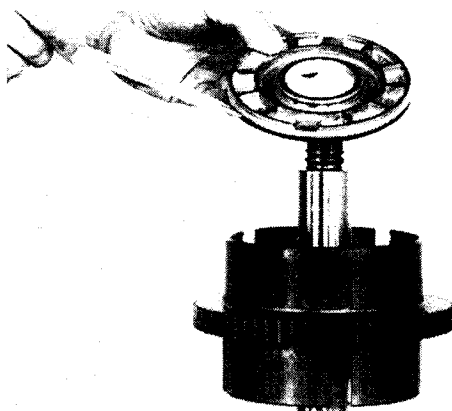


Figure 228

Install inner and outer clutch piston seal rings. Size inner ring as explained in Figure 93. Install clutch piston in clutch drum. Use caution as not to damage sealing rings.

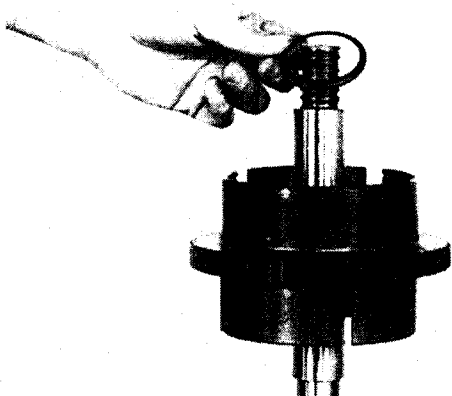


Figure 229

Install clutch piston wear plate.

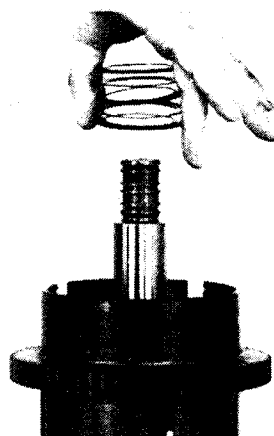


Figure 230

Install piston return disc springs. First spring with large diameter of bevel toward wear plate. Alternate five (5) springs. **Note:** See page 104.

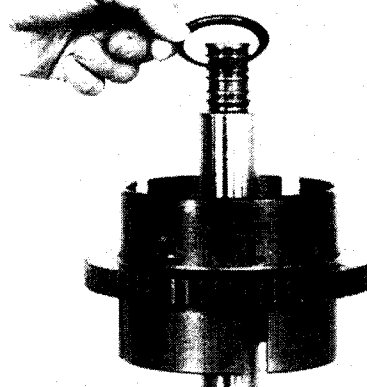


Figure 231

Position return spring ring retainer on clutch shaft.

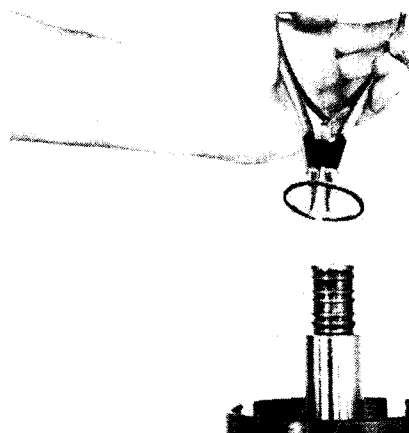


Figure 232

Start ring on clutch with snap ring pliers.

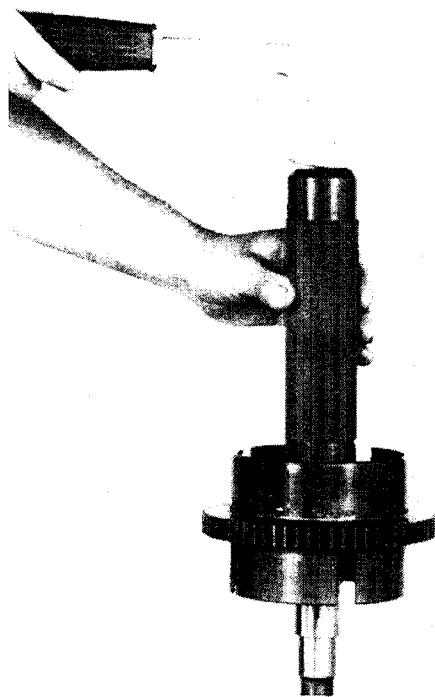


Figure 233

Use a sleeve with the proper inner diameter to fit over shaft and against retainer ring. A sharp blow with a soft hammer will compress springs and seat retainer ring. Be sure ring is in full position in groove.

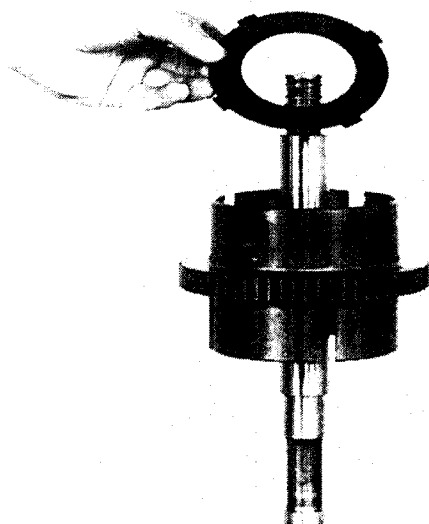


Figure 234

Install first steel (outer) clutch disc.

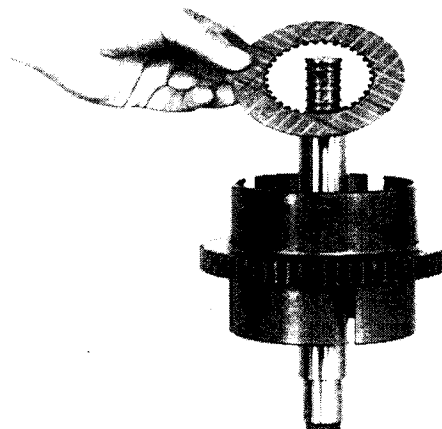


Figure 235

Install first friction (inner) clutch disc. Alternate steel and friction until six (6) steel and six (6) friction discs are in position.

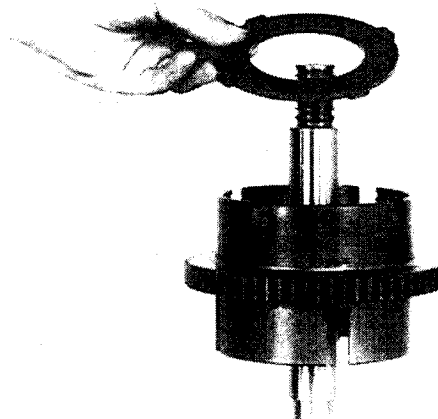


Figure 236

Install clutch disc end plate.

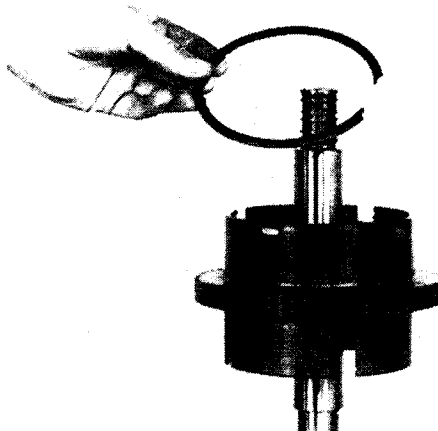


Figure 237

Install end plate retainer ring.

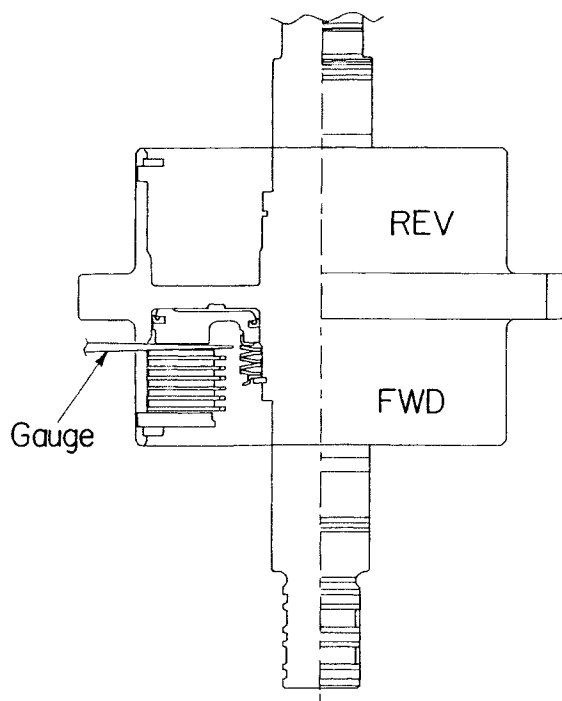


Figure 237a

NOTE: Forward clutch pack must be checked for clutch disc clearance.

Stand the clutch assembly on end. The clutch discs on the bottom will fall to the end plate.

Measure the distance between the clutch piston and the first steel disc by inserting a feeler gauge or taper gauge through the slots in the clutch drum.

The required clearance is .048-.108 [1,22-2,74].

If the clearance is greater than .108 [2,74], add one steel disc under the end plate.

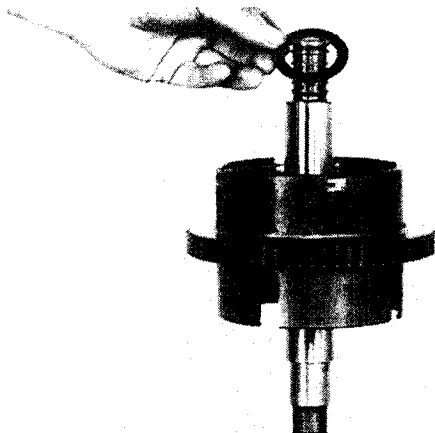


Figure 238

Position thrust bearing inner washer on clutch shaft.

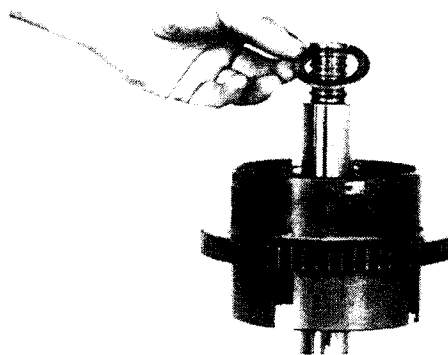


Figure 239

Position thrust bearing on clutch shaft against inner thrust bearing washer.

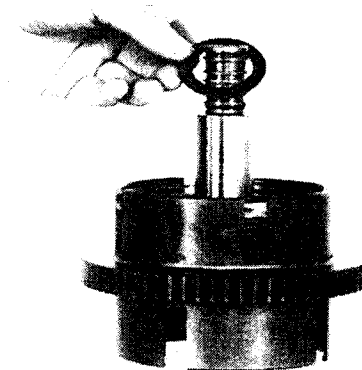


Figure 240

Install outer thrust bearing washer against thrust bearing.

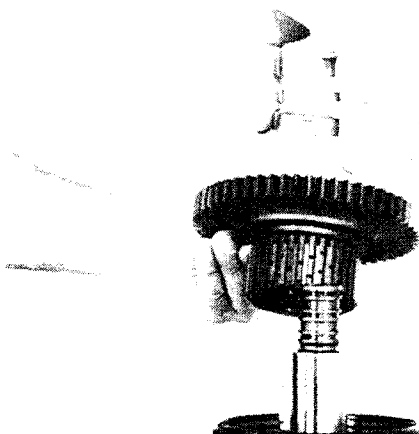


Figure 241

Press one bearing in clutch gear, flush with face of gear. Install bearing spacer next to bearing. Press second bearing in gear, flush with face of gear. Install the clutch gear in the clutch assembly by aligning the clutch hub teeth with the clutch inner discs. Be sure the clutch hub is in full position in the clutch assembly. Do not force this operation.

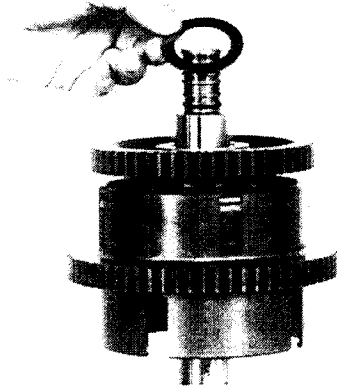


Figure 242

Position inner thrust washer on shaft.

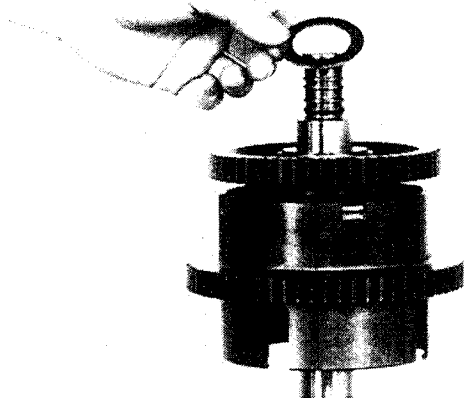


Figure 243

Position thrust bearing on shaft.

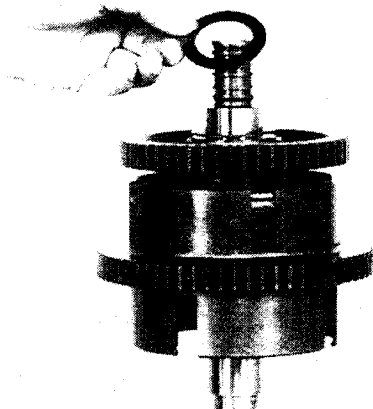


Figure 244

Position outer thrust washer on shaft.

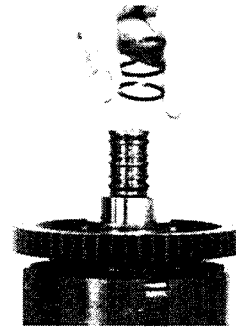


Figure 245

Install clutch shaft oil sealing rings. Grease rings to facilitate reassembly into front housing.

REVERSE CLUTCH REASSEMBLY

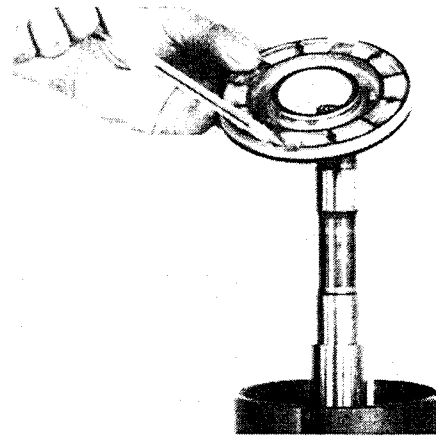


Figure 246

Clutch piston bleed orifice must be clean and free of any foreign material.

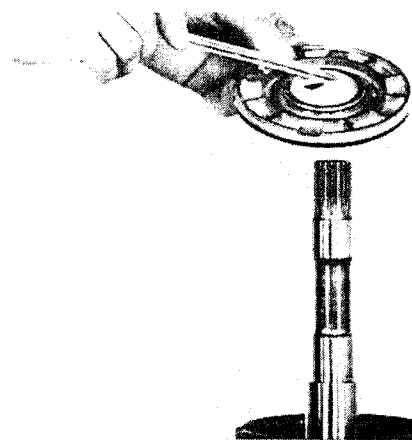


Figure 247

Install inner and outer clutch piston seal rings. Size inner ring as explained in Figure 93. Install clutch piston in clutch drum. Use caution as not to damage sealing rings.

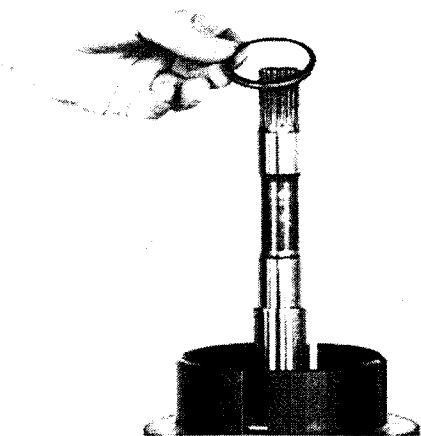


Figure 248

Install clutch piston wear plate.

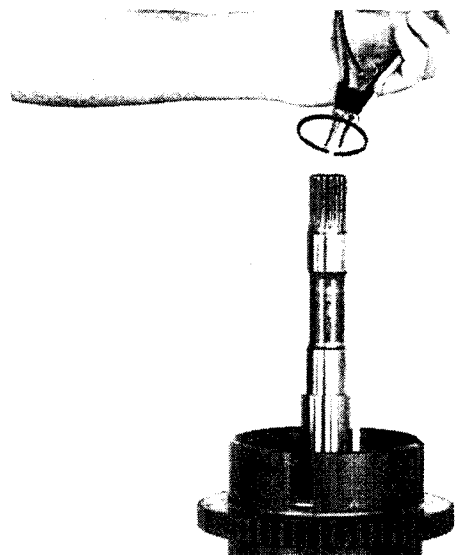


Figure 251

Start ring on shaft with snap ring pliers.

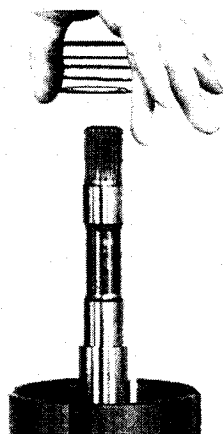


Figure 249

Install piston return disc springs. First spring with large diameter of bevel toward wear plate. Alternate five (5) springs. **Note:** See page 104.

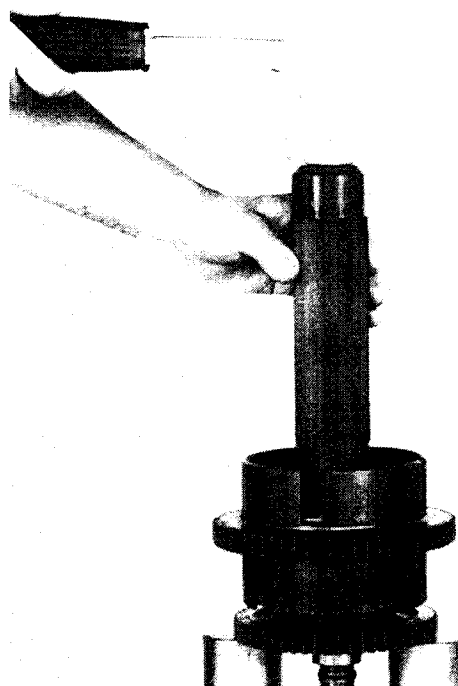


Figure 252

Use a sleeve with the proper inner diameter to fit over shaft and against retainer ring. A sharp blow with a soft hammer will compress springs and seat retainer ring. Be sure ring is in full position in groove.

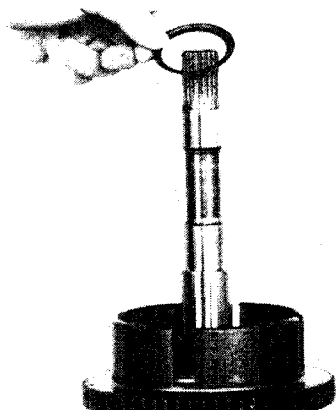


Figure 250

Position return spring ring retainer on clutch shaft.

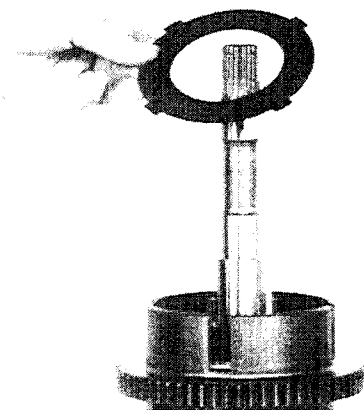


Figure 253

Install first steel (outer) clutch disc.

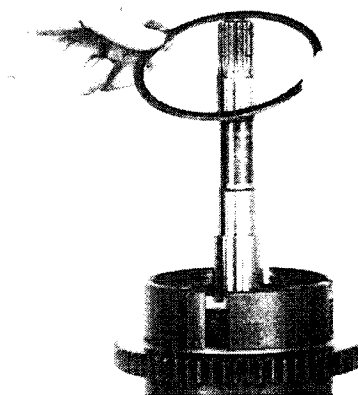


Figure 256

Install end plate retainer ring.

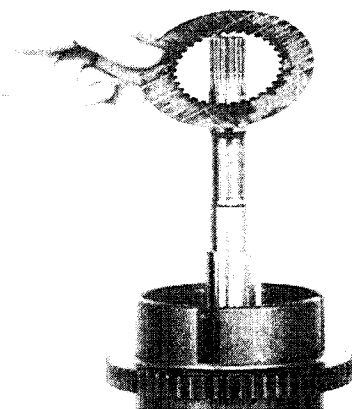


Figure 254

Install first friction (inner) clutch disc. Alternate steel and friction until six (6) steel and six (6) friction discs are in position.

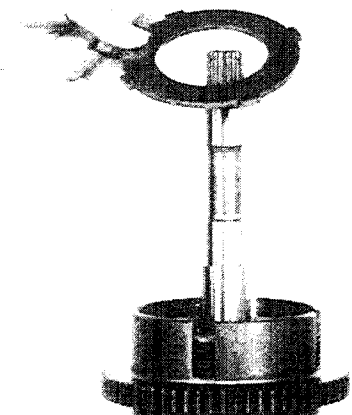


Figure 255

Install clutch disc end plate.

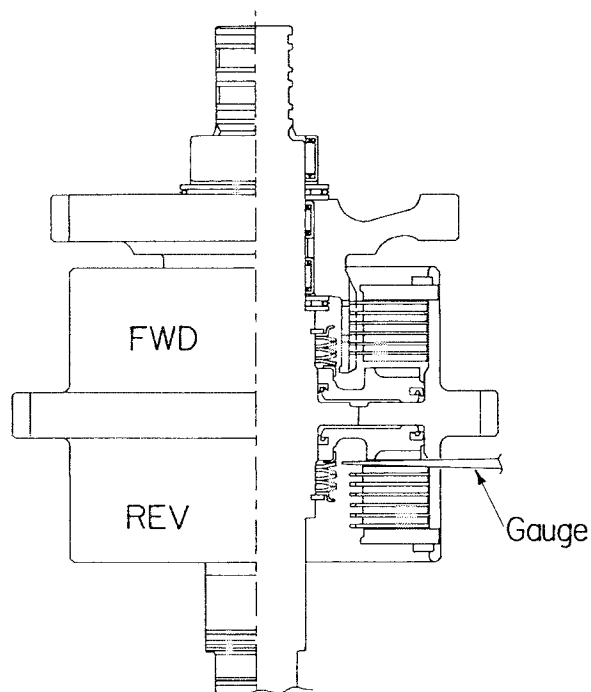


Figure 256a

NOTE: Reverse clutch pack must be checked for clutch disc clearance.

Stand the clutch assembly on end. The clutch disc on the bottom will fall to the end plate.

Measure the distance between the clutch piston and the first steel disc by inserting a feeler gauge or taper gauge through the slots in the clutch drum.

The required clearance is .048-.108 [1,22-2,74].

If the clearance is greater than .108 [2,74] add one steel disc under the end plate.

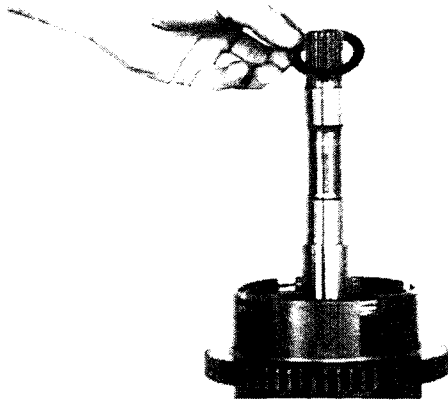


Figure 257

Position thrust bearing inner washer on clutch shaft.

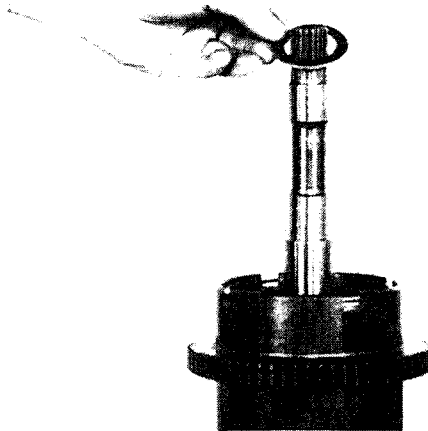


Figure 258

Position thrust bearing on clutch shaft against inner thrust bearing washer.

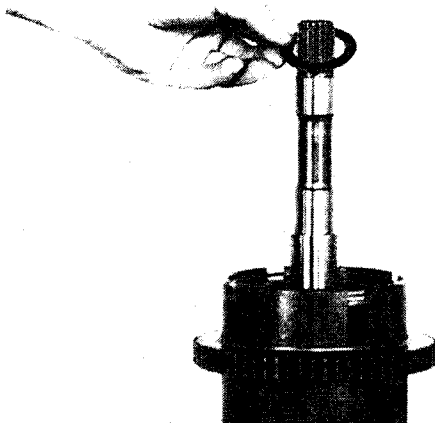


Figure 259

Install outer thrust bearing washer against bearing.

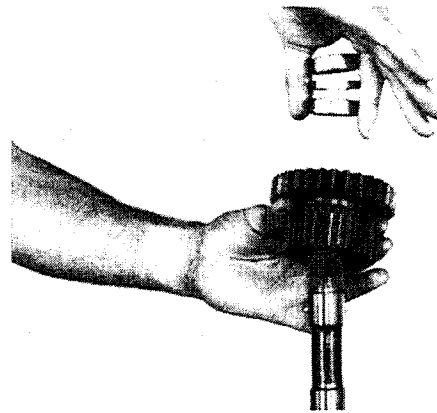


Figure 260

Press one bearing in clutch gear, flush with face of gear. Install bearing spacer next to bearing. Press second bearing in gear, flush with face of gear. Install the clutch gear in the clutch assembly by aligning the clutch hub teeth with the clutch inner discs. Be sure the clutch hub is in full position in the clutch assembly. Do not force this operation.

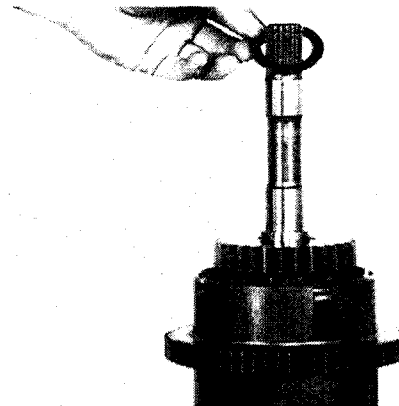


Figure 261

Position inner thrust washer on shaft.

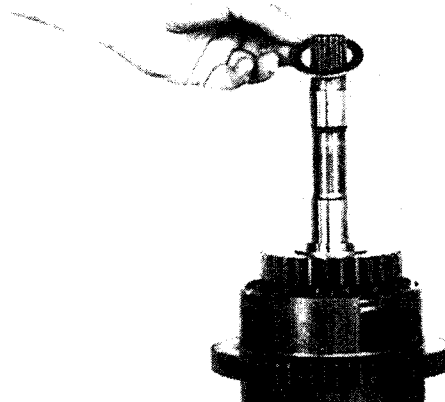


Figure 262

Position thrust bearing on shaft.

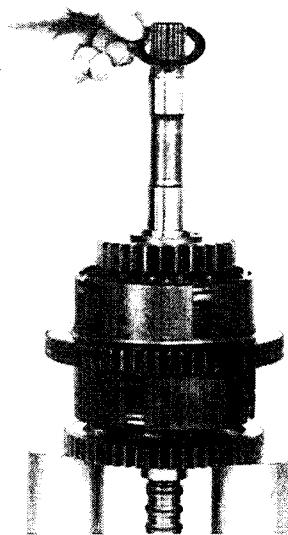


Figure 263

Position outer thrust washer on shaft.

REGULATOR VALVE DISASSEMBLY AND REASSEMBLY

DISASSEMBLY

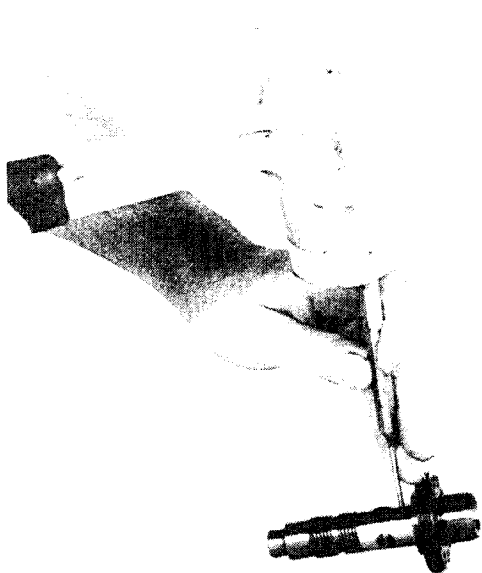


Figure 264

Tap pin from regulator valve sleeve. Use caution as valve spool is under spring pressure.

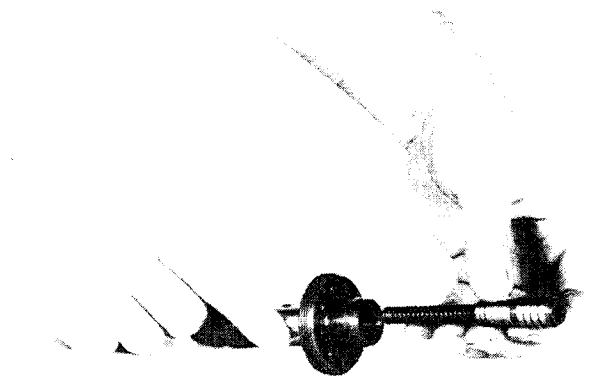


Figure 265

Remove regulator valve piston and pressure regulator valve spring.

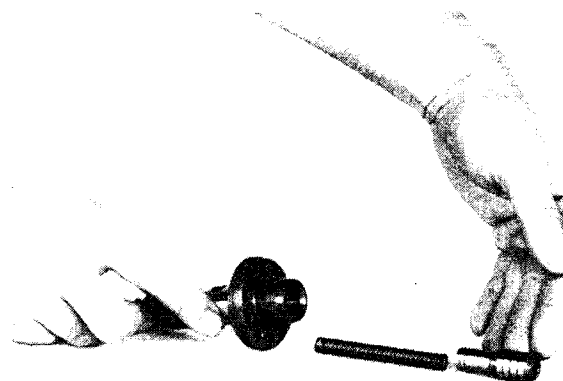


Figure 266

Spring and piston removed.

REASSEMBLY (See cleaning and inspection page.)

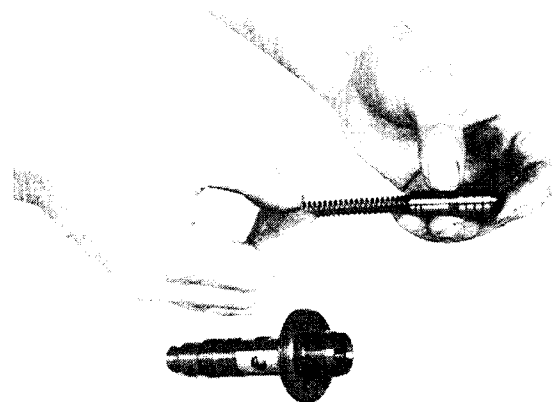


Figure 267

Position pressure regulator valve spring into regulator valve piston.

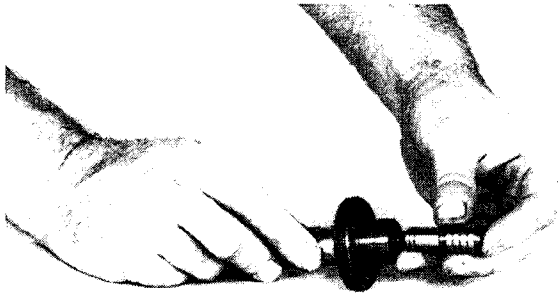


Figure 268

Install pressure regulator valve spring and regulator valve piston as an assembly into regulator valve sleeve.

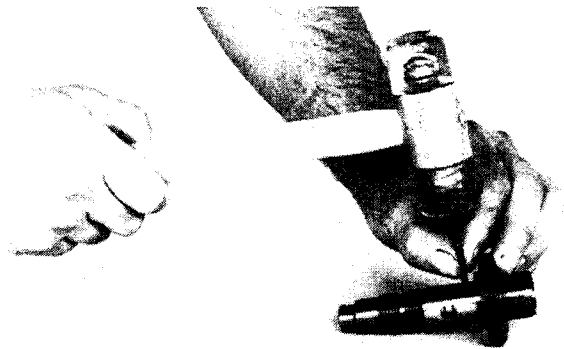


Figure 269

Compress valve spring and valve and install pin into regulator valve sleeve.

DISASSEMBLY AND REASSEMBLY OF DUAL MODULATED VALVE ASSEMBLY

DISASSEMBLY

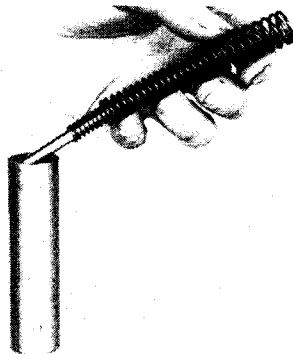


Figure 270

Remove inner, middle, and outer spring and stop pin from modulation housing sleeve. Reference Figure 51.

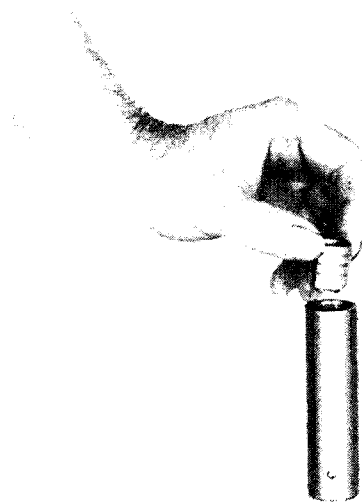


Figure 271

Remove accumulator spool. Reference Figure 51.

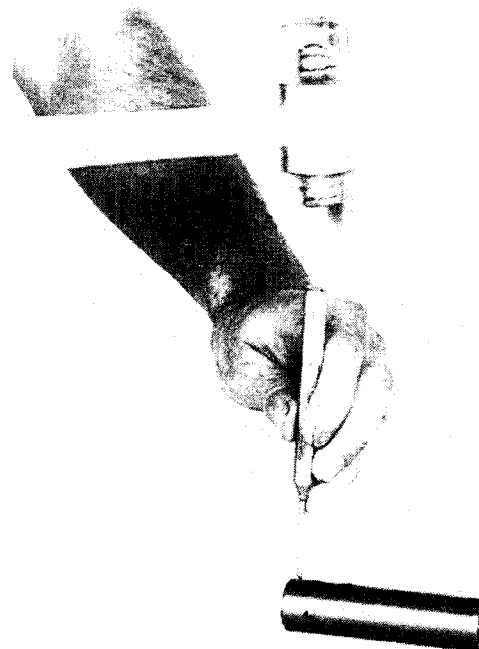


Figure 272

Remove cross pin from sleeve.

NOTE: Some units will have two cross pins the same length. Some units will have two pins of different lengths. The longest pin goes in the bottom hole.

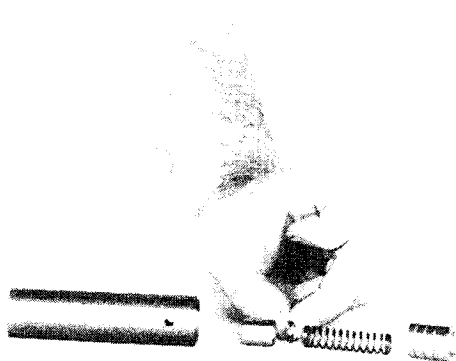


Figure 273

Remove regulator spool, spring, retainer spring, and spacer spring from housing sleeve.

REASSEMBLY

(See cleaning and inspection page.)

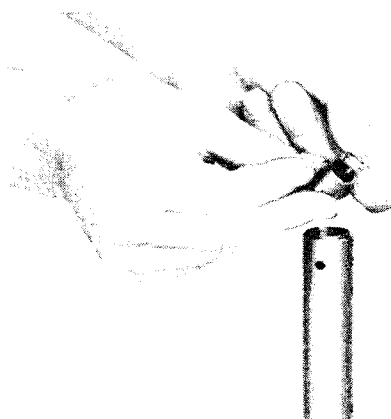


Figure 274

Install spring spacer in spring retainer.

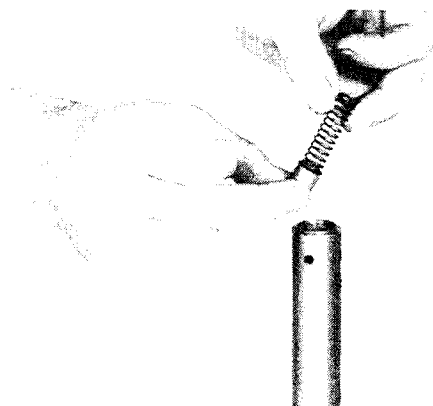


Figure 275

Install spring in spring retainer.



Figure 276

Check orifice in regulator spool to be free and clear of any foreign material.

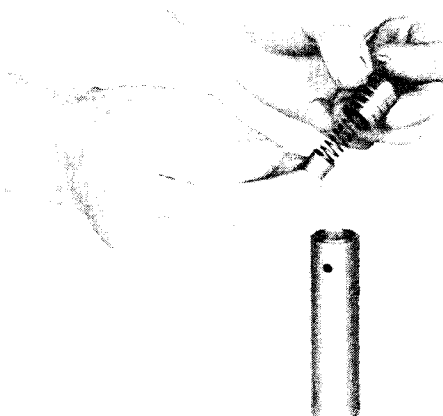


Figure 277

Install spring retainer, spring, and regulator valve in sleeve against inner cross pin.



Figure 278

Compress regulator spool and spring in sleeve far enough to install cross pin.



Figure 279

Install cross pin.

NOTE: Some units will have two cross pins the same length. Some units will have two pins of different lengths. The longest pin goes in the bottom hole.

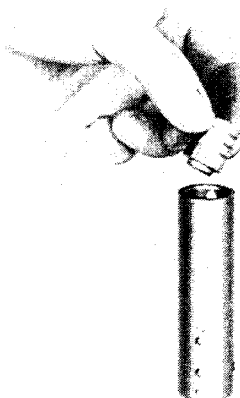


Figure 280

From opposite end, position accumulator spool in sleeve as shown.

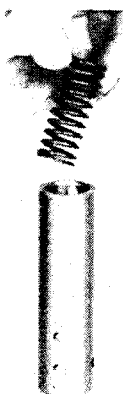


Figure 281

Install outer accumulator spring.

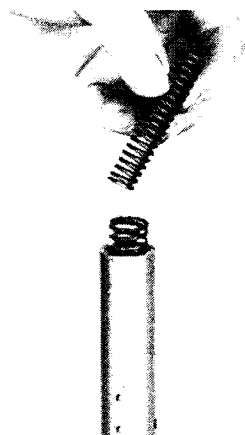


Figure 282

Install middle spring.



Figure 283

Install inner spring.

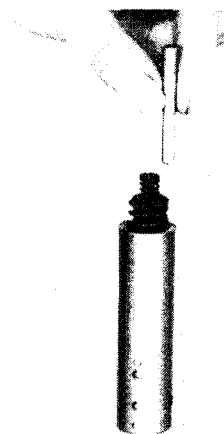


Figure 284

Install stop pin in inner spring.

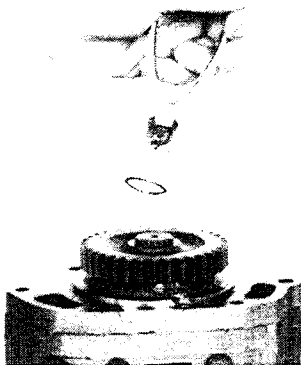


Figure 285

If charging pump or pump drive gear are to be replaced, remove retainer ring and drive gear.

DISASSEMBLY AND REASSEMBLY OF SPACER PLATE

DISASSEMBLY

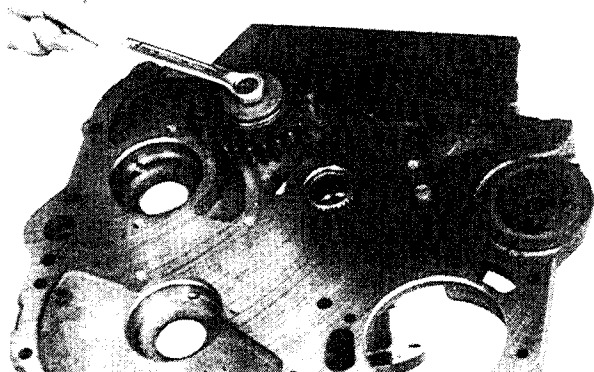


Figure 286

Remove reverse idler gear end plate cap screw and washer.

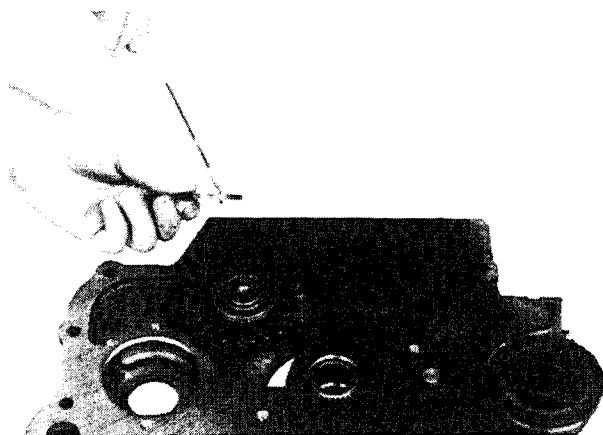


Figure 287

Remove end plate and dowel pin.

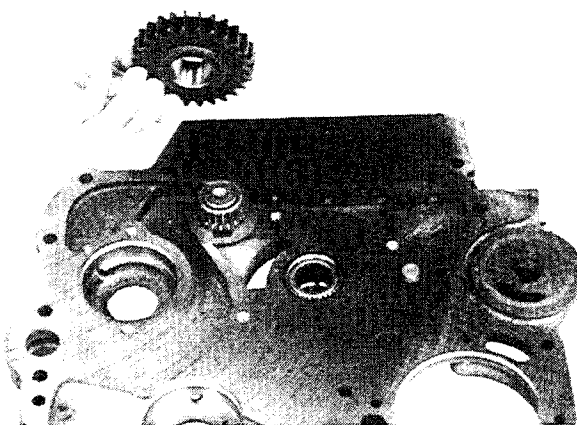


Figure 288

Remove reverse idler gear.

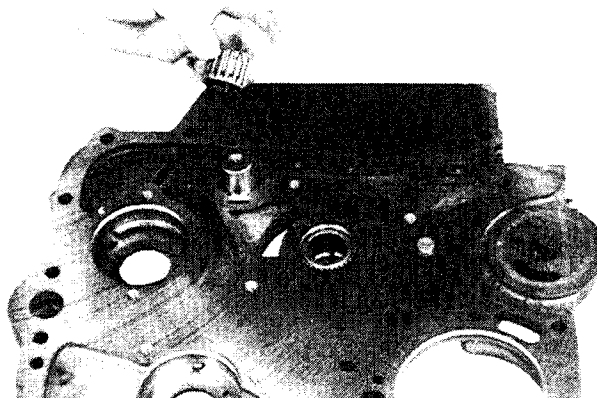


Figure 289

Remove reverse idler gear bearing.

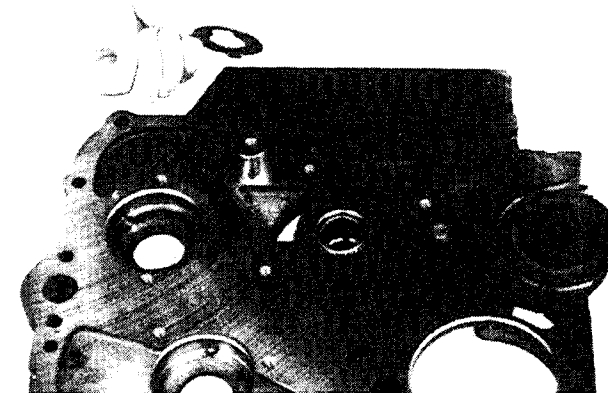


Figure 290

Remove idler gear thrust washer.

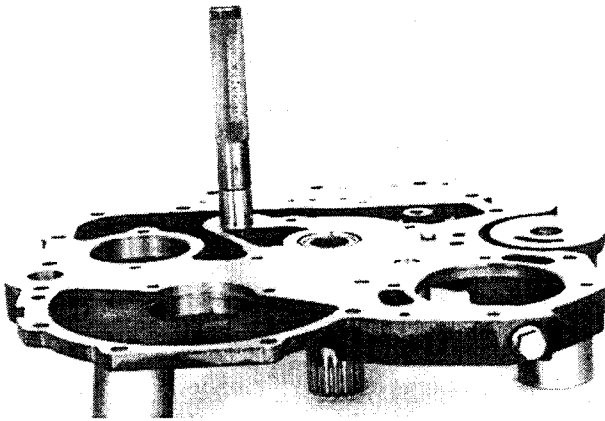


Figure 291

If reverse idler shaft is to be replaced, support spacer plate around idler shaft opening and press idler shaft from spacer. Do not drive on idler shaft as doing so may cause damage to spacer plate.



Figure 294

Tap pump drive idler shaft from spacer plate.

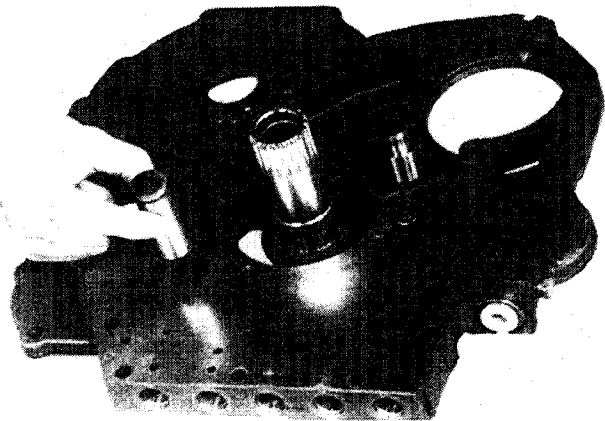


Figure 292

Idler shaft and locating ring removed.

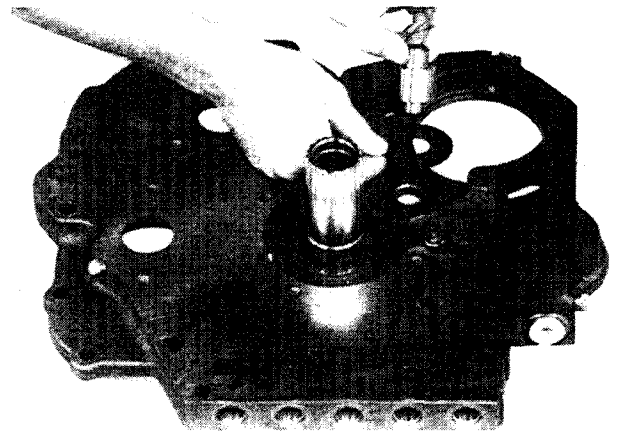


Figure 295

Remove pump drive idler shaft and thrust washer.



Figure 293

Remove locating ring from idler shaft.

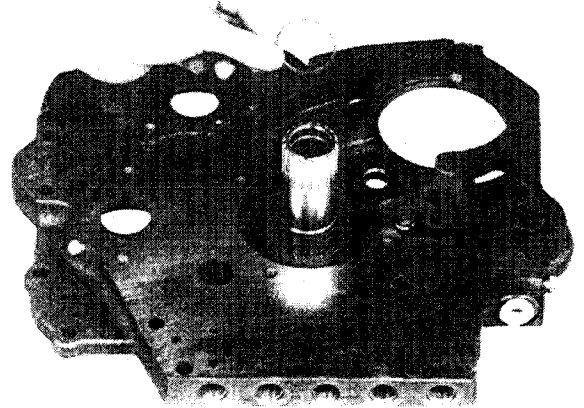


Figure 296

The stator support is held in place by two retaining rings. Remove converter end retainer ring from groove.

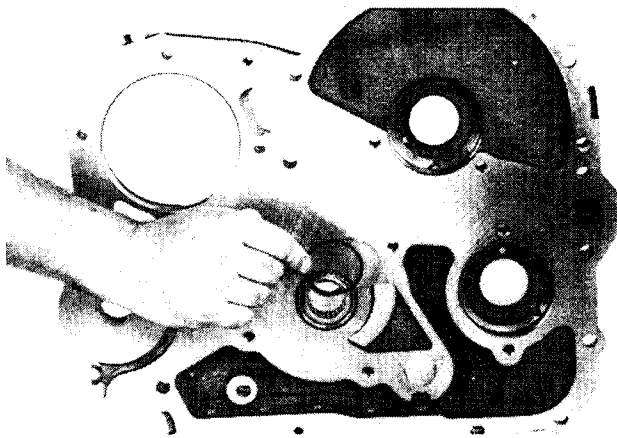


Figure 297

Push support toward transmission side far enough to expose retainer ring. Remove retainer ring.

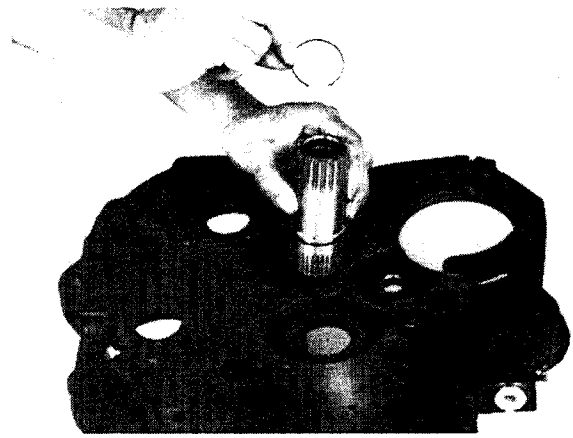


Figure 300

Remove sealing ring expander ring.

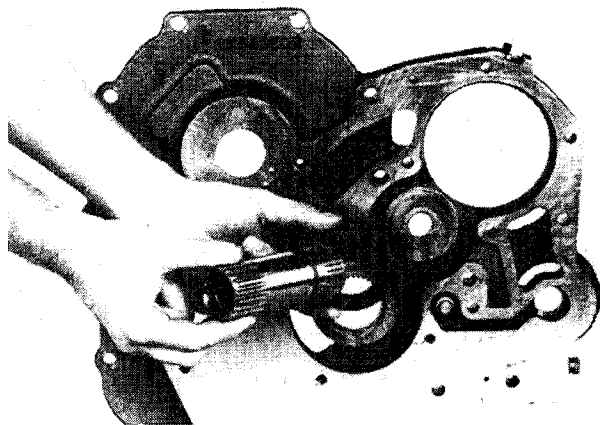


Figure 298

From converter end, remove stator support and thrust washer.



Figure 301

If support bushing or bearing is to be replaced, remove from stator support.

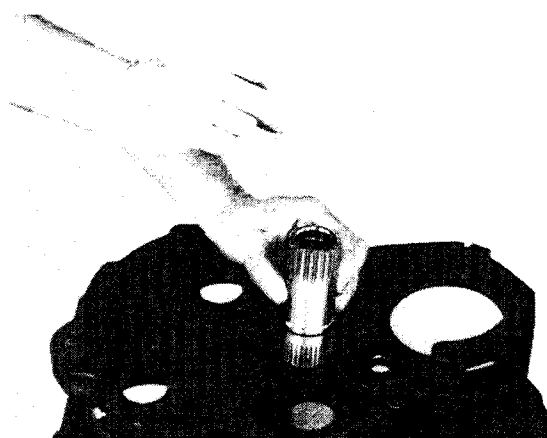


Figure 299

Remove stator support oil sealing ring.



Figure 302

Compress converter safety valve spring and remove retaining washer.

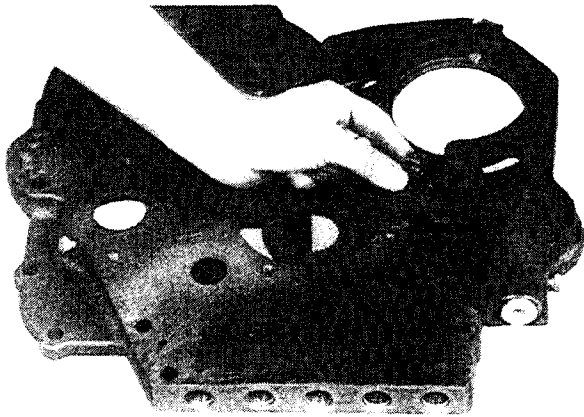


Figure 303

Remove safety valve spring.

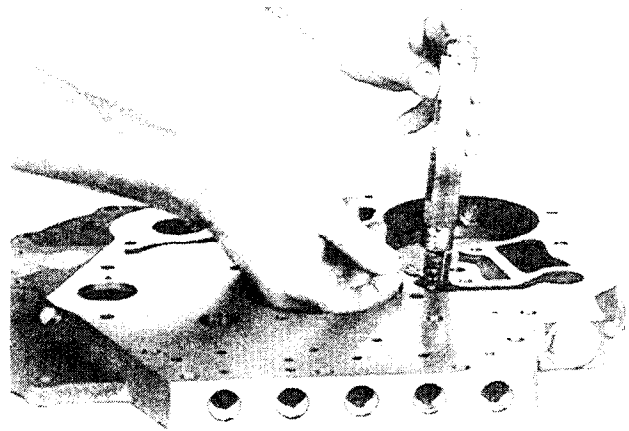


Figure 306

Turn spacer over and position safety valve spring on poppet. Compress spring and install poppet retaining washer. **NOTE:** End of spring must go in recessed side of washer.

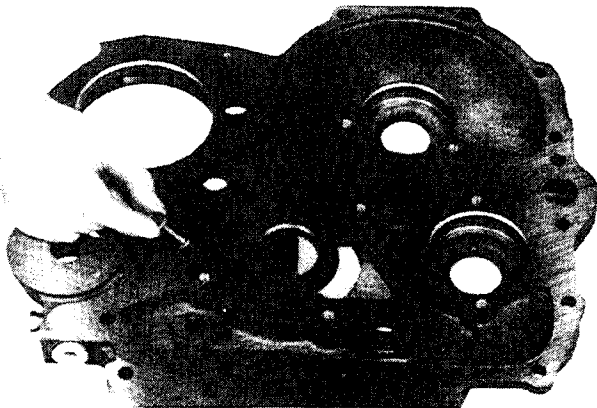


Figure 304

Turn spacer plate over and remove safety valve poppet.

**REASSEMBLY OF SPACER PLATE
(see cleaning and inspection page)**

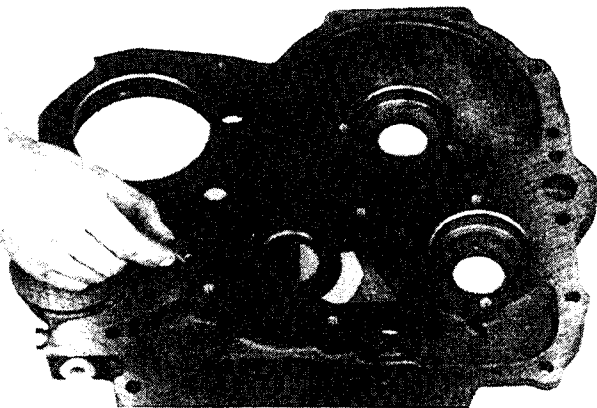


Figure 305

From transmission side of spacer plate, position converter safety valve poppet in bore in spacer.

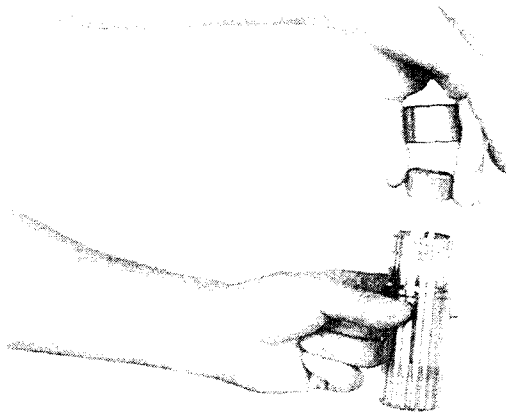


Figure 307

If stator support bushing was removed, install bushing in support. Install needle bearing in stator support.

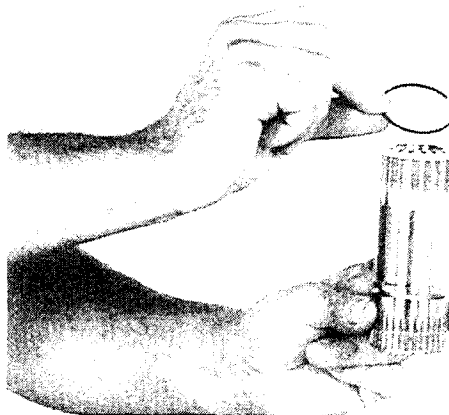


Figure 308

Install stator support oil sealing ring expander ring.

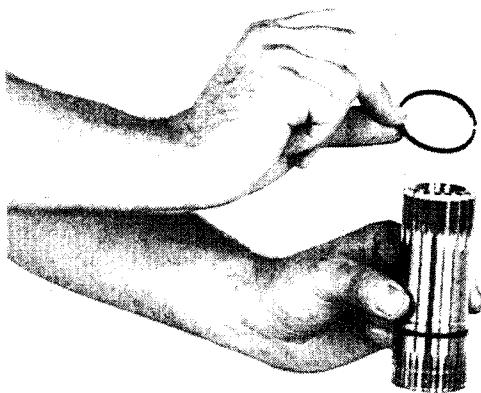


Figure 309

Install oil sealing ring on expander ring. **NOTE:** Expander spring gap to be 180 degrees from sealing ring hook joint.

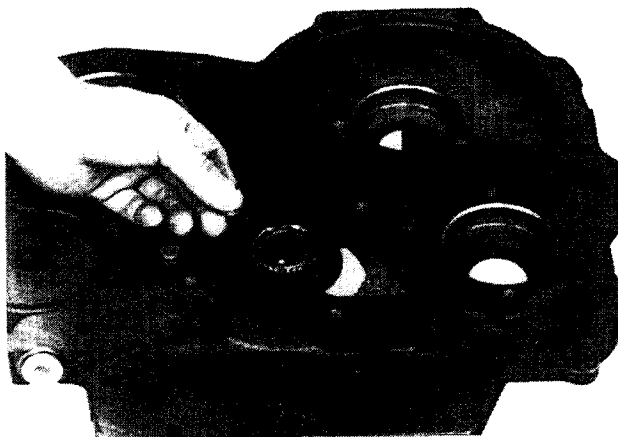


Figure 312

Install stator support locating ring.

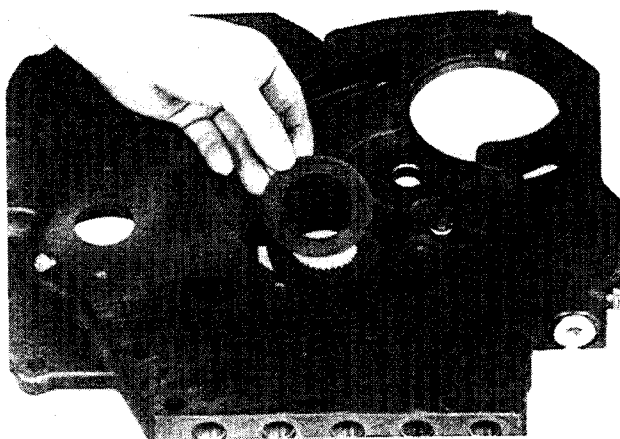


Figure 310

Position impeller hub gear washer on spacer plate.



Figure 313

Push support back through spacer until locating ring shoulders in support bore. Turn spacer plate over and install support retaining ring.

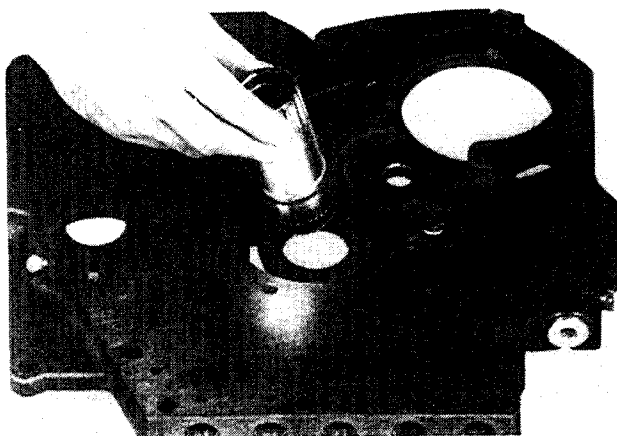


Figure 311

Install stator support through washer and spacer plate.

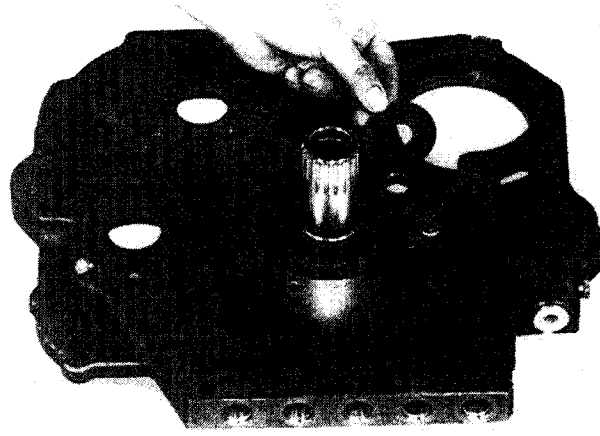


Figure 314

Position pump drive idler shaft washer on spacer plate.

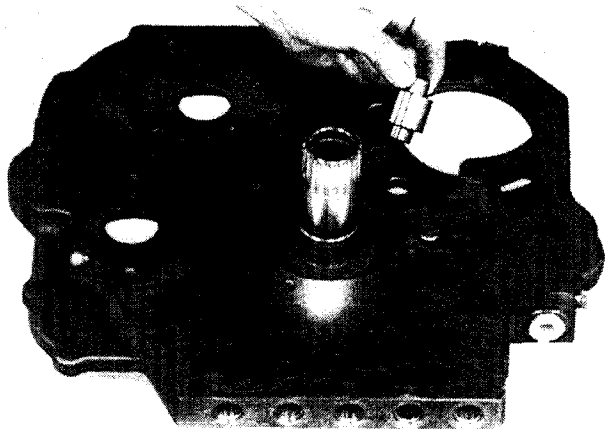


Figure 315

Position pump drive shaft through washer and into spacer plate. Align roll pin in spacer plate.

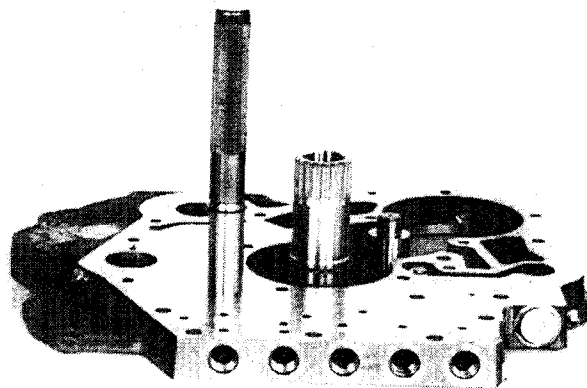


Figure 318

Support spacer plate and press reverse idler shaft into position and tight against locating ring.

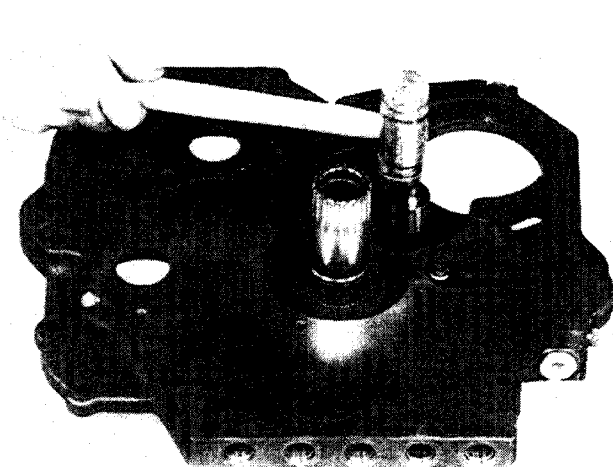


Figure 316

Tap shaft into place.

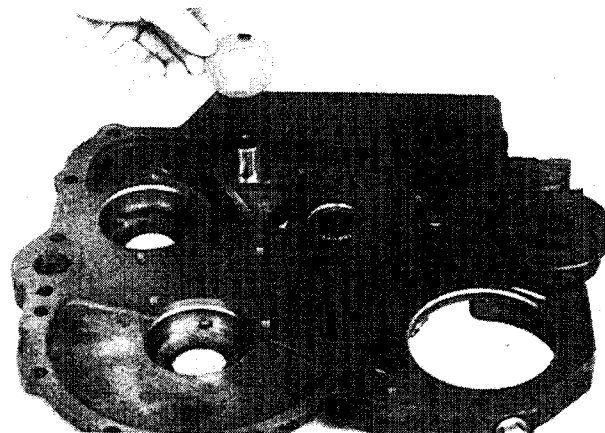


Figure 319

Turn spacer plate over and position tanged thrust washer on shaft, being certain tang in washer is in notch in spacer plate.



Figure 317

Install locating ring on reverse idler shaft.

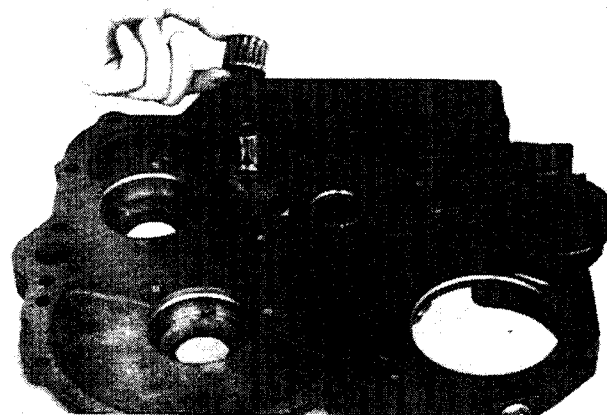


Figure 320

Position idler gear needle bearing on shaft. Lubricate bearing.

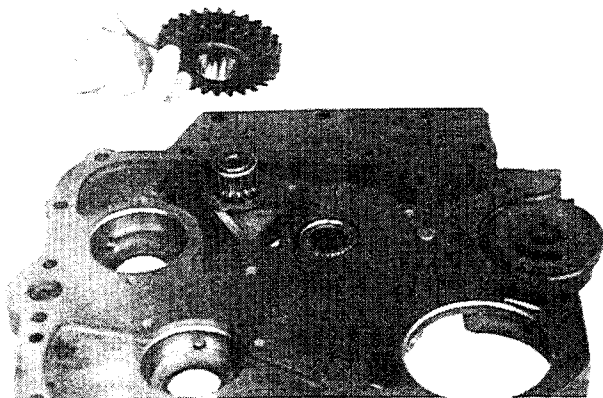


Figure 321
Position idler gear on bearing.

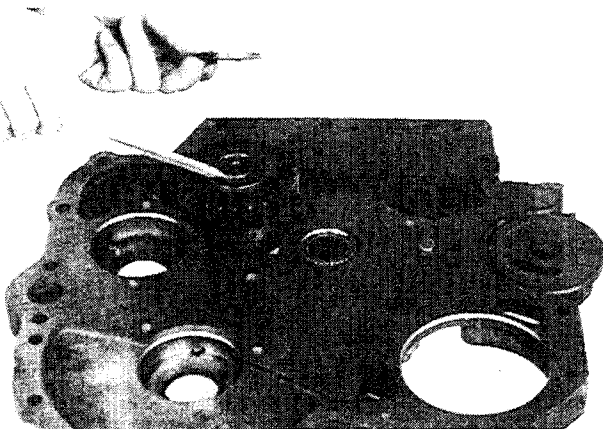


Figure 322
Position idler gear end plate and roll pin on idler shaft, aligning roll pin with hole in idler shaft.

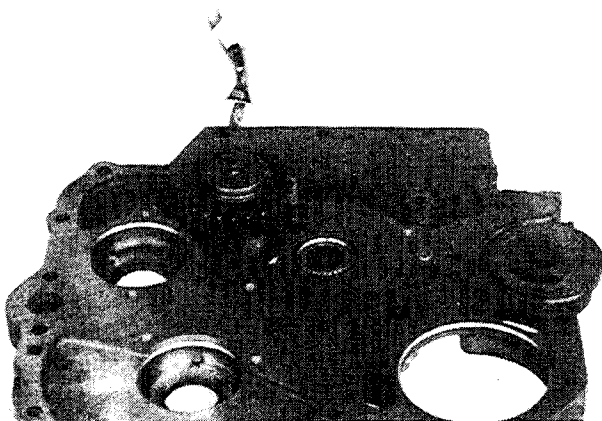


Figure 323
Install end plate capscrew and washer.

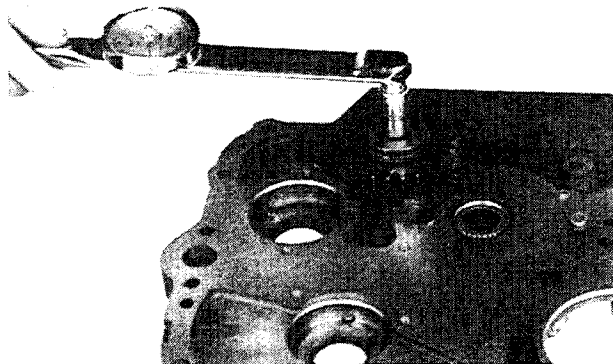


Figure 324
Tighten capscrew to specified torque. (See torque chart.)

**FRONT OUTPUT FLANGE
DISASSEMBLY AND REASSEMBLY**
(See Figure 443, page 80 for front disconnect flange.)

DISASSEMBLY
(NOTE: Do not remove expansion plug unless it is being replaced.)

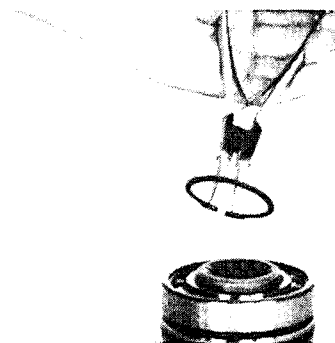


Figure 325
Remove flange to bearing retainer ring.

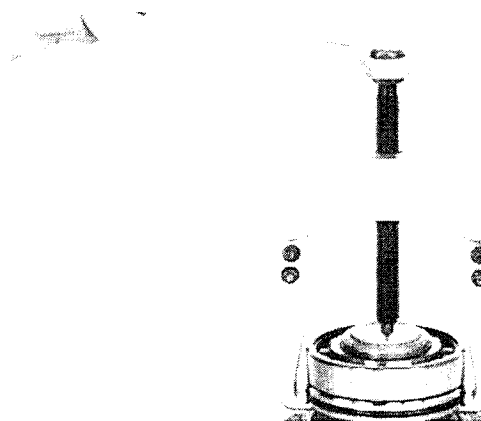


Figure 326
Using a bearing puller as shown, remove bearing.

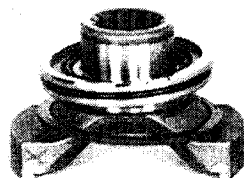


Figure 327

Bearing removed.

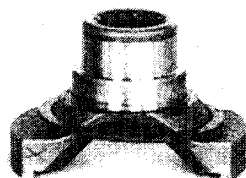
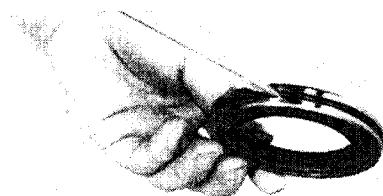


Figure 328

Oil seal sleeve and "O" ring removed.



Figure 329

Remove oil seal from sleeve.

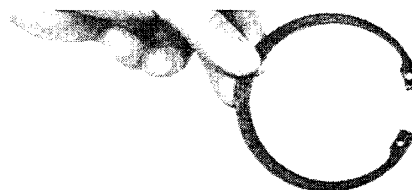


Figure 330

Remove oil seal retainer ring from output flange.

REASSEMBLY

(See cleaning and inspection page.)

NOTE: If the output flange expansion plug is being replaced, see Figure 452, page 82 for proper installation.

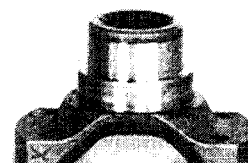
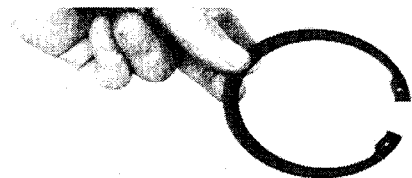


Figure 331

Position bearing retainer ring on output flange.



Figure 332

Apply a very light coat of Permatex #2 to the outer diameter of the output flange oil seal. Press oil seal in oil seal sleeve. Oil seal must be flush with one side of face of oil seal sleeve, and lip of seal must be in.

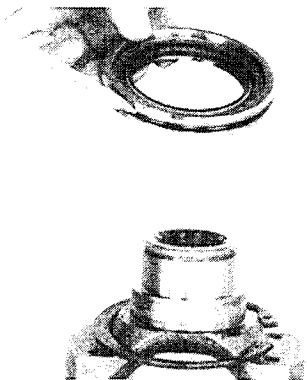


Figure 333

Install new "O" ring on oil seal sleeve. Position oil seal sleeve assembly on output flange. **NOTE:** Recessed portion of oil seal and sleeve must be up, with lip of seal up. This leaves a space between oil seal and output bearing.

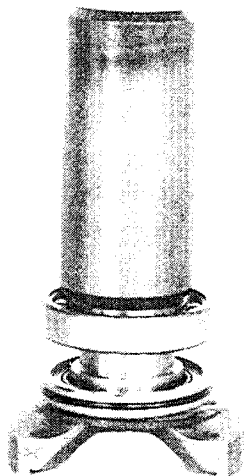


Figure 334

Press bearing on output flange.

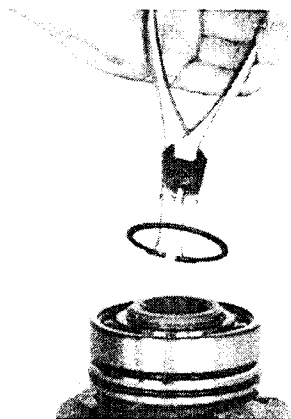


Figure 335

Install bearing to flange retainer ring.

DISASSEMBLY AND REASSEMBLY OF CONVERTER HOUSING DISASSEMBLY

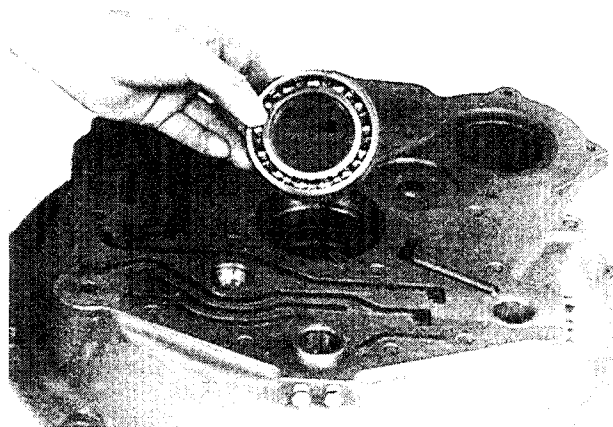


Figure 336

Remove torque converter bearing.

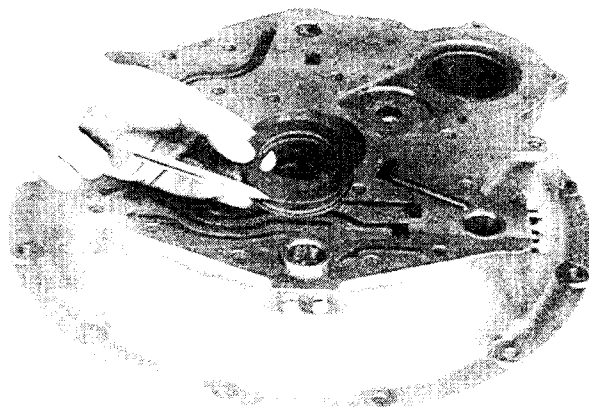


Figure 337

Remove oil distributor and "O" rings.

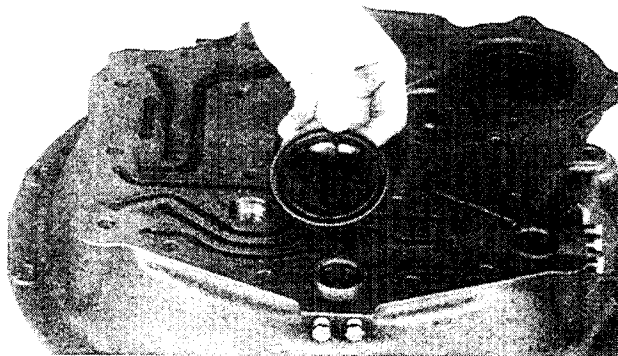


Figure 338

Remove converter oil seal.

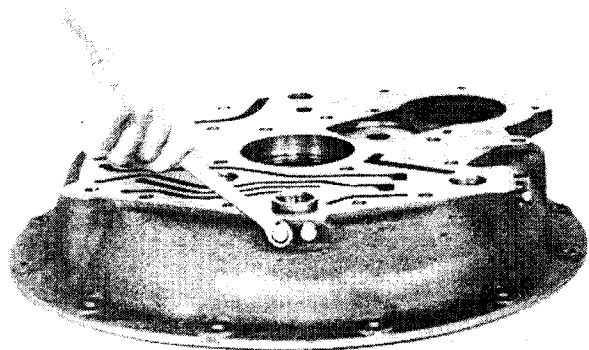


Figure 339
Remove converter housing plug. (High and 3rd Clutch Shaft)

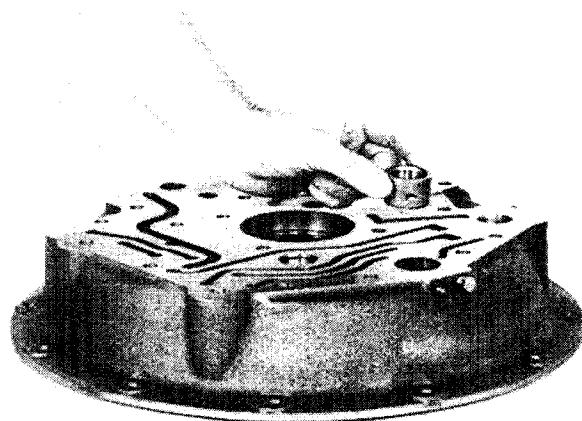


Figure 342
Sleeve removed.

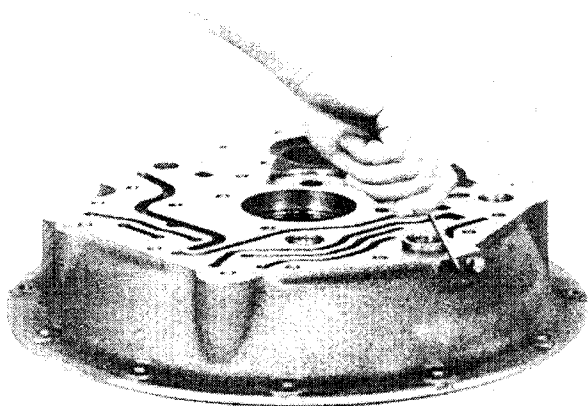


Figure 340
Remove oil distributor sleeve set screw.

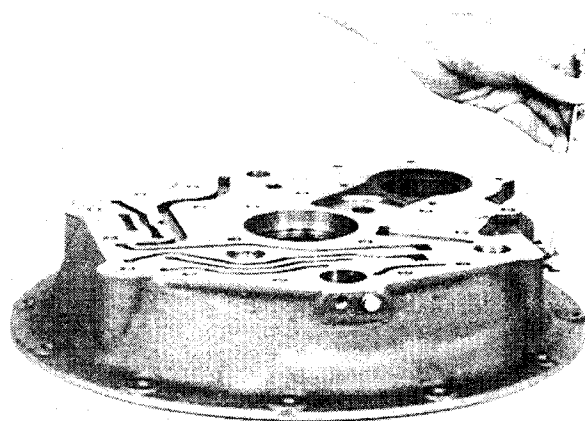


Figure 343
Remove converter housing plug. (1st and 2nd Clutch Shaft)

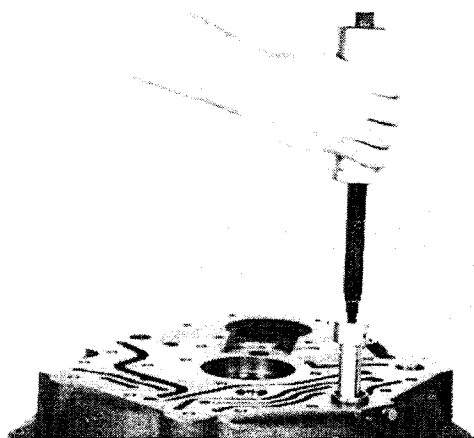


Figure 341
Using a hammer puller as shown, remove oil distributor sleeve. (High and 3rd)

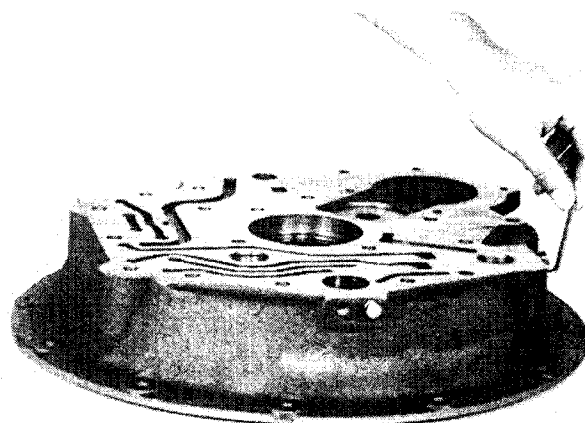


Figure 344
Remove oil distributor sleeve set screw.

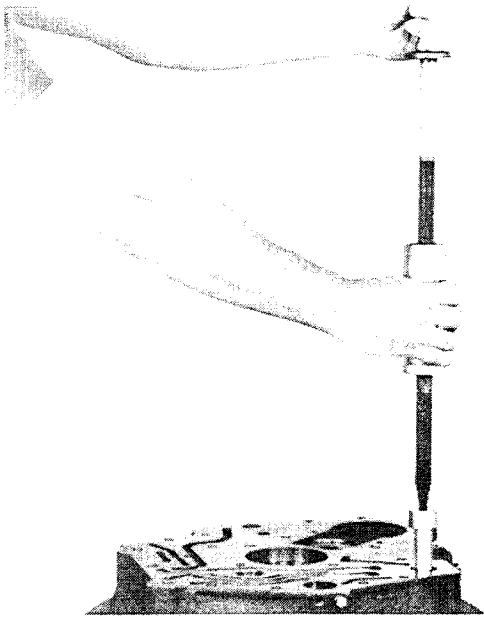


Figure 345

Using a hammer puller as shown, remove oil distributor sleeve. (1st and 2nd)

REASSEMBLY OF CONVERTER HOUSING (See cleaning and inspection page.)

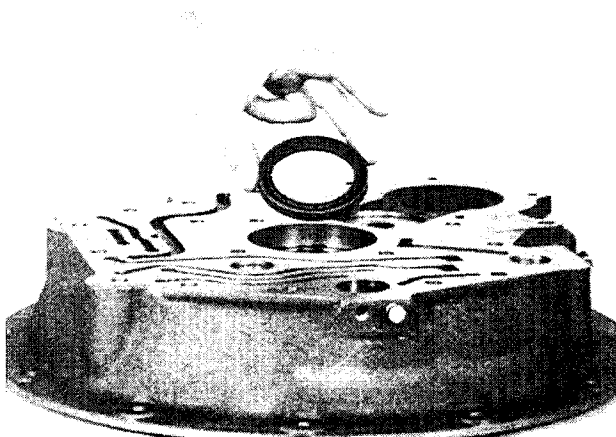


Figure 346

Apply a very light coat of Permatex #2 to the outer diameter of the converter housing oil seal. Press seal in housing with lip of seal in.

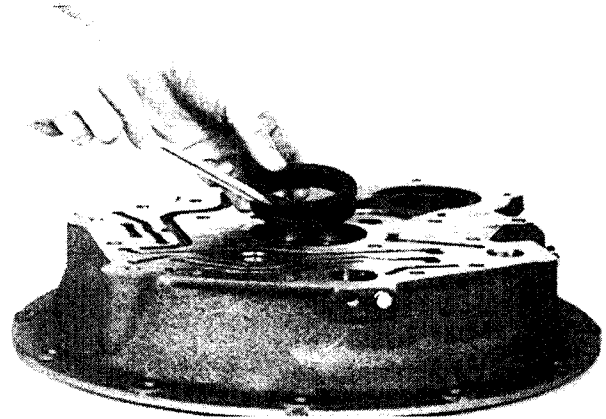


Figure 347

Install new "O" rings on converter housing oil distributor. Install oil distributor in converter housing with long hub toward oil seal.



Figure 348

Press converter bearing in housing against shoulder.

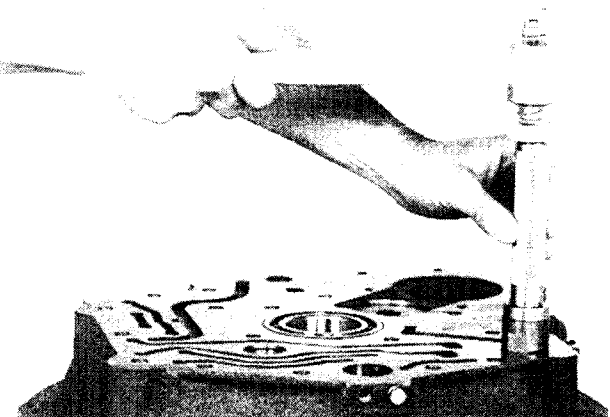


Figure 349

Install 1st and 2nd clutch shaft oil distributor sleeve in converter housing, with inside diameter chamfer up, and the notch in the distributor aligned up with the retaining set screw hole in the converter housing.

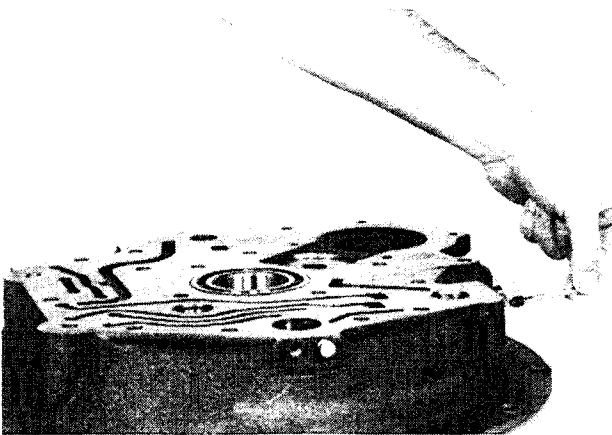


Figure 350

Apply Loctite #243 to threads of sleeve set screw. (NOTE: This screw has a hole in it. Use caution as not to allow any Loctite to plug hole.) Install set screw in converter housing and in oil distributor.

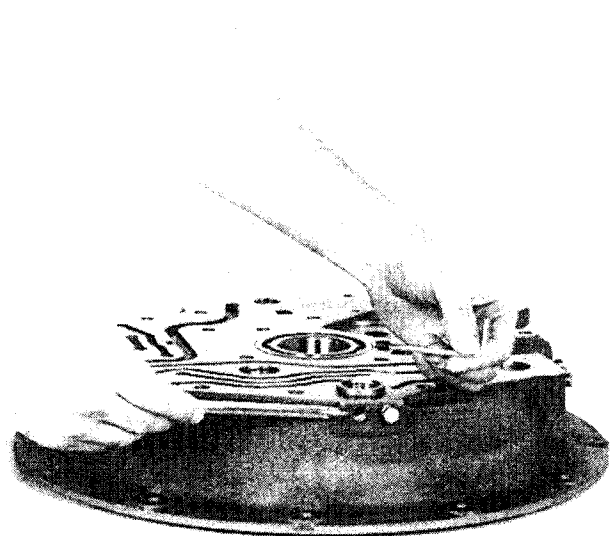


Figure 353

Apply Loctite #243 to threads of sleeve set screw. (NOTE: This set screw has a hole in it. Use caution as not to allow any Loctite to plug hole.) Install set screw in converter housing and in oil distributor.

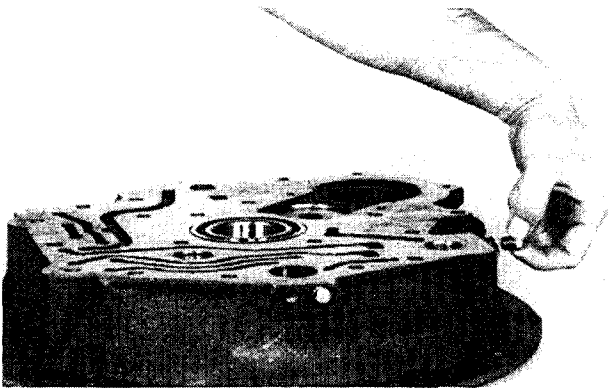


Figure 351

Install set screw plug.

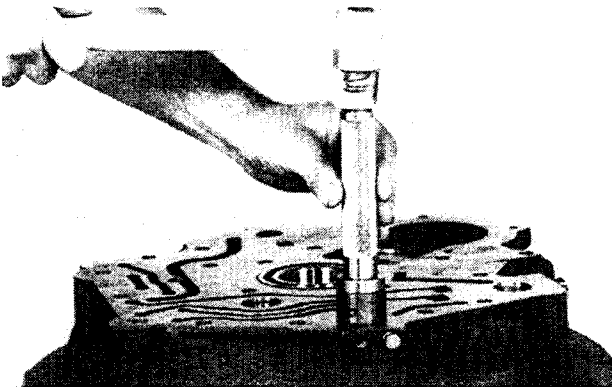


Figure 352

Install High-3rd clutch shaft oil distributor sleeve in converter housing with inside diameter chamfer up and the notch in the distributor aligned up with the retaining set screw hole in the converter housing.

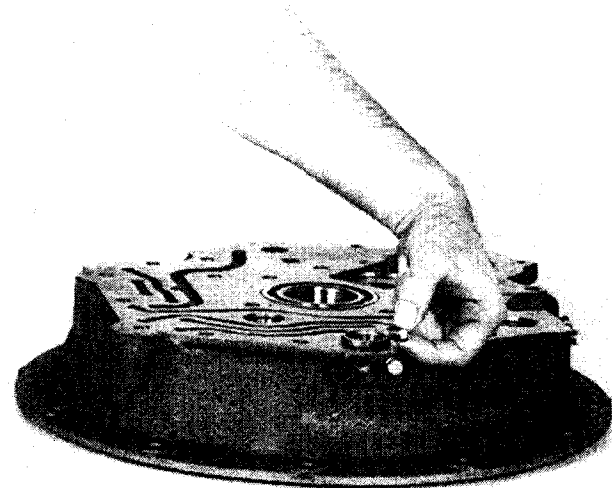


Figure 354

Install set screw plug.

REASSEMBLY OF TRANSMISSION
(See cleaning and inspection page.)

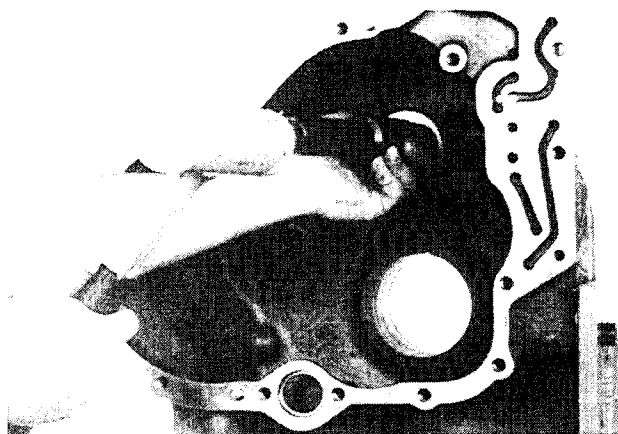


Figure 355

Install forward-reverse oil distributor sleeve in transmission case with inside diameter chamfer out, (toward front of transmission), and the notch in the distributor aligned up with the retaining set screw hole in the transmission case.

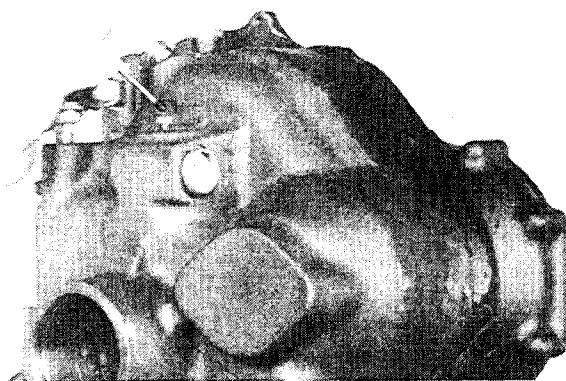


Figure 356

Apply Loctite #243 and install set screw in transmission case and in oil distributor sleeve.

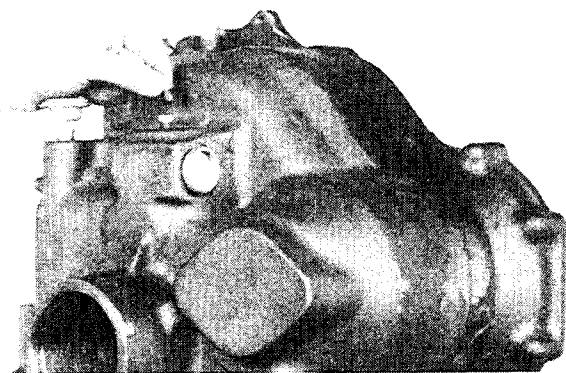


Figure 357

Install set screw plug.

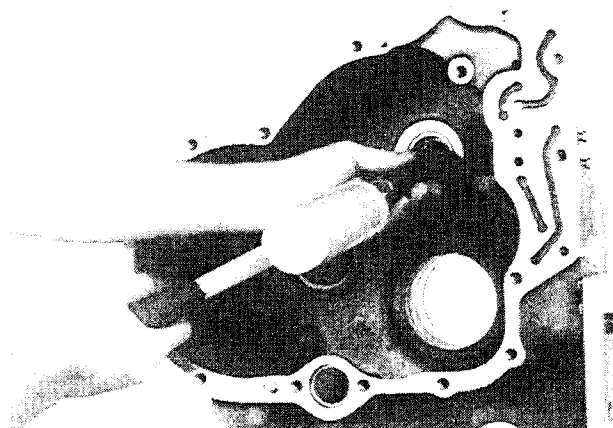


Figure 358

Install reverse and forward clutch shaft rear bearing in transmission case. **NOTE:** For single modulation and mechanical inching see Figure 458, page 83.

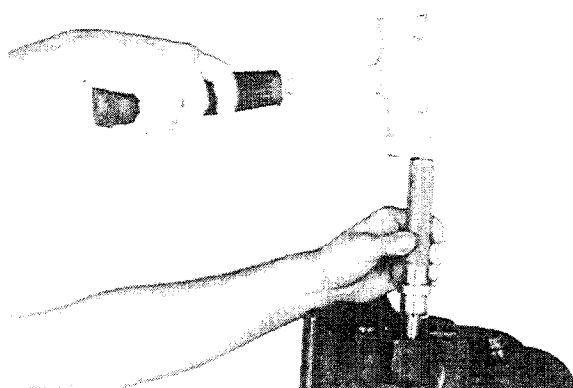


Figure 359

Install modulation diverter in transmission case.

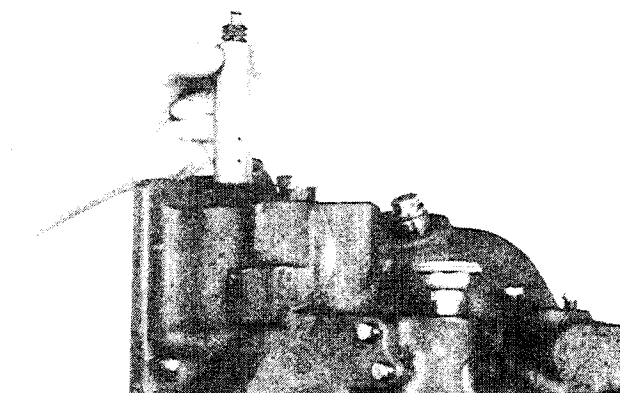


Figure 360

Position a new "O" ring on lower end of the modulation valve sleeve and spring assembly. Install "O" ring on other valve sleeve.

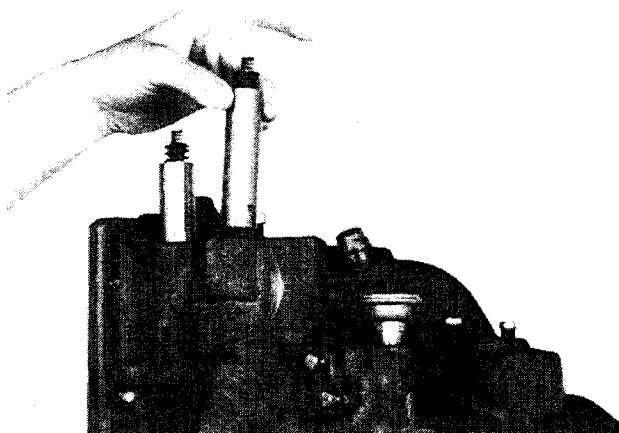


Figure 361

Install valve or valves in transmission case.

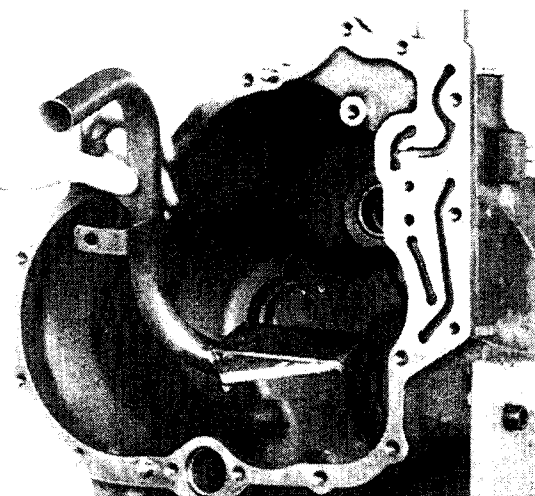


Figure 364

Position supply tube and screen assembly and tube clamp in transmission case sump.

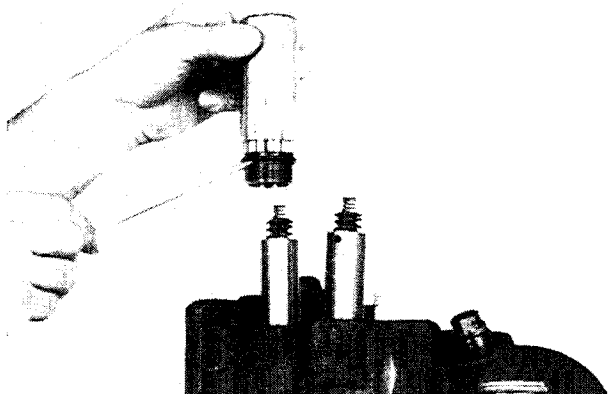


Figure 362

Position a new "O" ring on modulator valve housing.

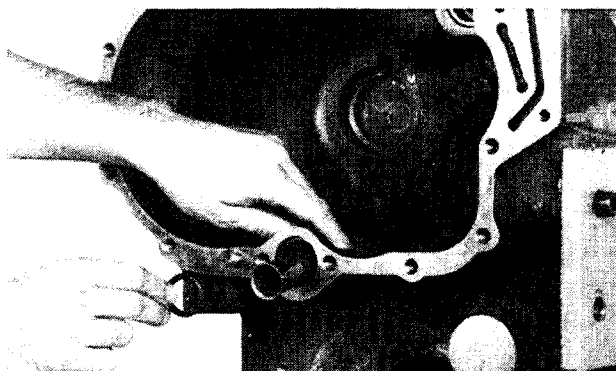


Figure 365

Push supply tube through opening in case and install "O" ring.

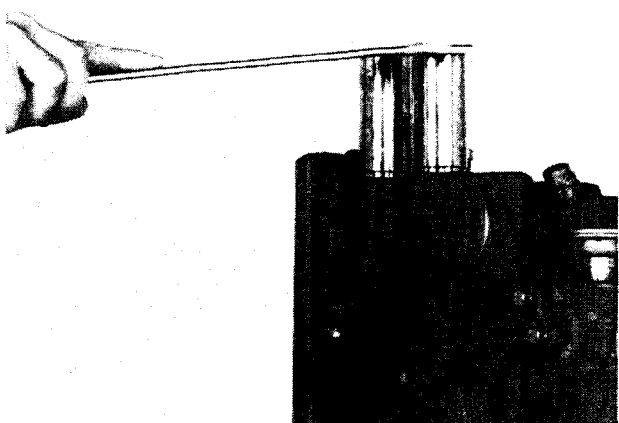


Figure 363

Install housing over sleeve and spring assembly and tighten securely.

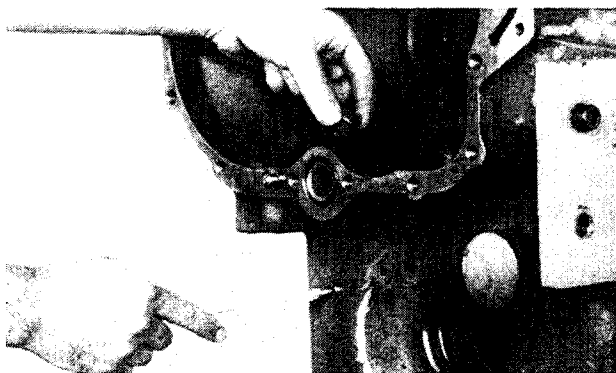


Figure 366

Install supply tube clamp screw in case and tighten securely. **NOTE:** Clamp screw has a locking adhesive on the threads and must be used one time only. See note in Figure 53.

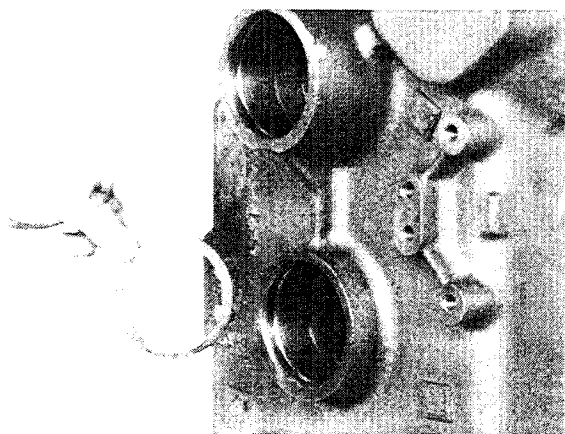


Figure 367

Install output shaft inner bearing locating ring in rear of transmission case.

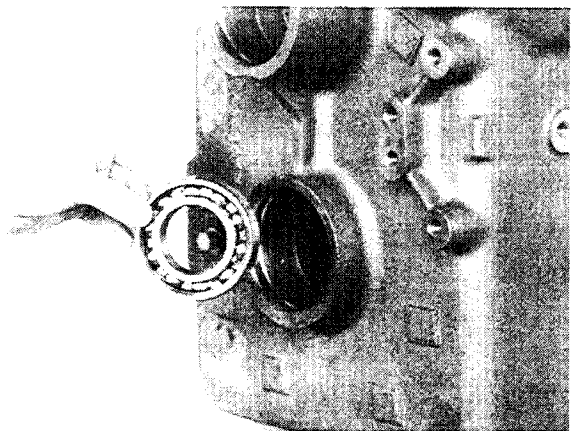


Figure 368

Install rear bearing in case against locating ring.

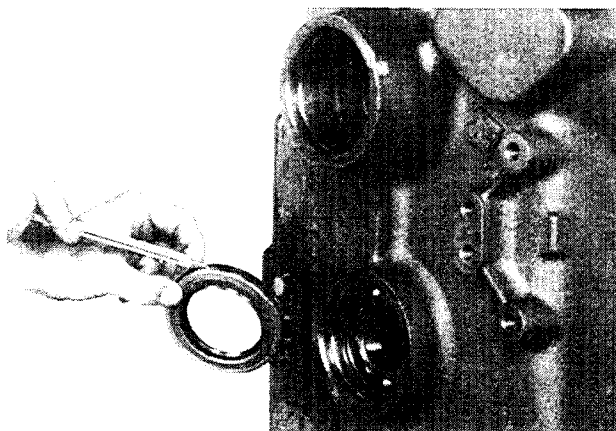


Figure 369

Install new "O" ring on rear oil seal sleeve.

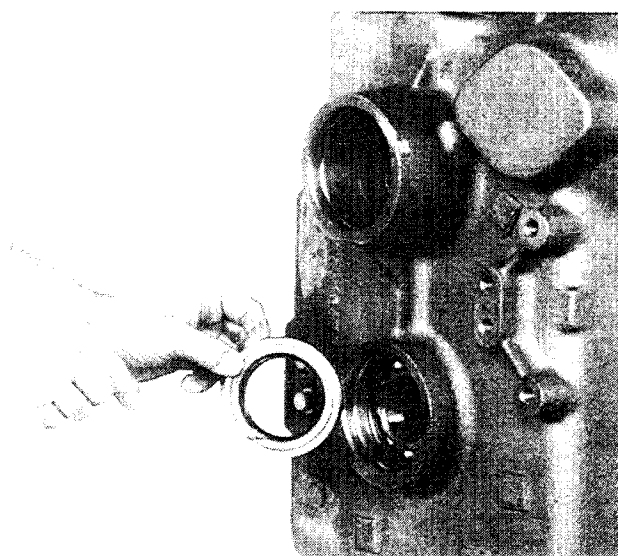


Figure 370

Apply a very light coat of Permatex #2 to the outer diameter of the output flange oil seal. Press oil seal in oil seal sleeve. Oil seal must be flush with one side of face of oil seal sleeve and lip of seal must be in.

Position oil seal sleeve in transmission case with recessed portion of oil seal toward output bearing. This leaves a space between oil seal and output bearing.

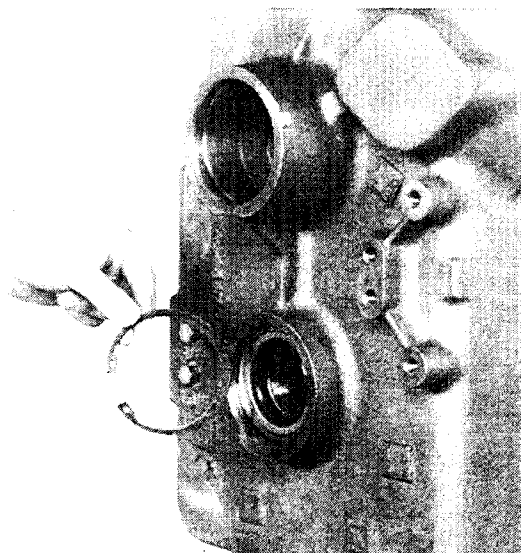


Figure 371

Install oil seal sleeve retainer ring.

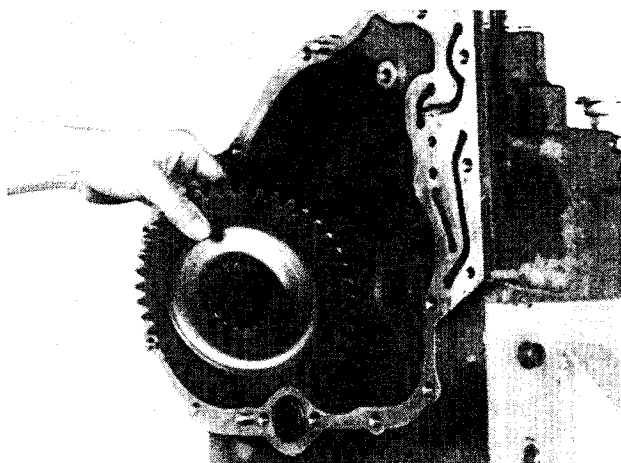


Figure 372

From front of transmission case, position output gear with long hub of gear toward front.

For front axle disconnect see Figure 416, page 76.

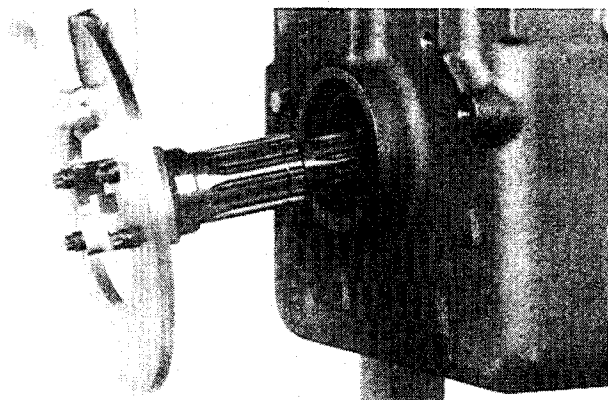


Figure 373

Install rear output flange and shaft through output oil seal. Align splines on shaft with splines on output gear. Install shaft through gear. Use caution as not to damage oil seal. Brake disc is an option and will not be on all units.

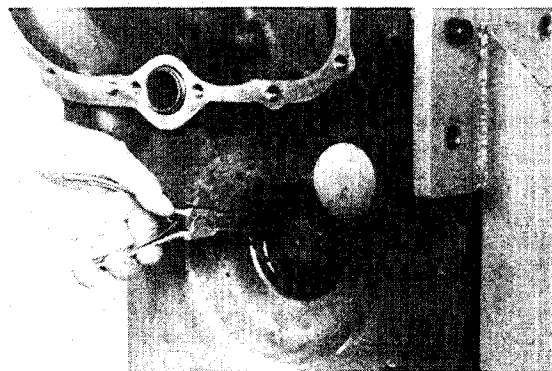


Figure 374

Install output shaft to output gear retainer ring.

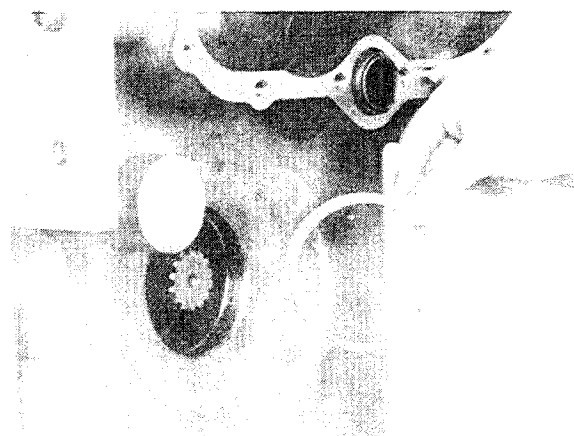


Figure 375

Install front output shaft bearing locating ring.

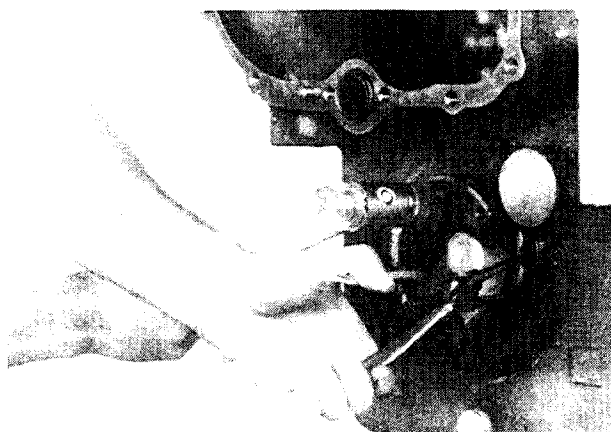


Figure 376

Position front output flange and bearing assembly on output shaft. Using snap ring pliers as shown, squeeze snap ring ends together and tap flange assembly into case until snap ring can seat in snap ring groove.

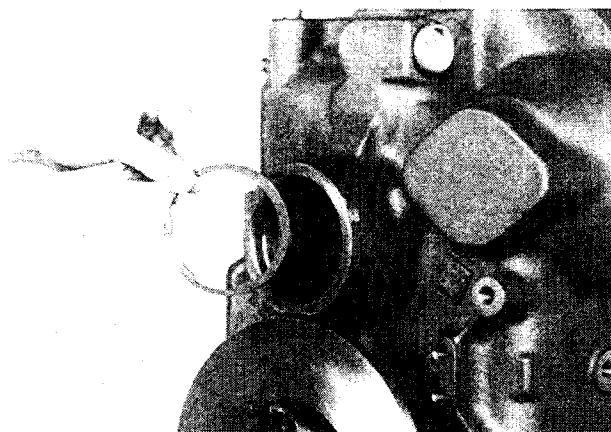


Figure 377

Install 3rd speed clutch gear bearing locating ring in transmission case.

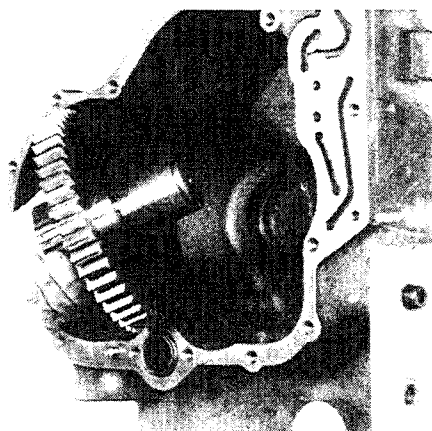


Figure 378

Position 3rd speed clutch gear in transmission case.



Figure 381

Install new "O" ring on bore plug. Install bore plug in case.

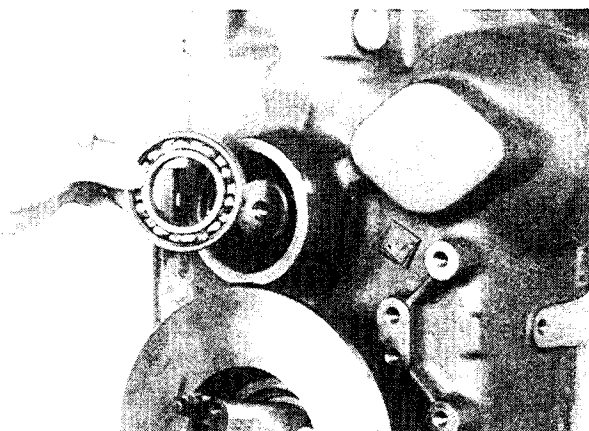


Figure 379

Block gear and install inner retainer ring and rear bearing.

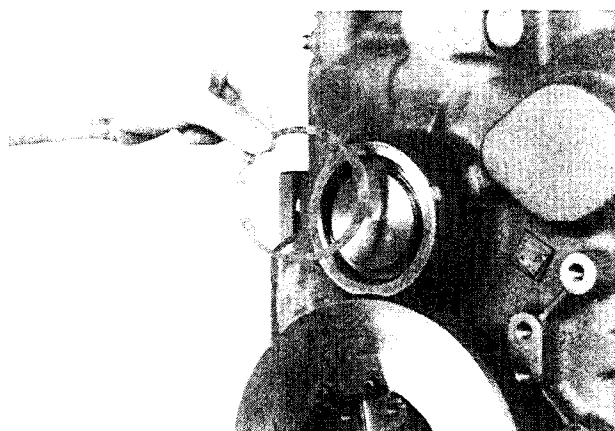


Figure 382

Install bore plug retainer ring.

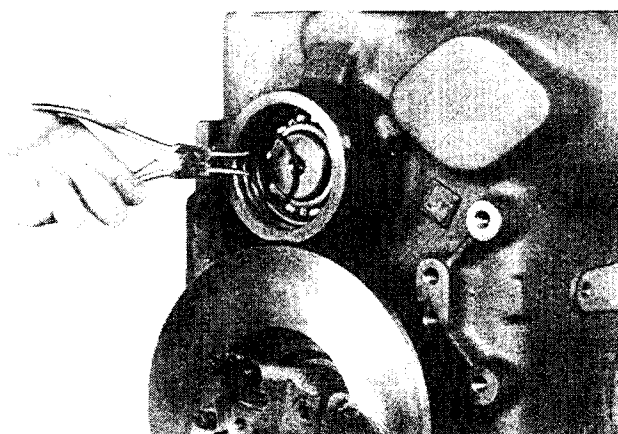


Figure 380

Install clutch gear shaft to bearing retainer ring.

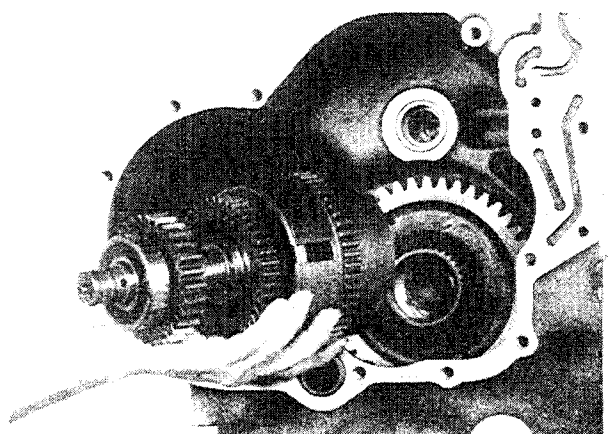


Figure 383

Install high and 3rd clutch assembly in 3rd clutch gear disc hub. Align splines on 3rd gear disc hub with internal teeth of friction discs. Do not force this operation. Gear splines must be in full position with internal teeth of all friction discs.

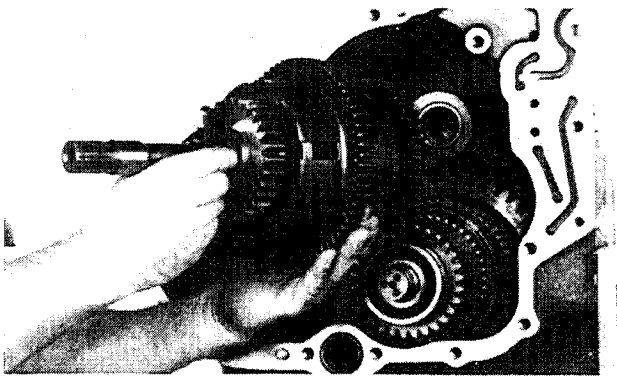


Figure 384

Install forward and reverse clutch assembly.

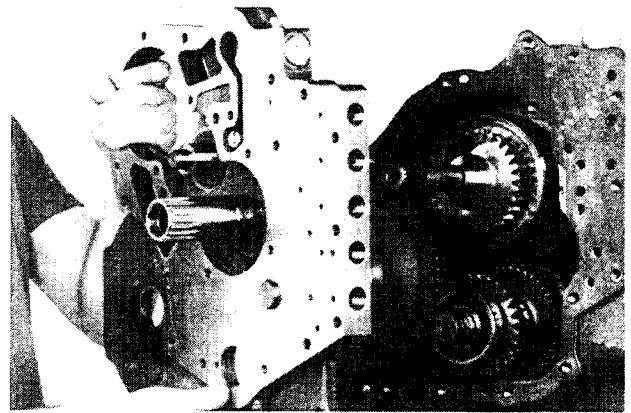


Figure 387

Install spacer plate assembly on transmission, aligning clutch shafts with openings in spacer plate. Use caution as not to damage oil sealing rings.

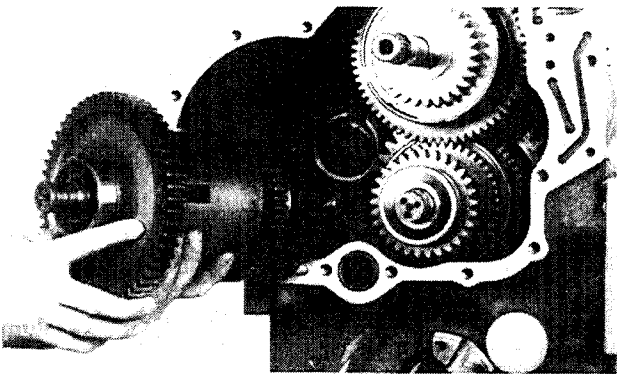


Figure 385

Install 1st and 2nd clutch assembly.

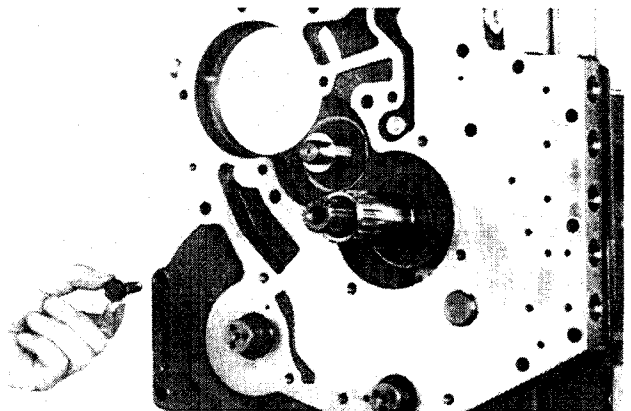


Figure 388

Spacer plate must be tight against transmission case. Do not use bolts to pull spacer plate and case together. Tap spacer plate into position at dowel pins. Install spacer plate to transmission case capscrews.

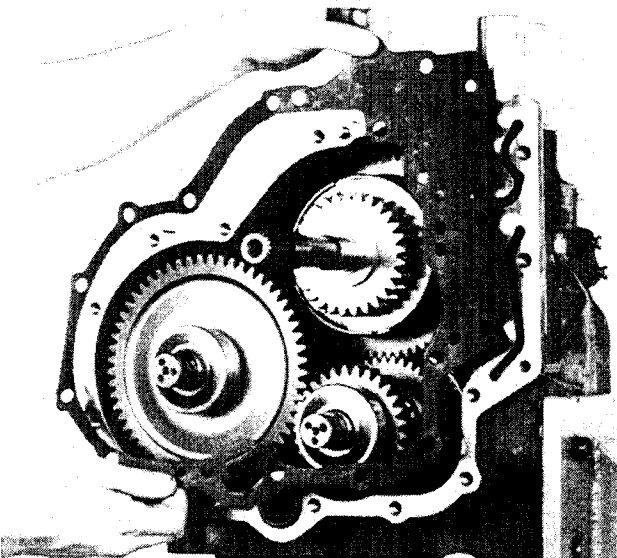


Figure 386

Position new transmission case to converter housing gasket on transmission case. A light coat of grease will hold gasket in position.

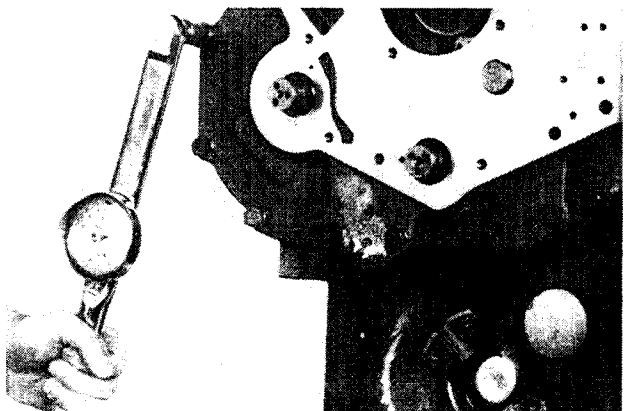


Figure 389

See "NOTE:" on Figure J, for proper cap screw installation and torque.

ELECTRIC CONTROL VALVE REASSEMBLY

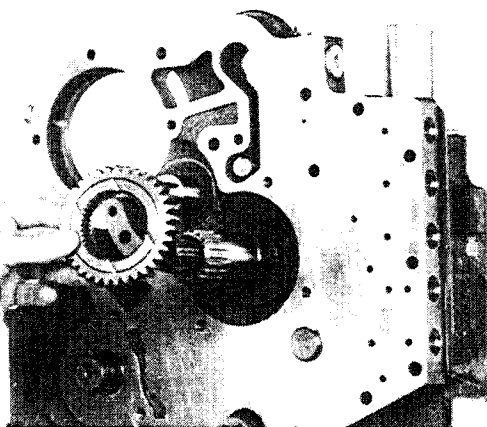


Figure 390
Position impeller hub gear on stator support.

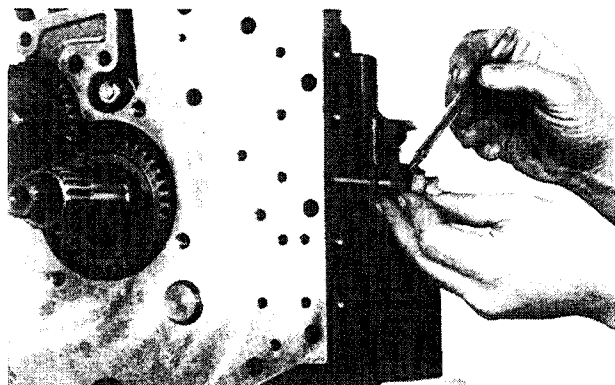


Figure 393
Install bore plug and "O" rings in center hole on 3 speed transmission only.

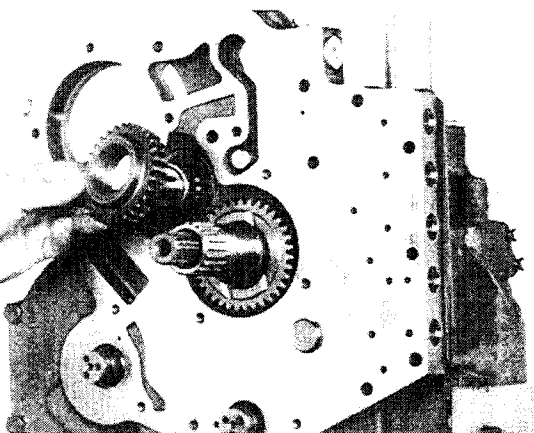


Figure 391
Install pump idler gear bearing and idler gear on idler shaft.

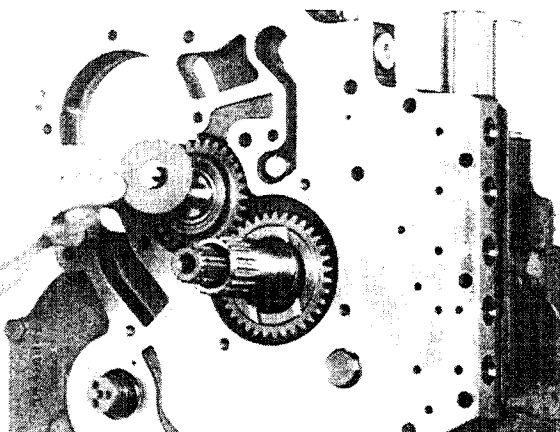


Figure 392
Install idler gear thrust washer, aligning hole with roll pin.

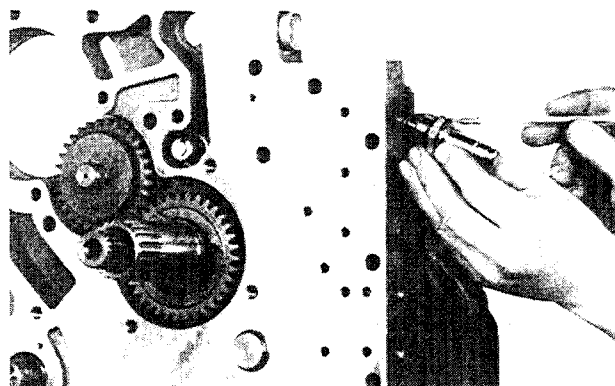


Figure 394
With "O" rings in position, install solenoid cartridges.

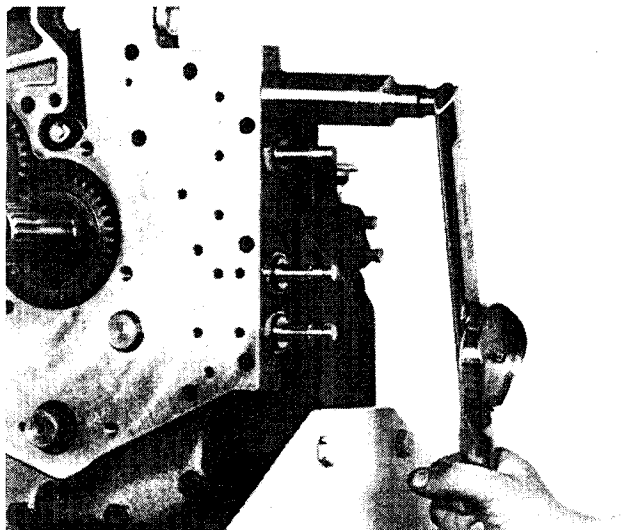


Figure 395

Tighten cartridges to specified torque. See assembly instruction drawing.

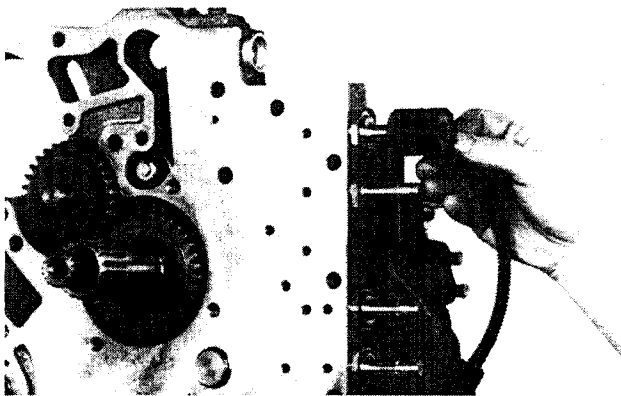


Figure 396

With cartridge to coil "O" ring in place, position solenoid coil on cartridge.

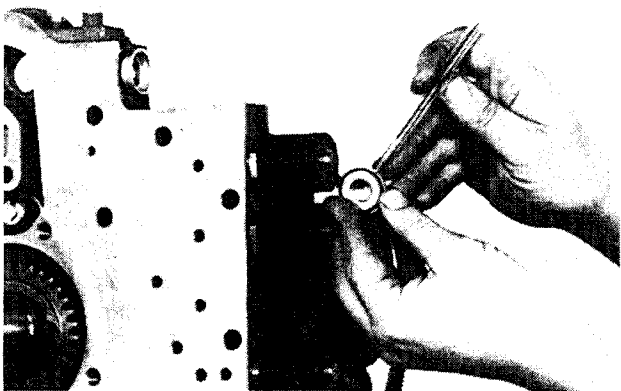


Figure 397

With new "O" ring in position, install coil to cartridge nut. Tighten cartridge nut per assembly instruction drawing.

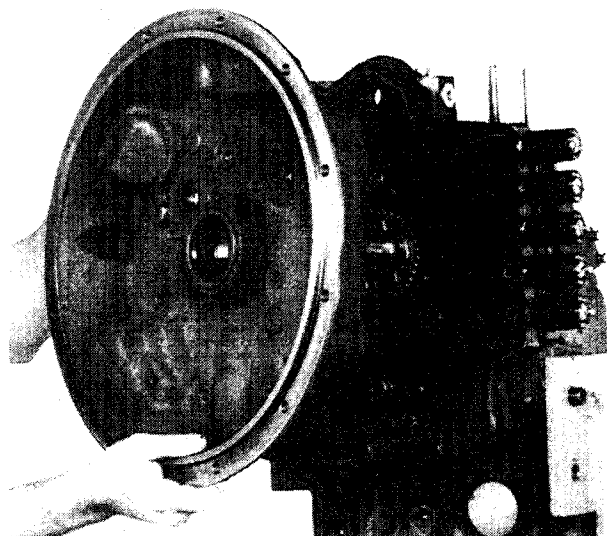


Figure 398

Position spacer to converter housing gasket on spacer. A light coat of grease will hold gasket in place.

The use of aligning studs will facilitate converter housing to spacer installation. The transmission could be laid down to align the end of the clutch shafts into sealing ring sleeves in converter housing. Do not force this operation. Converter housing must be tight against transmission spacer. **NOTE: Do not use bolts to pull converter housing in place.**

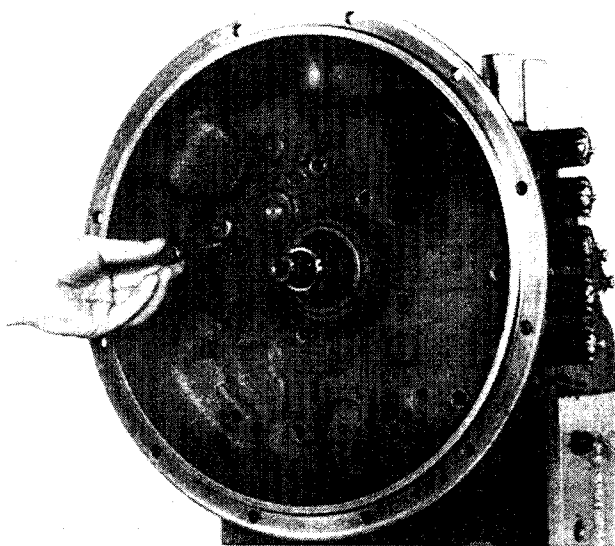


Figure 399

Install converter housing to transmission case screws and lockwashers. See Figures J and K for proper screw location and installation.

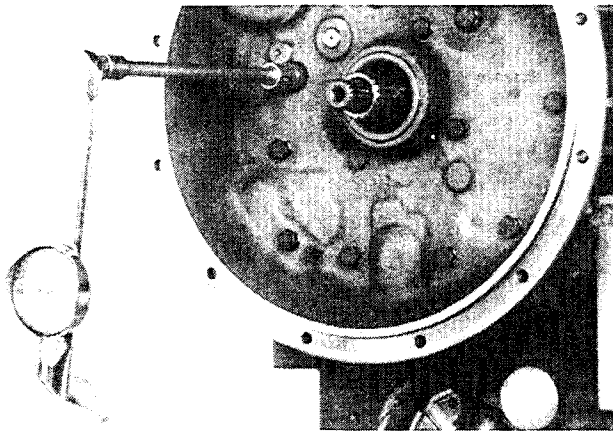


Figure 400

Tighten bolts to specified torque. See note in Figure 398. See Figures J and K for proper screw location and installation.

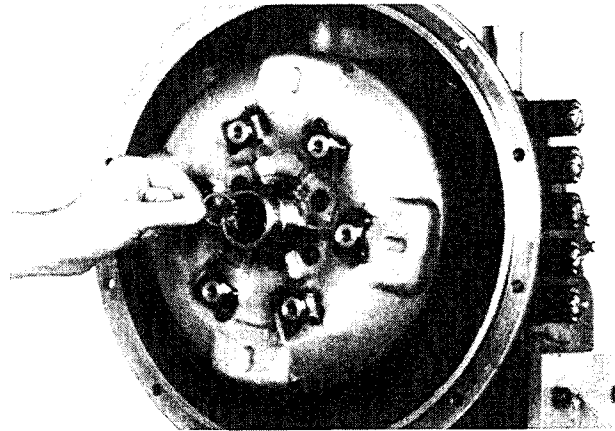


Figure 403

Install converter assembly retainer ring.

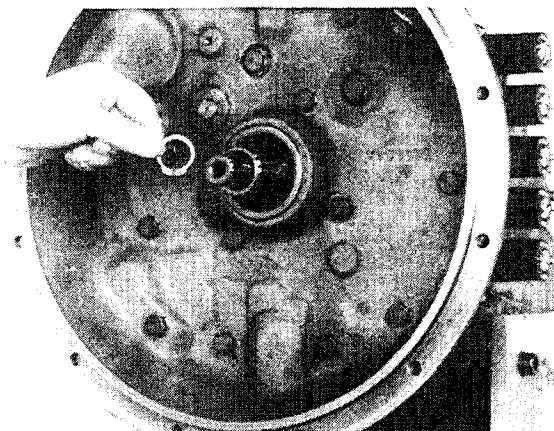


Figure 401

Install converter locating ring on turbine shaft.

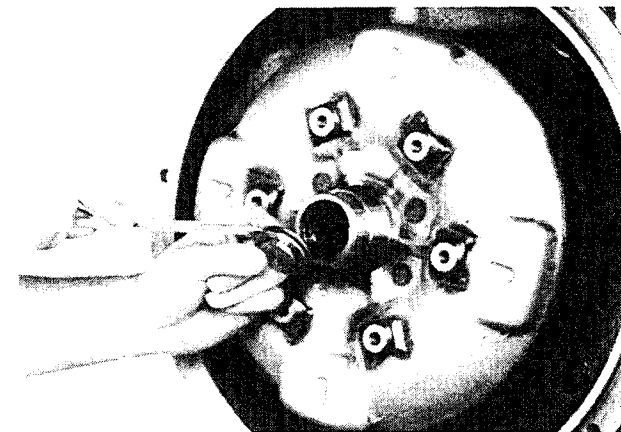


Figure 404

With new "O" ring in place, install bore plug in converter assembly.

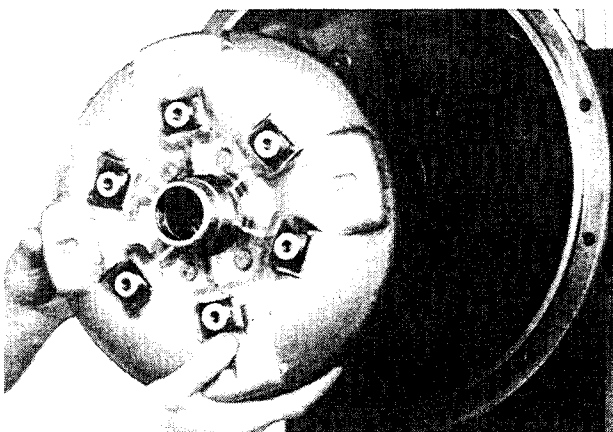


Figure 402

Position converter assembly on stator support and turbine shaft.

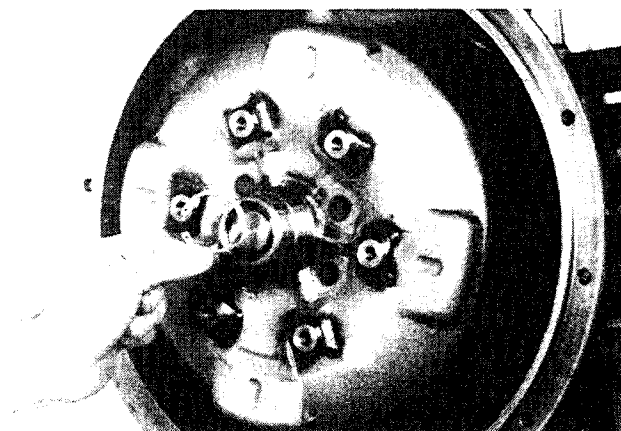


Figure 405

Install bore plug retainer ring.

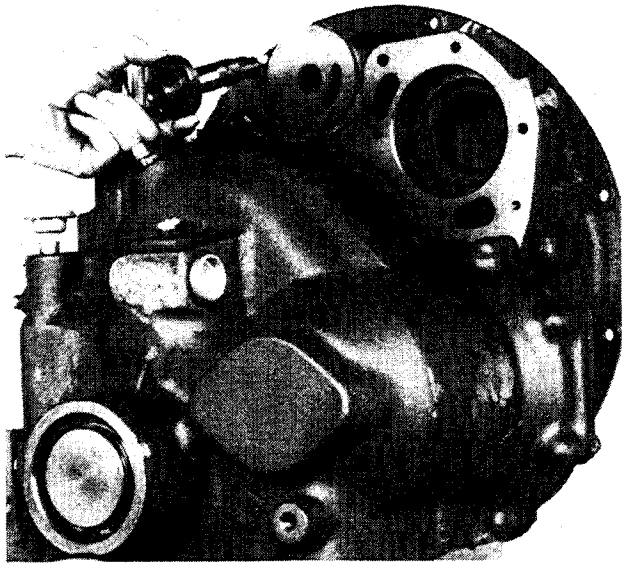


Figure 406

Install regulator sleeve assembly in converter housing.

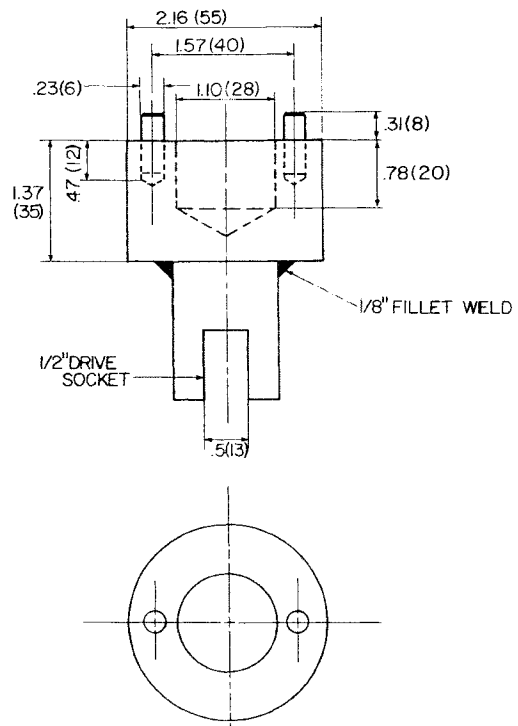


Figure 407a

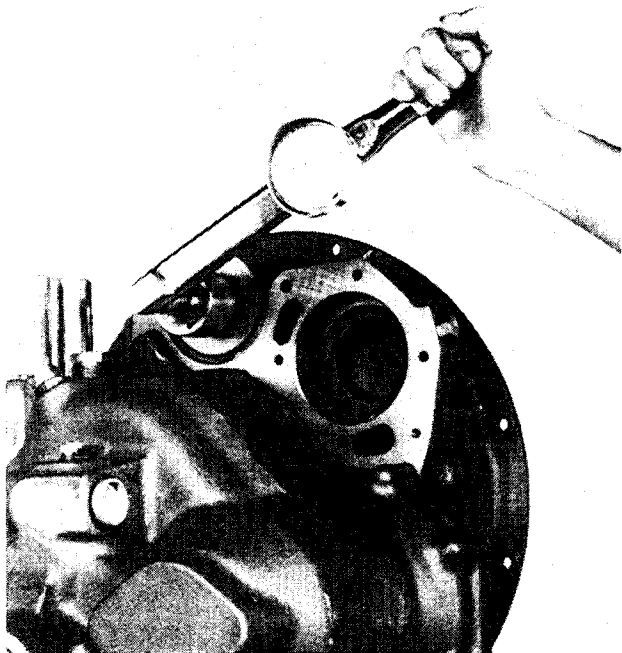


Figure 407

Using a special tool as shown in Figure 407a, tighten sleeve to 45-50 lbf·ft [61,1-67,7 N·m].

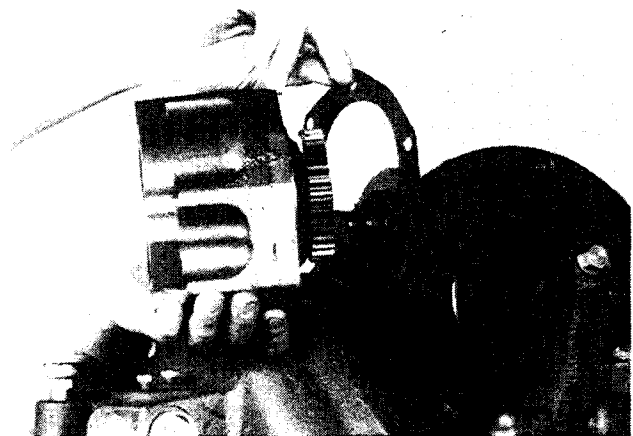


Figure 408

With new gasket in place, install charging pump in converter housing.

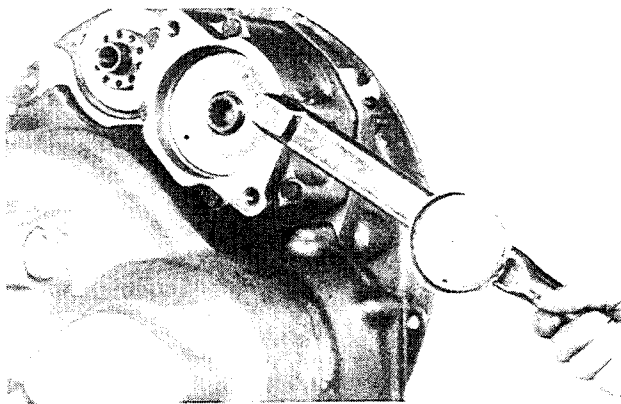


Figure 409

Install charging pump to converter housing bolts and washers and tighten to specified torque. See torque chart.

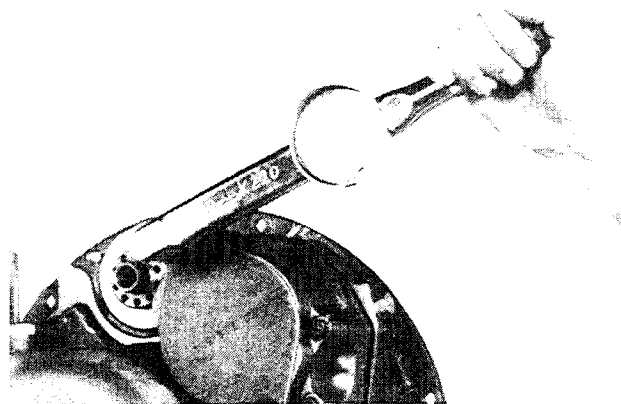


Figure 410

If auxiliary pump is used, it is not necessary to install the permanent pump hole cover. With new gasket in place, install pump hole cover on charging pump. Install bolts and washers and tighten to specified torque. See torque chart.

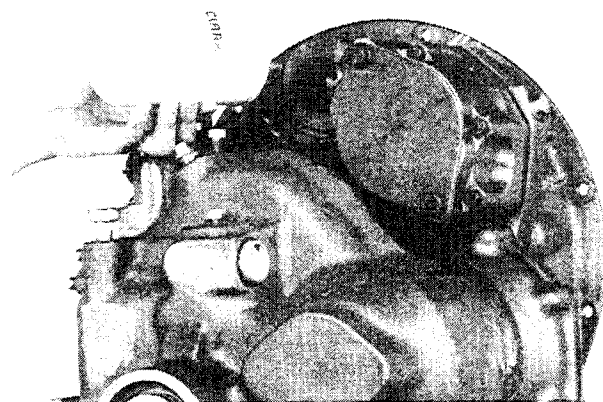


Figure 411

Install oil filter on regulating valve. Tighten filter to 20-25 lbf·ft [27-34 N·m]. If parking brake is not used proceed to Figure 415.

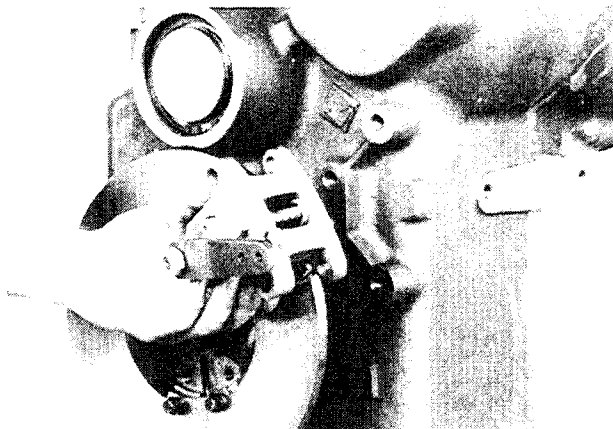


Figure 412

Position caliper brake assembly on brake disc.

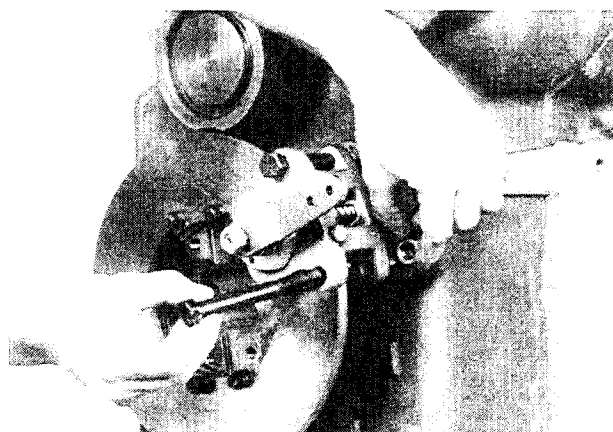


Figure 413

Install caliper brake mounting screw through brake assembly and through locknut. Apply Loctite #262 to threads and install screw in transmission case.

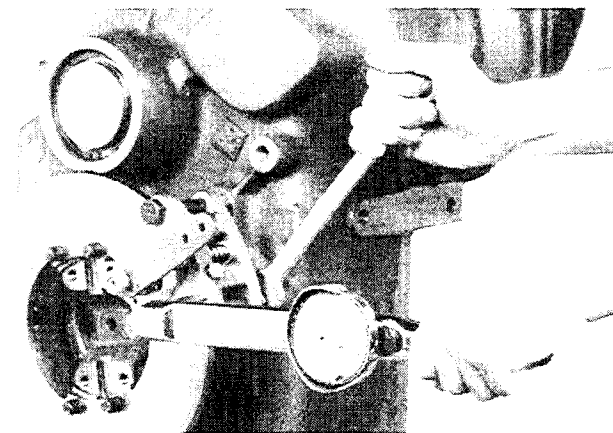


Figure 414

Mounting screws to be installed to allow free movement of caliper pads to disc. Tighten jam nut. See torque chart. See page 99 for brake information.

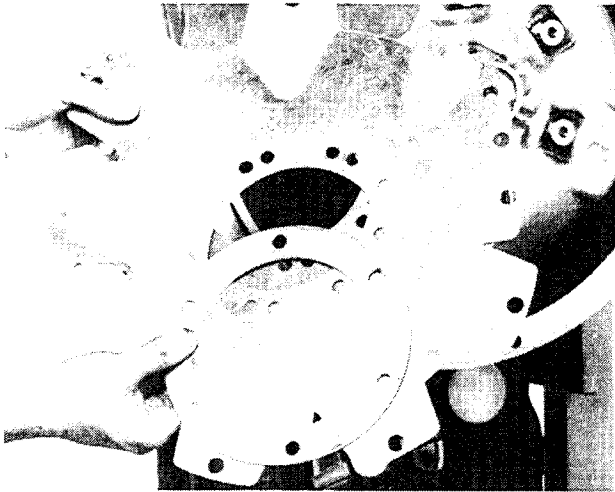


Figure 415

See special section on page 92 for drive plate installation.

FRONT DISCONNECT OUTPUT SHAFT REMOVAL

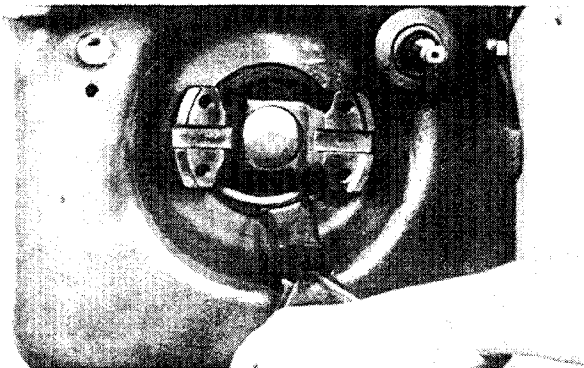


Figure 416

Remove front output flange retainer ring from ring groove.

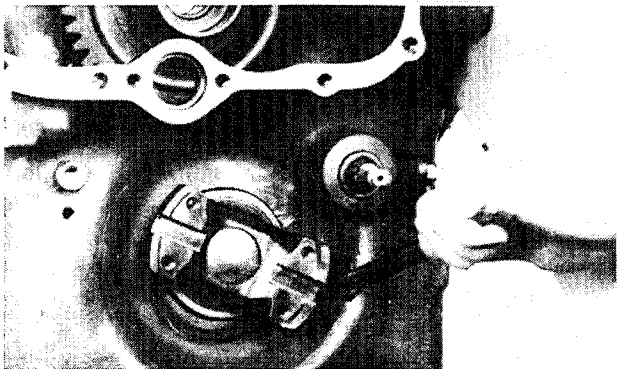


Figure 417

Carefully pry the output flange, seal, and bearing from bearing bore.

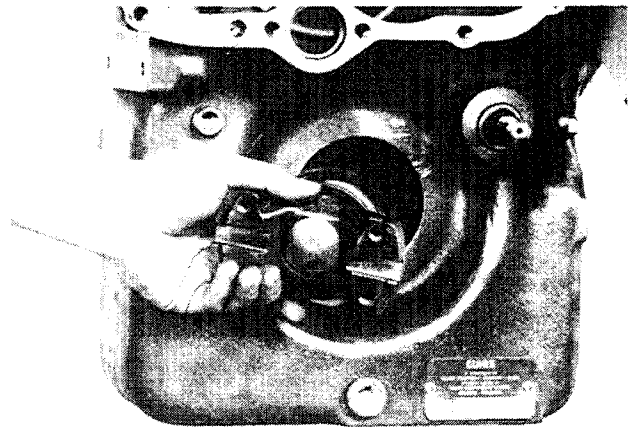


Figure 418

Remove flange assembly. **NOTE:** See page 80 for output flange service.

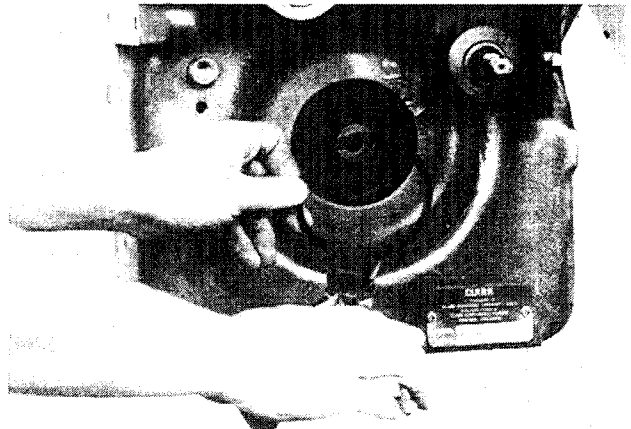


Figure 419

Remove flange assembly locating ring.

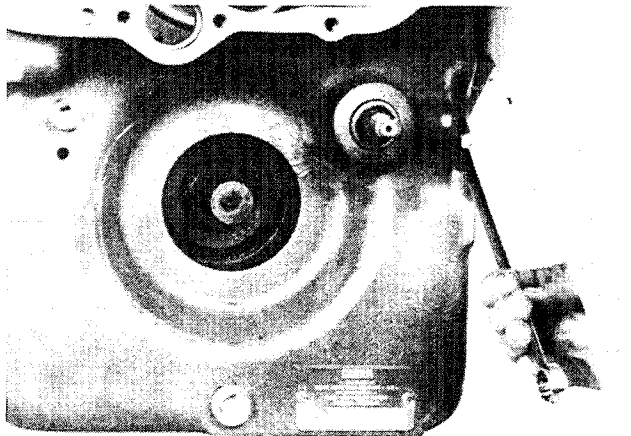


Figure 420

Remove front disconnect shift rail detent spring plug and "O" ring. **CAUTION:** Plug is under spring pressure.

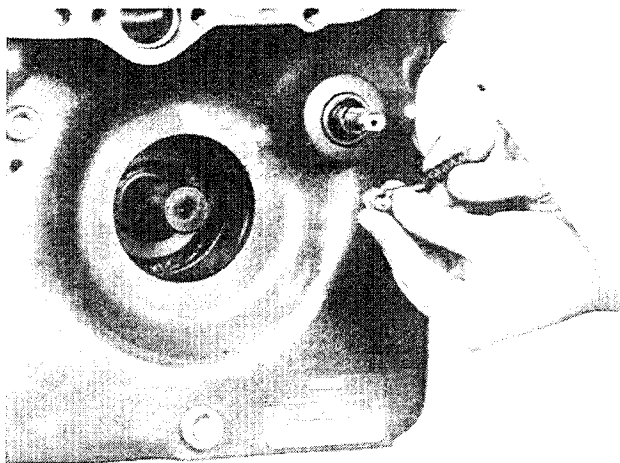


Figure 421
Remove detent spring, ball, and overshift stop pin.

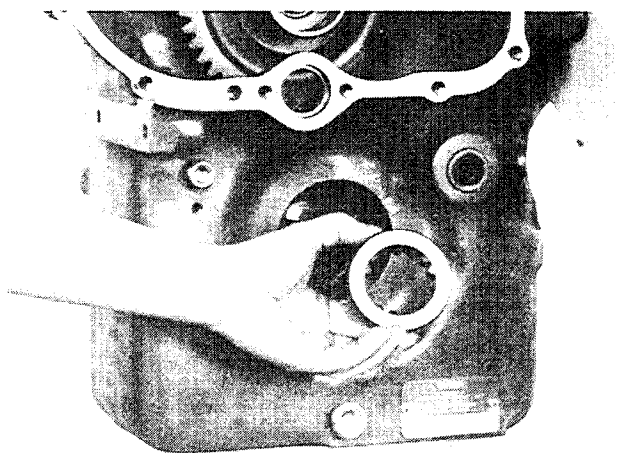


Figure 424
Remove disconnect shift hub.

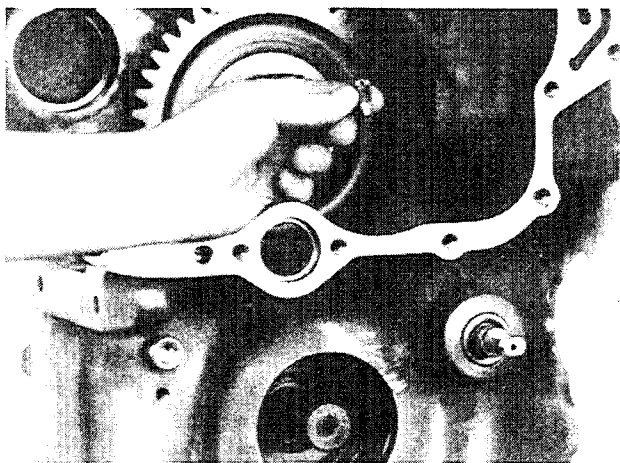


Figure 422
Remove shift fork to shift rail lock screw.

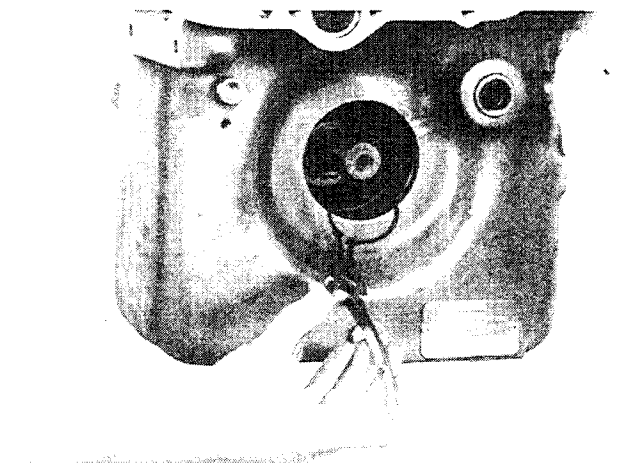


Figure 425
Remove output gear to shaft retainer ring.

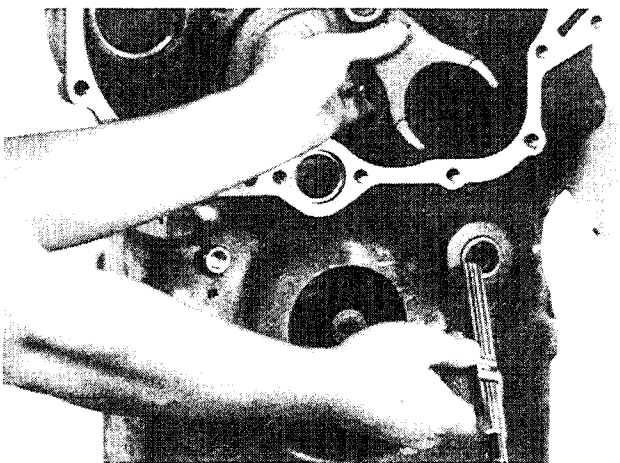


Figure 423
Remove disconnect shift fork and rail.

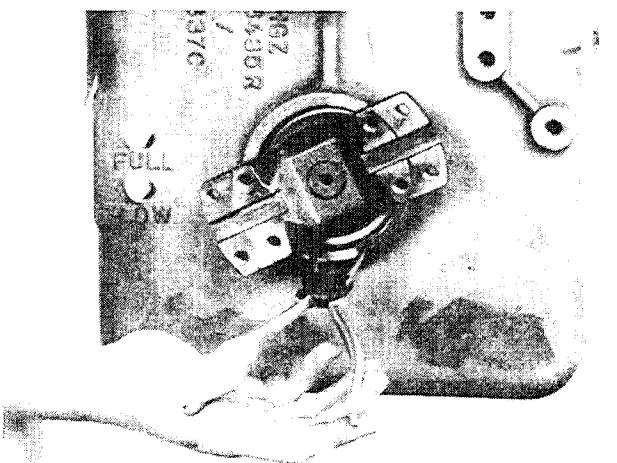


Figure 426
Remove rear output flange retainer ring from ring groove.

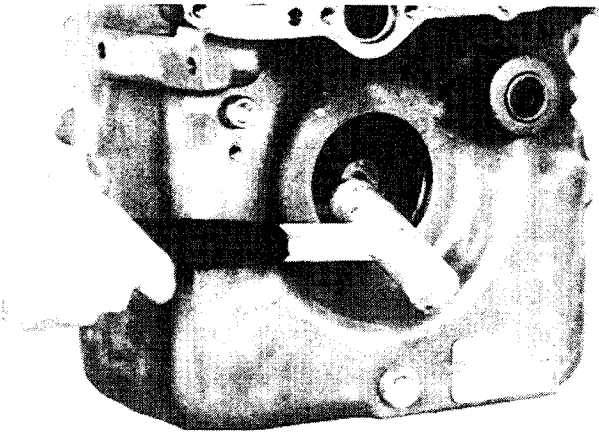


Figure 427

From the front, tap output shaft from output gear and rear bearing.

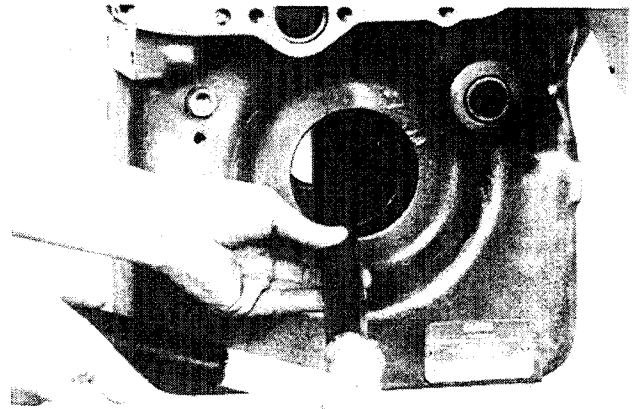


Figure 430

If oil seal sleeve and bearing did not come out with shaft, tap from transmission case. Do not tap on rear bearing locating ring.

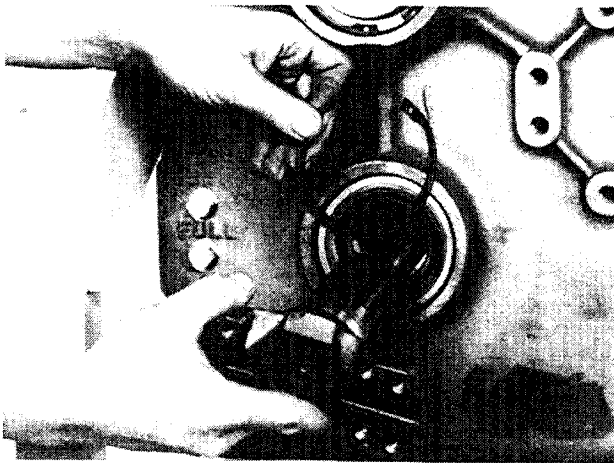


Figure 428

Remove output shaft and flange. **NOTE:** Output oil seal sleeve and bearing may come out with shaft.

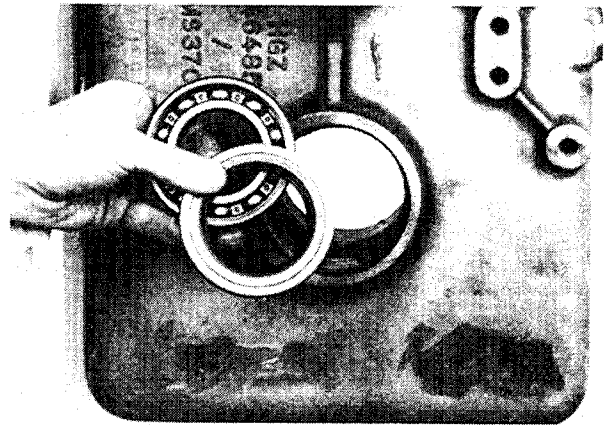


Figure 431

Remove rear bearing and oil seal sleeve.

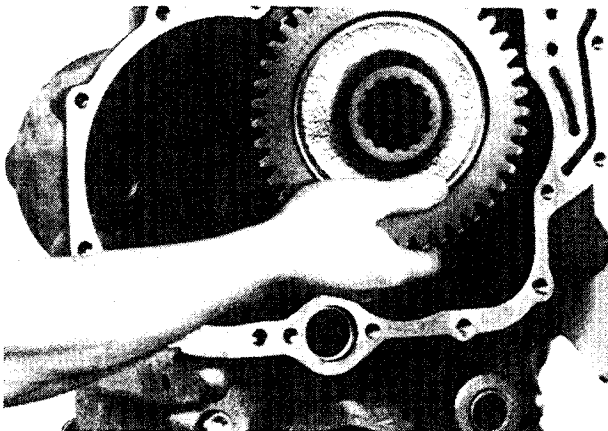


Figure 429

Remove output gear.

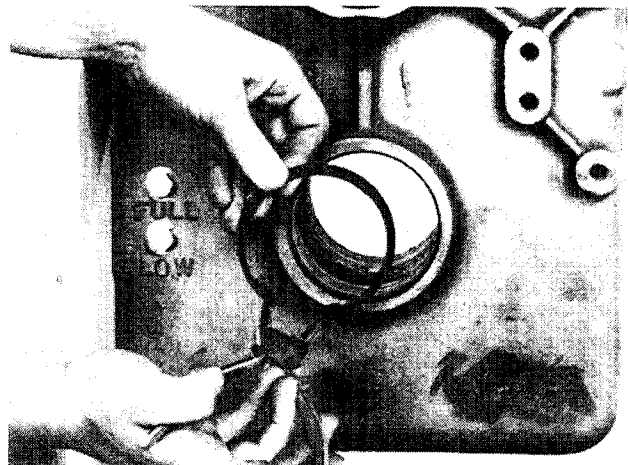


Figure 432

Remove rear bearing locating ring. Refer to Figure 430.

FRONT AXLE DISCONNECT OUTPUT SHAFT INSTALLATION

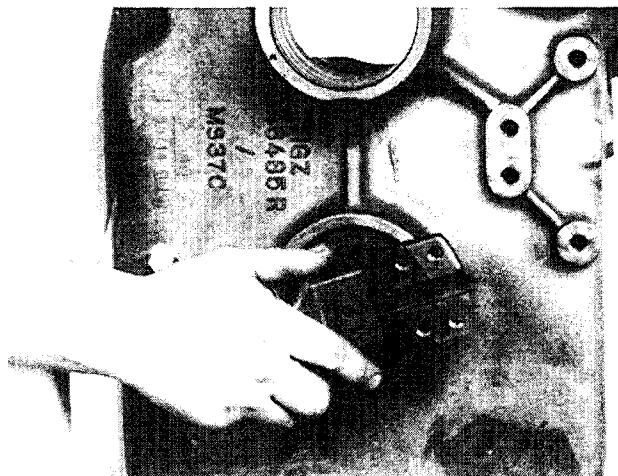


Figure 433

Install rear output flange and shaft through output oil seal. Align splines on shaft with splines on output gear. Install shaft through gear. Use caution as not to damage oil seal.

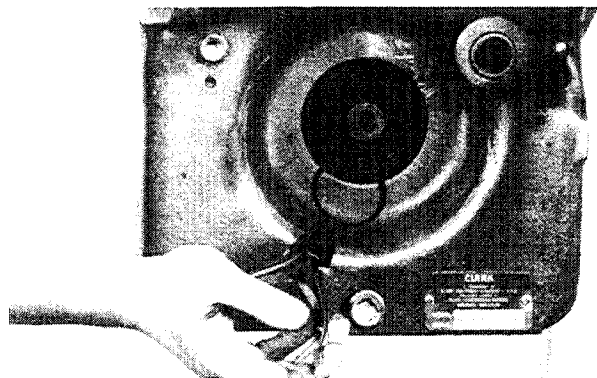


Figure 434

Install output shaft to output gear retainer ring.

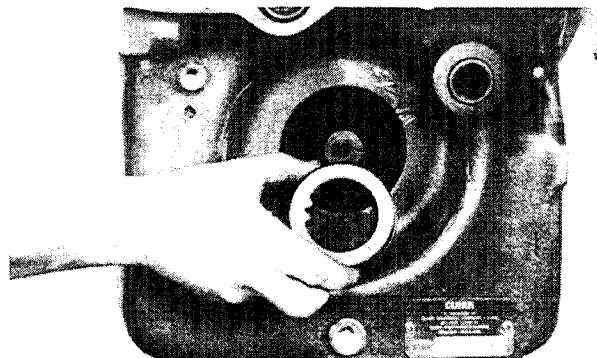


Figure 435

Position shift hub on output shaft.

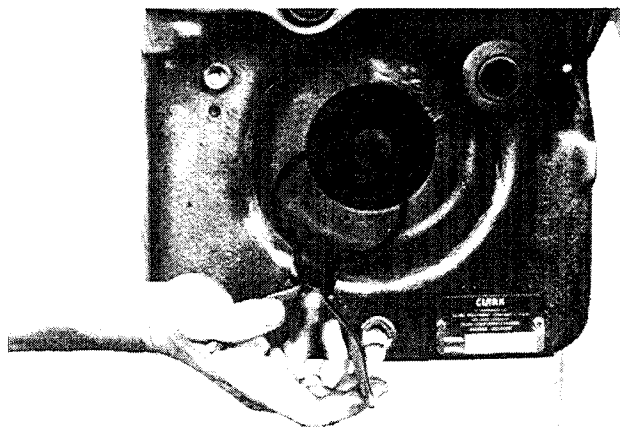


Figure 436

Install front output shaft bearing locating ring.

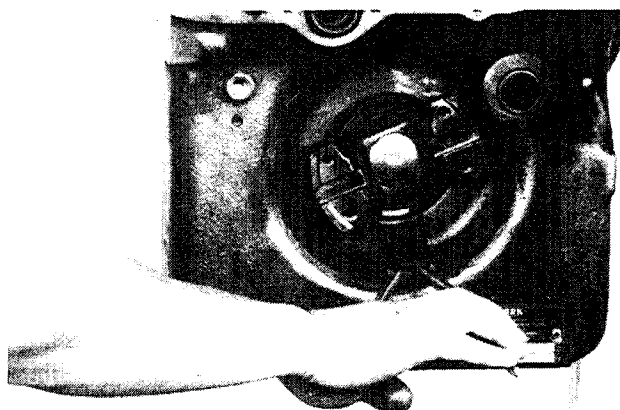


Figure 437

Position front output flange and bearing assembly on output shaft. Using snap ring pliers as shown, squeeze snap ring ends together and tap flange assembly into case until snap ring can seat in snap ring groove.

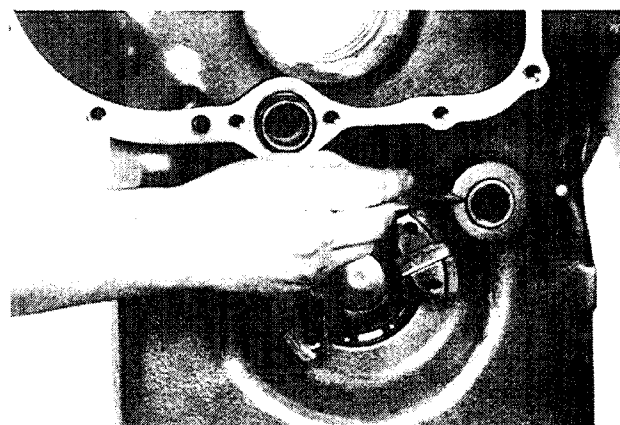


Figure 438

Apply Permatex #2 to outer diameter of shift rail oil seal. Install seal in case with lip of seal in.

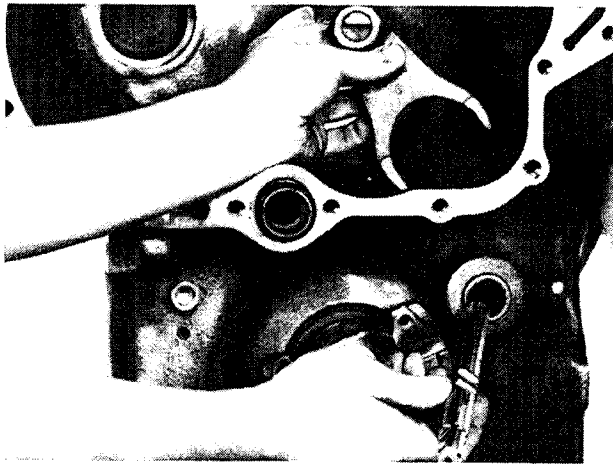


Figure 439

Position shift fork in shift hub on output shaft. Install shift rail through oil seal. Align fork and rail.

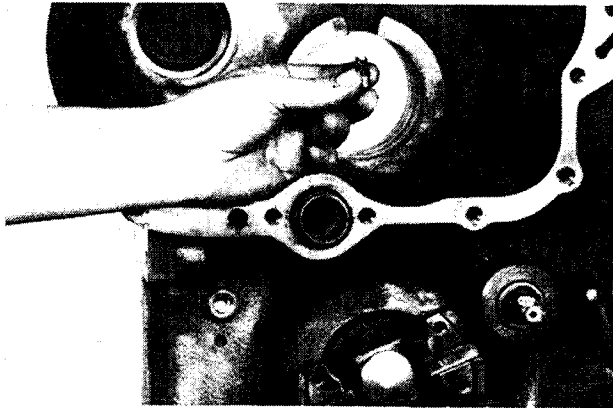


Figure 440

Install shift fork to rail lock screw. Tighten securely and lockwire to prevent loosening.

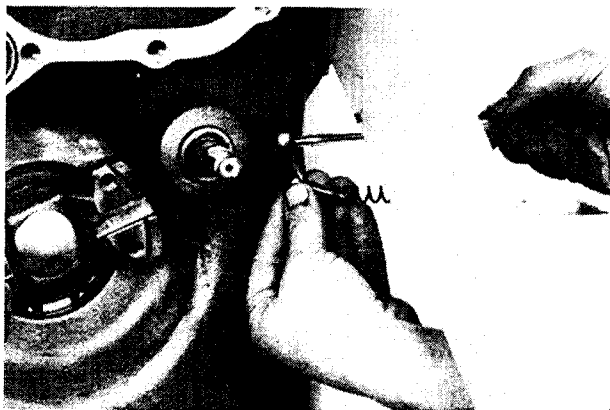


Figure 441

Position detent ball, spring, overshift pin, and plug as shown.

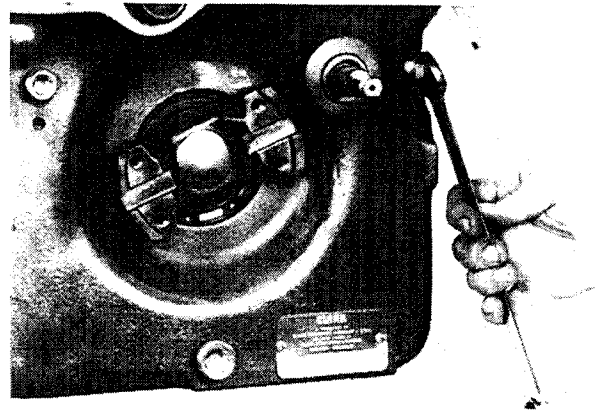


Figure 442

Tighten plug securely. Refer to Figure 377.

DISCONNECT FLANGE SERVICE

FRONT OUTPUT FLANGE DISASSEMBLY AND REASSEMBLY FLANGE USED WITH FRONT DISCONNECT

DISASSEMBLY

NOTE: Unless disconnect front and rear flange bushings are to be replaced, **DO NOT** remove bushing or expansion plug.

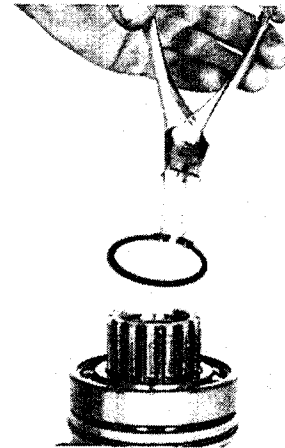


Figure 443

Remove flange to bearing retainer ring.

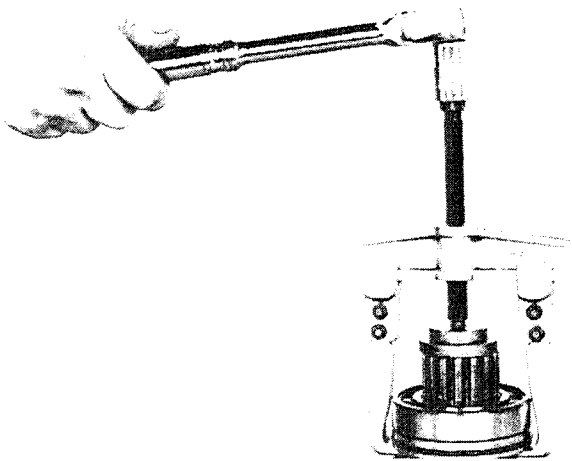


Figure 444

Using a bearing puller as shown, remove bearing.

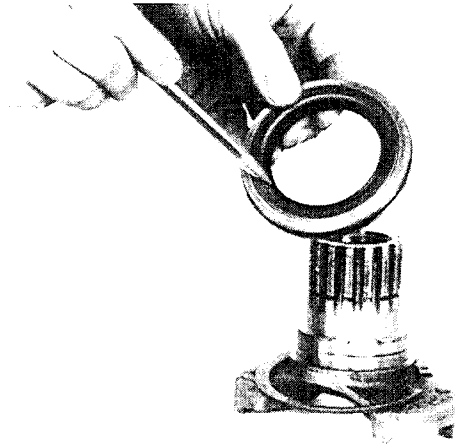


Figure 447

Remove oil seal from sleeve.

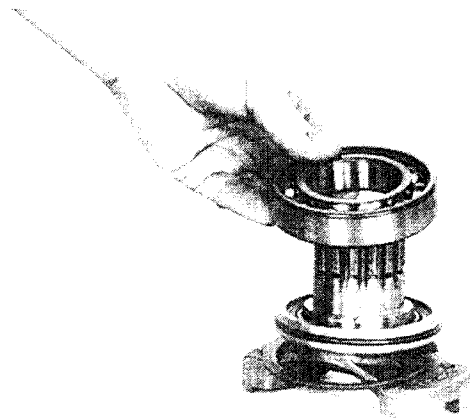


Figure 445

Bearing removed.

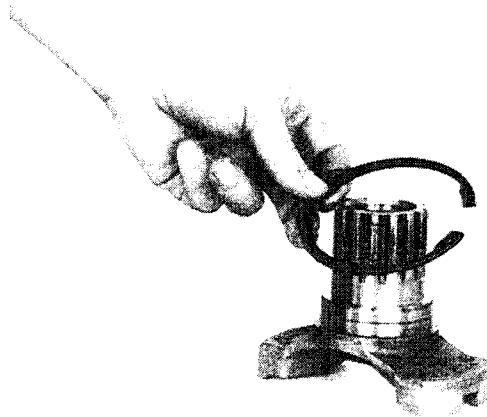


Figure 448

Remove oil seal retainer ring from output flange.

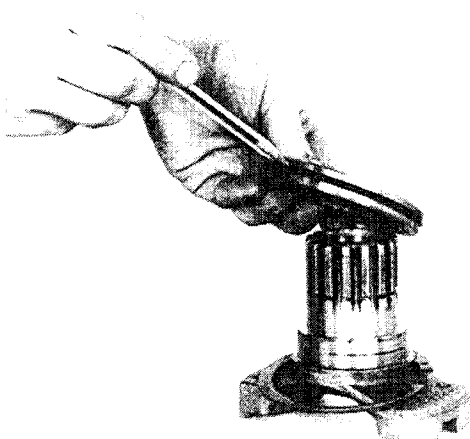


Figure 446

Oil seal sleeve and "O" ring removed.

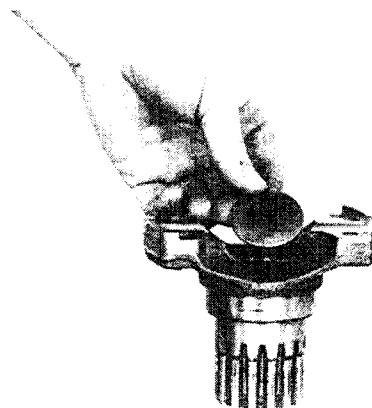


Figure 449

Tap expansion plug from flange.



Figure 450

Remove output bushing.

REASSEMBLY

(See Cleaning and Inspection Page)

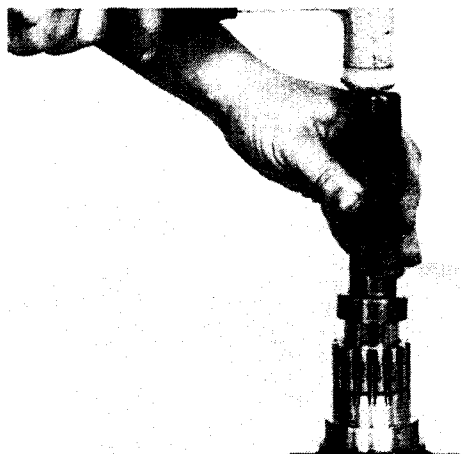


Figure 451

Install new inner and outer flange bushings to dimensions shown in Figure 452B. **NOTE:** Bushings used only with front disconnect.

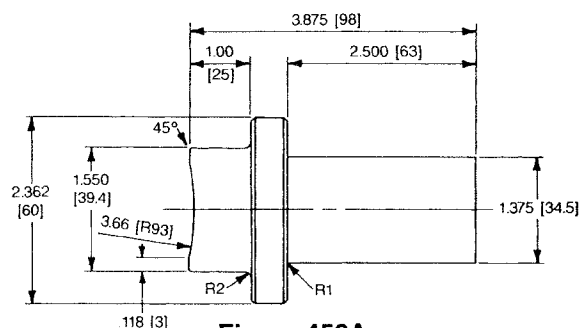


Figure 452A

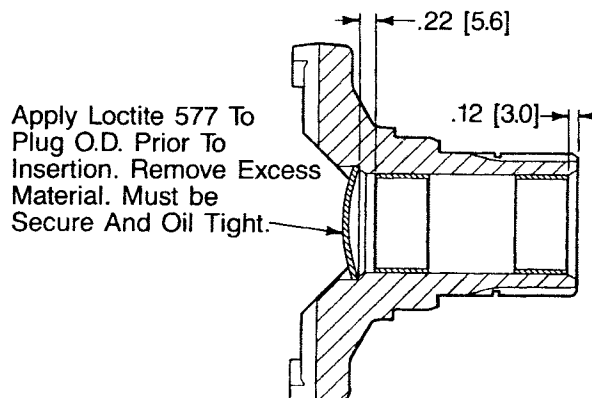


Figure 452B

Apply Loctite 577 To Plug O.D. Prior To Insertion. Remove Excess Material. Must be Secure And Oil Tight.

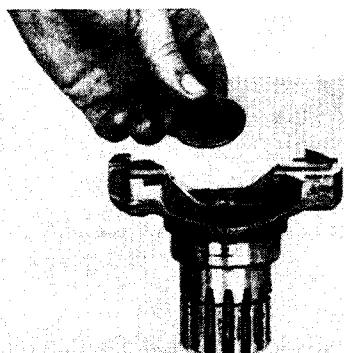


Figure 452

Apply a light coat of Loctite #577 to the outer edge of expansion plug. Install plug in flange with axial force equal to 6300 lbf-ft [28024 N·m]. **NOTE:** See Figure 452A for expansion plug installation tool fabrication. It is imperative plug be installed properly to prevent oil leakage.

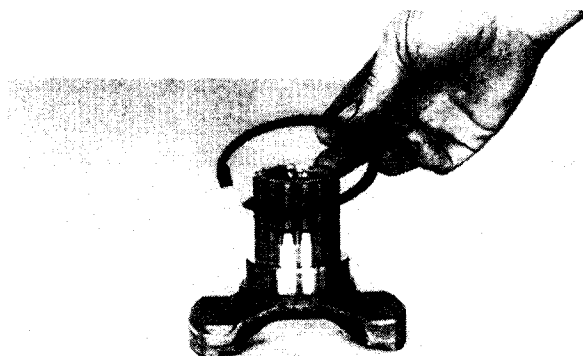


Figure 453

Position retainer ring on output flange.

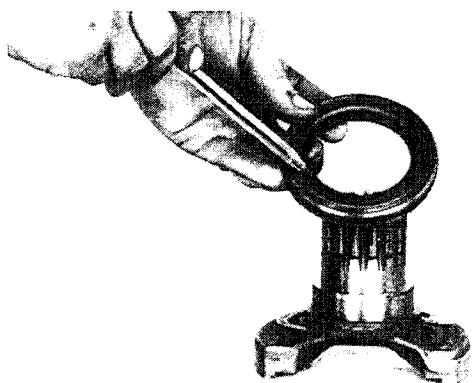


Figure 454

Apply a very light coat of Permatex #2 to the outer diameter of the output flange oil seal. Press oil seal in oil seal sleeve. Oil seal must be flush with one side of face of oil seal sleeve and lip of seal must be in.

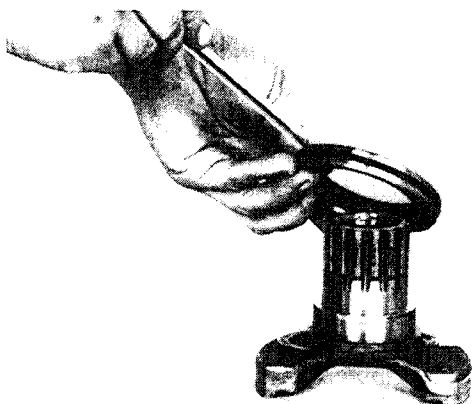


Figure 455

Install new "O" ring on oil seal sleeve. Position oil seal sleeve assembly on output flange. **NOTE:** Recessed portion of oil seal and sleeve must be up, with lip of seal up. This leaves a space between oil seal and output bearing.

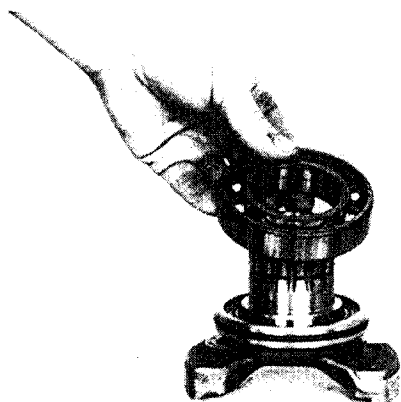


Figure 456

Press bearing on output flange.

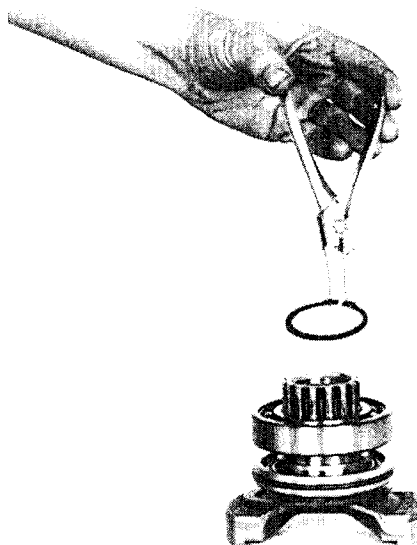


Figure 457

Install bearing to flange retainer ring.

SINGLE MODULATION AND MECHANICAL INCHING REMOVAL

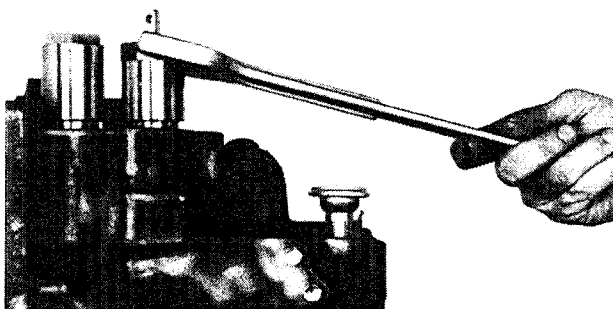


Figure 458

Remove inching valve housing.

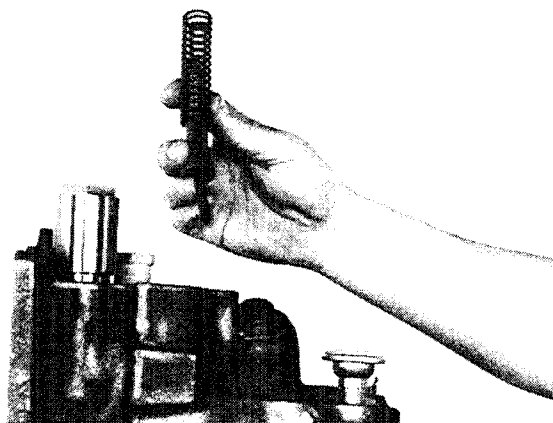


Figure 459

Remove inching return spring, actuator rod, and regulator spring.

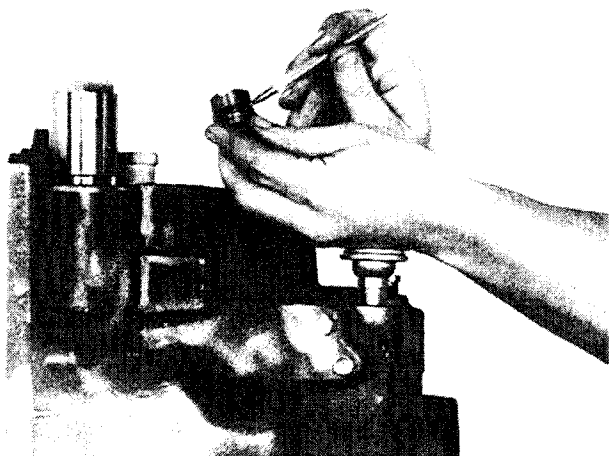


Figure 460
Remove inching sleeve and "O" ring.



Figure 463
Remove modulator valve outer, middle, and inner springs and spring stop.

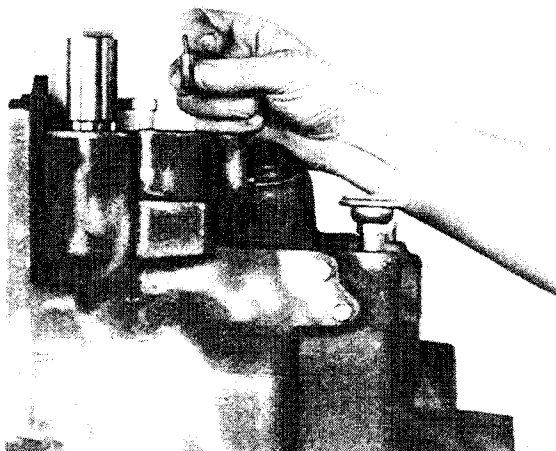


Figure 461
Remove inching spool.

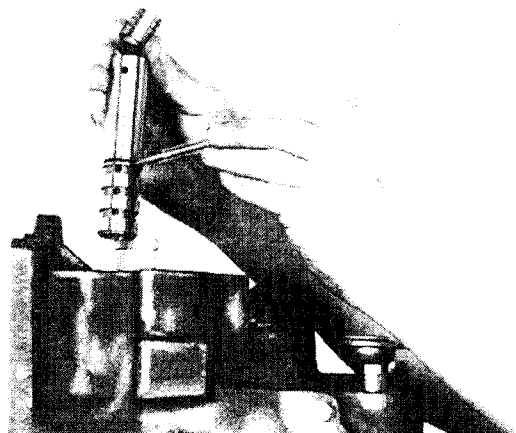


Figure 464
Remove modulation housing sleeve and accumulator spool.

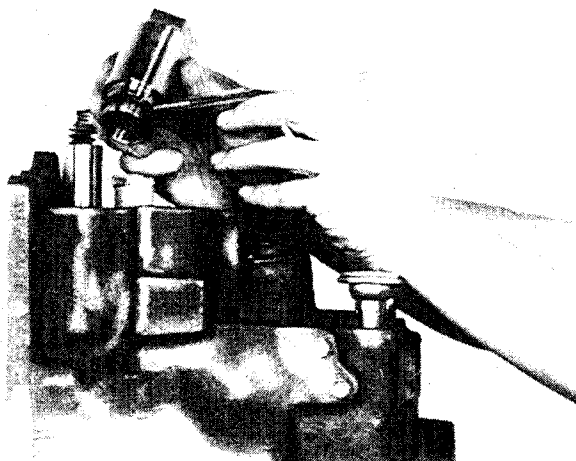


Figure 462
Remove modulator valve housing and "O" ring.

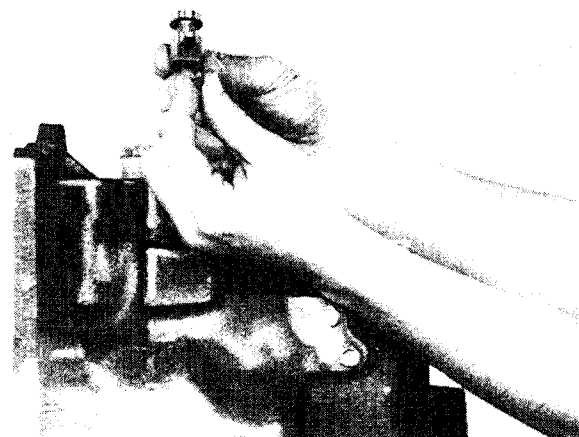


Figure 465
Remove shuttle sleeve and spool.

DISASSEMBLY AND REASSEMBLY OF SINGLE MODULATOR VALVE ASSEMBLY

DISASSEMBLY

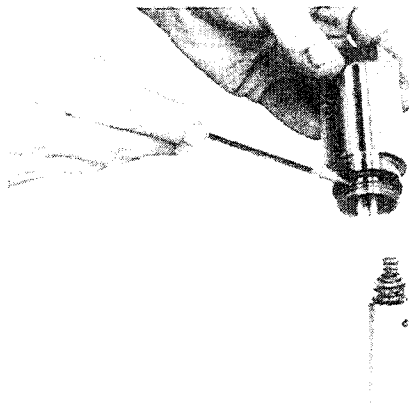


Figure 466
Remove modulator valve body "O" ring.

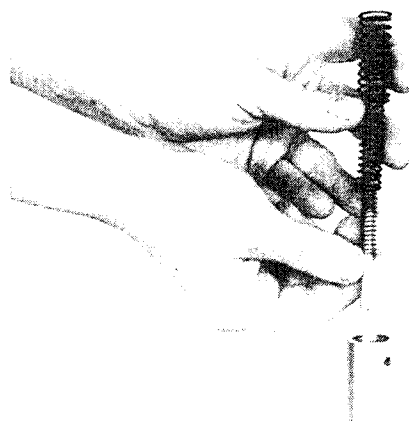


Figure 467
Remove modulator valve outer, middle, and inner springs and spring stop. Ref. Figure 463.

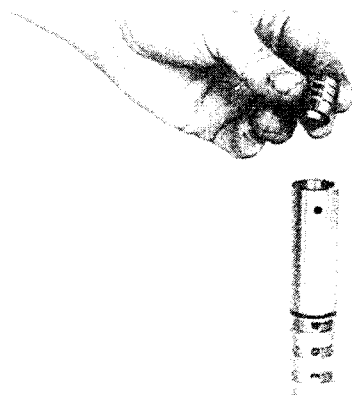


Figure 468
Remove accumulator spool. Reference Figure 464.

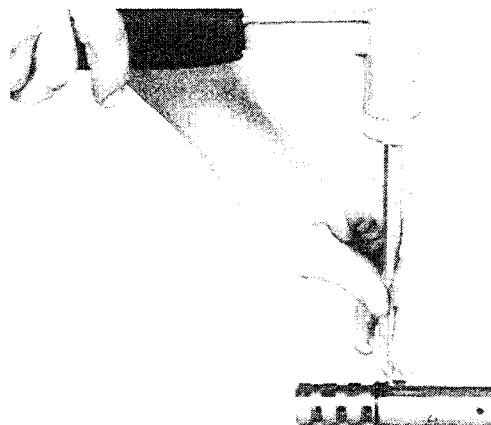


Figure 469
Remove modulator sleeve pin.

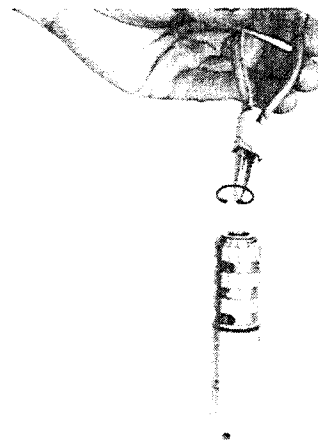


Figure 470
Remove regulator spool assembly retainer ring.

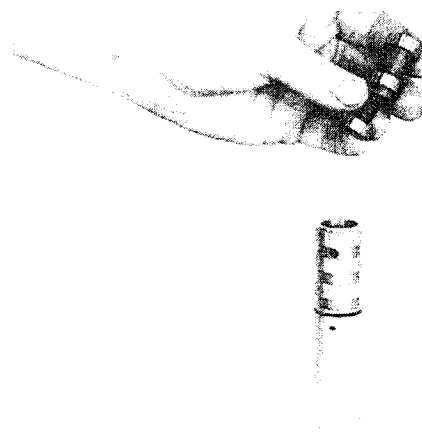


Figure 471
Remove regulator spool stop, spring, and spring and sleeve assembly.

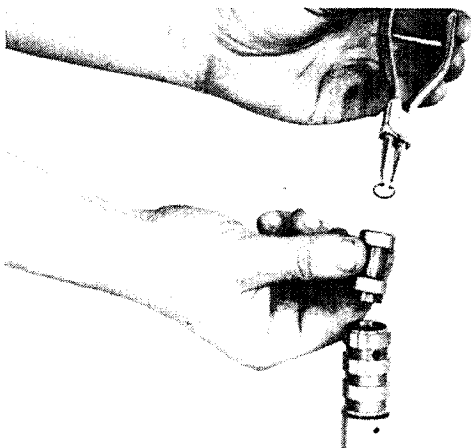


Figure 472

Remove regulator spool sleeve retainer ring.



Figure 473

Remove regulator spool sleeve assembly. Remove "O" ring.

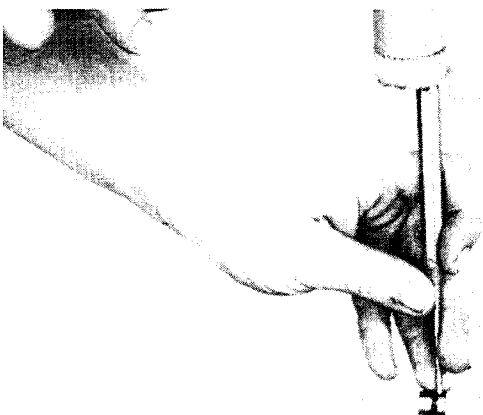


Figure 474

Remove sleeve check ball retainer pin.

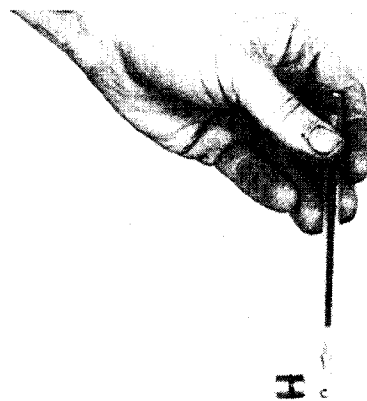


Figure 475

Remove check ball.

REASSEMBLY
(See Cleaning and Inspection Page)

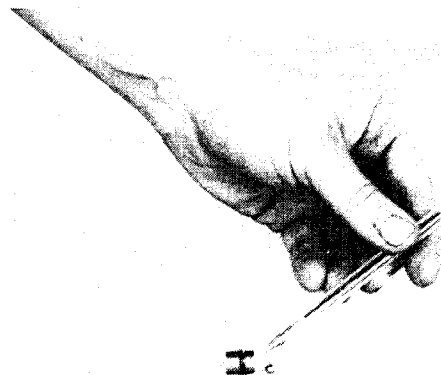


Figure 476

Install a new "O" ring on regulator spool sleeve. Position check ball in sleeve.

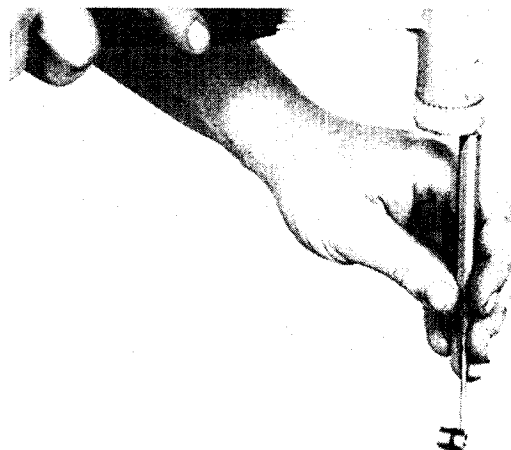


Figure 477

Install check ball retainer pin.

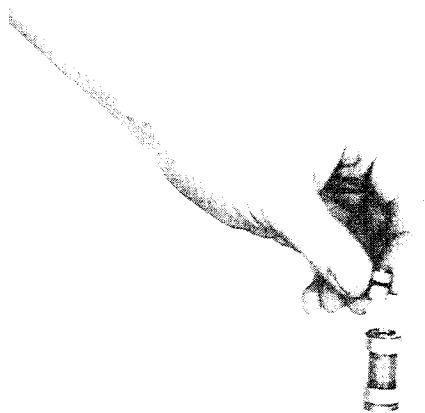


Figure 478

Position sleeve and ball assembly in regulator spool with check ball retainer pin up.

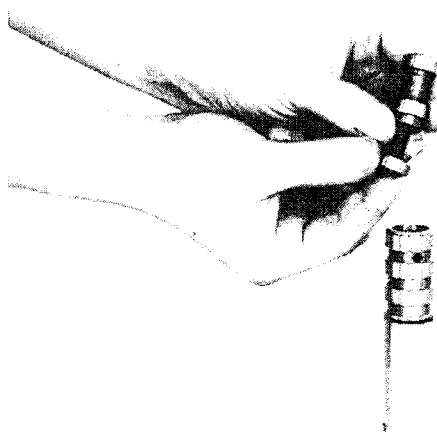


Figure 481

Install regulator spool stop, spring, and regulator spool and sleeve assembly in housing sleeve.

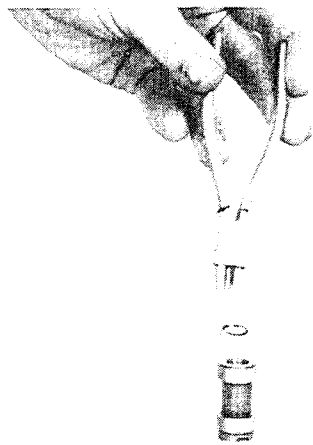


Figure 479

Install sleeve retainer ring.

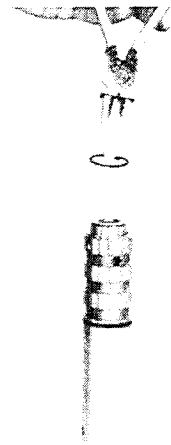


Figure 482

Compress regulator spool spring and install retainer ring.

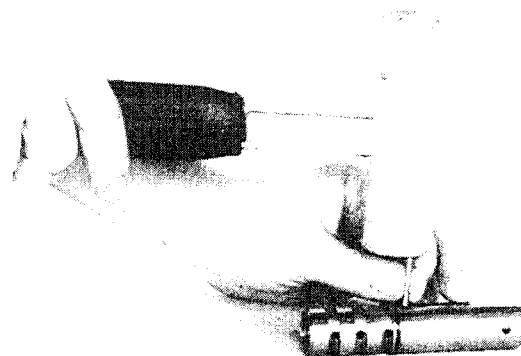


Figure 480

Install housing sleeve pin.

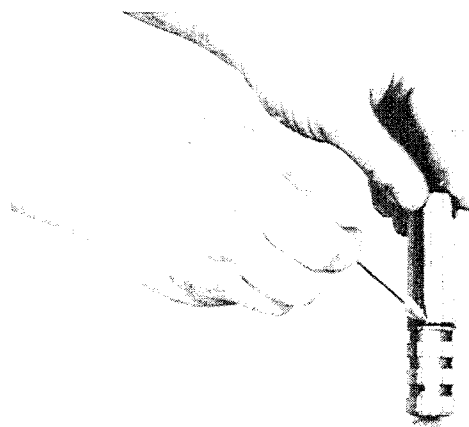


Figure 483

Position new "O" ring on modulation sleeve.

SINGLE MODULATION AND MECHANICAL INCHING INSTALLATION

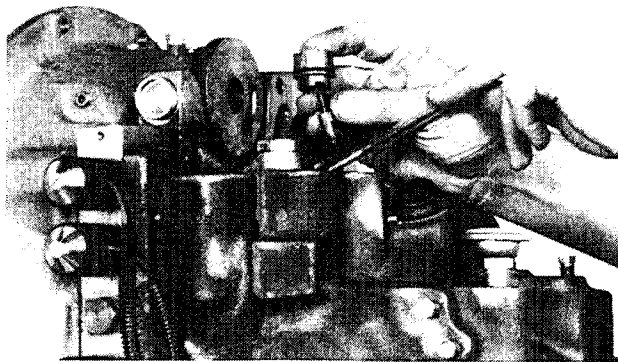


Figure 484

Install a new "O" ring on inching sleeve. Install inching spool in sleeve. Install spool and sleeve in inching control bore.

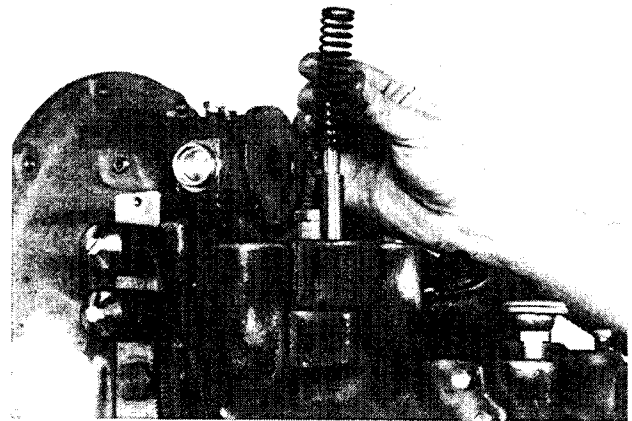


Figure 487

Install inching return spring.

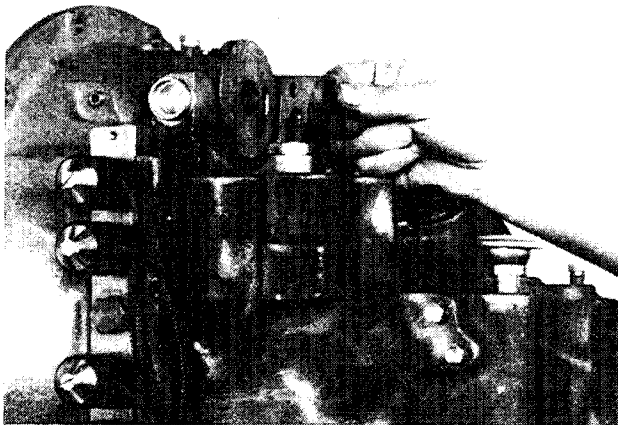


Figure 485

Install inching regulator spool spring.

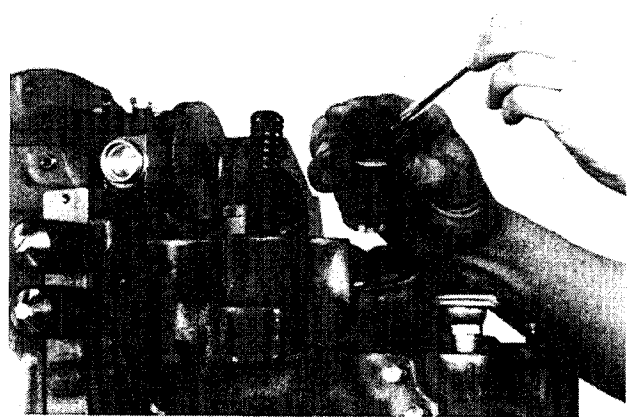


Figure 488

With new actuator rod oil seal in position and new "O" ring on inching housing, install housing over actuator rod and thread into inching bore.

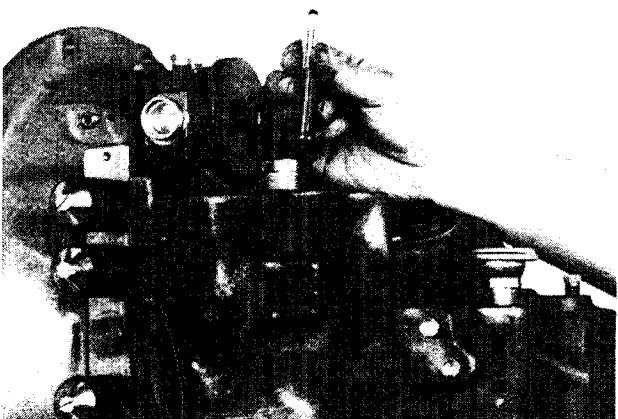


Figure 486

Install inching actuator rod over spring.

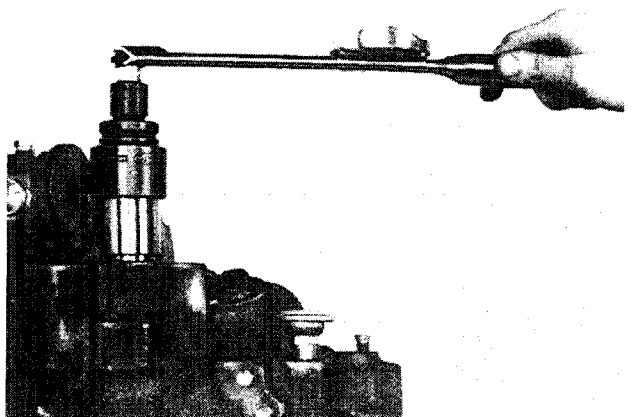


Figure 489

Tighten inching valve housing to specified torque. See assembly instruction drawing.

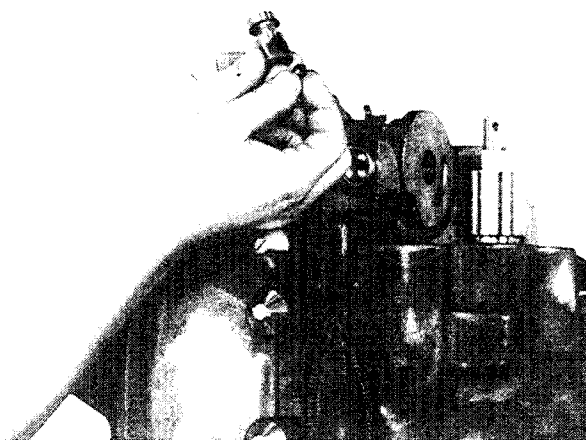


Figure 490

Position shuttle spool in shuttle sleeve. Install spool and sleeve in modulator valve bore.



Figure 493

Install stop pin, inner, middle, and outer springs in accumulator and housing sleeve.

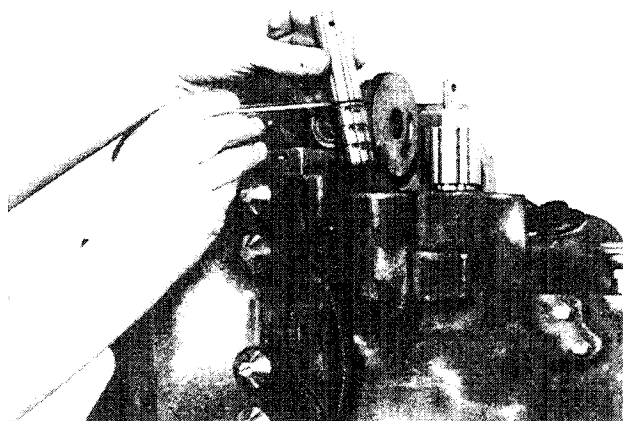


Figure 491

With new "O" ring in position, install modulation housing sleeve assembly in bore.

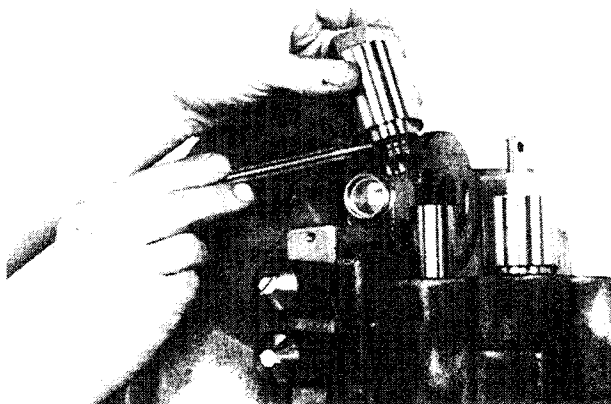


Figure 494

Position a new "O" ring on modulator valve housing. Thread housing into valve bore.

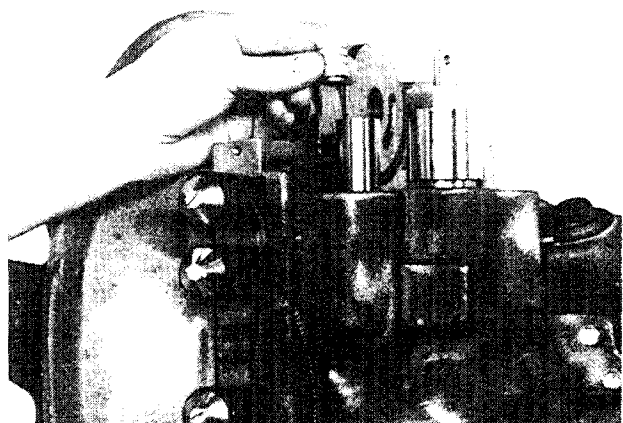


Figure 492

Install accumulator spool in housing sleeve as shown.

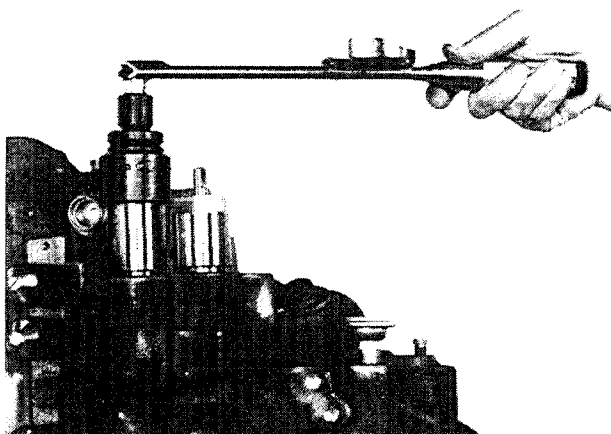


Figure 495

Tighten modulator valve housing to specified torque. See assembly instruction drawing. Refer to Figure 364.

**CLUTCH ENGAGEMENT FOR 4 SPEED
T12000 POWER SHIFT TRANSMISSION**

FORWARD

SHIFT SPEED	DIRECTION CLUTCH	SPEED CLUTCH
1st	A	C
2nd	A	D
3rd	A	E
4th	F	E

REVERSE

SHIFT SPEED	DIRECTION CLUTCH	SPEED CLUTCH
1st	B	C
2nd	B	D
3rd	B	E

**CLUTCH ENGAGEMENT FOR 6 SPEED
T12000 POWER SHIFT TRANSMISSION**


FORWARD

SHIFT SPEED	DIRECTION CLUTCH	SPEED CLUTCH
1st	A	C
2nd	F	C
3rd	A	D
4th	F	D
5th	A	E
6th	F	E

REVERSE

SHIFT SPEED	DIRECTION CLUTCH	SPEED CLUTCH
1st	B	C
2nd	B	D
3rd	B	E

CLUTCH ENGAGEMENT

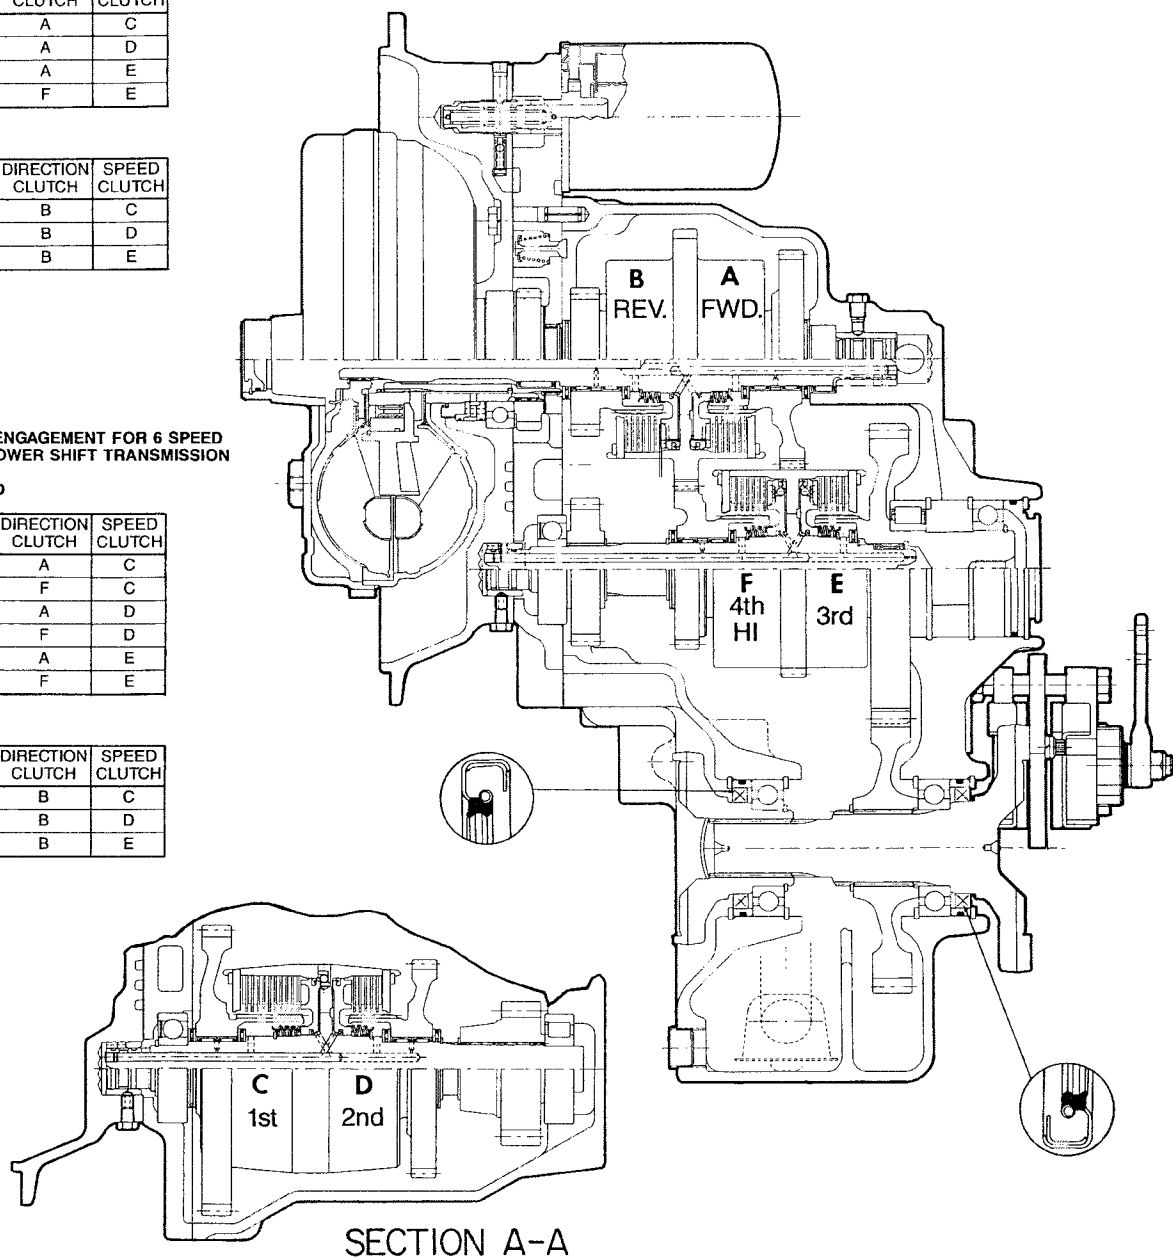

SECTION A-A

CLUTCH ENGAGEMENT


CLUTCH ENGAGEMENT FOR 3 SPEED
T12000 POWER SHIFT TRANSMISSION

FORWARD

SHIFT SPEED	DIRECTION CLUTCH	SPEED CLUTCH
1st	A	C
2nd	A	D
3rd	A	E

REVERSE


SHIFT SPEED	DIRECTION CLUTCH	SPEED CLUTCH
1st	B	C
2nd	B	D
3rd	B	E

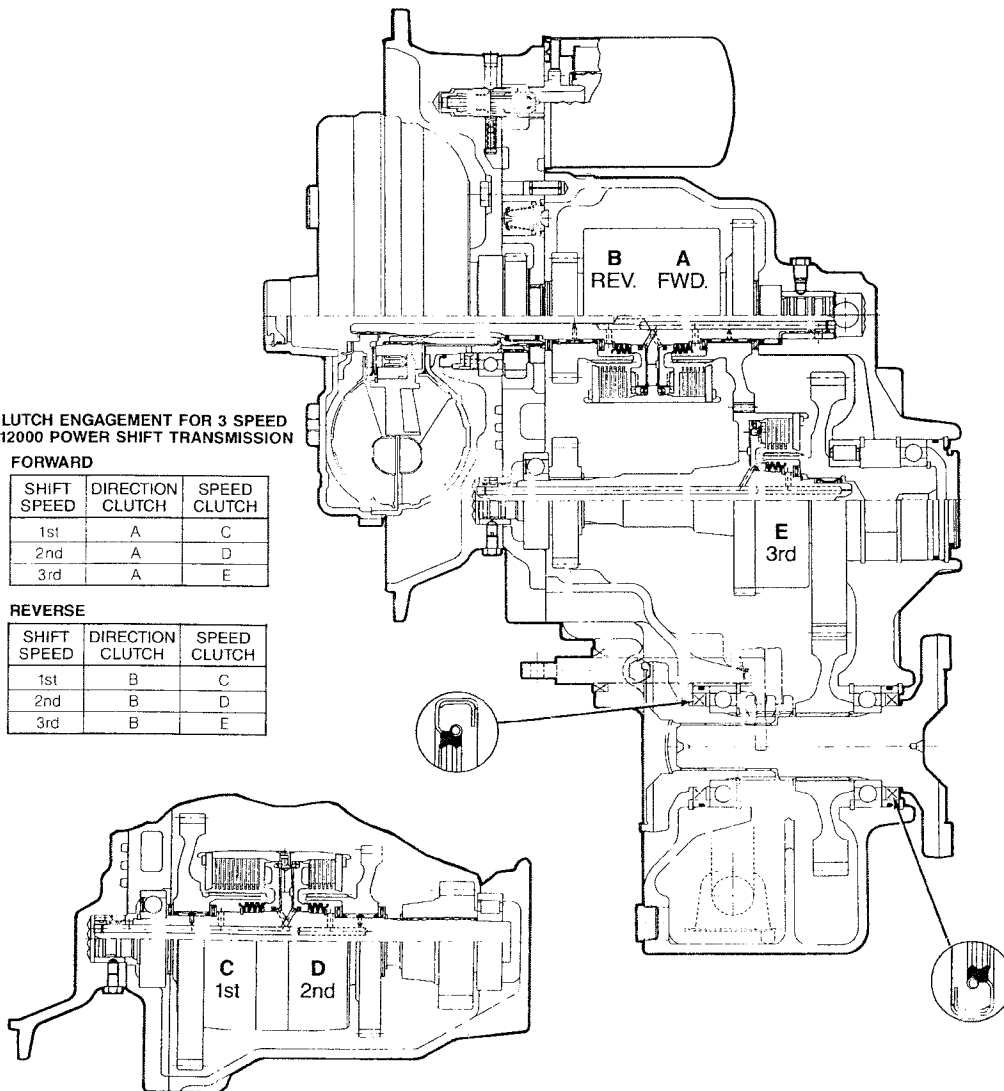

DRIVE PLATE INSTALLATION

Measure the "A" dimension (Bolt Circle diameter) and order Drive Plate Kit listed below.

Note two (2) kits have two (2) intermediate drive plates and one (1) drive plate and weld nut assembly. Two (2) kits with three intermediate drive plates.

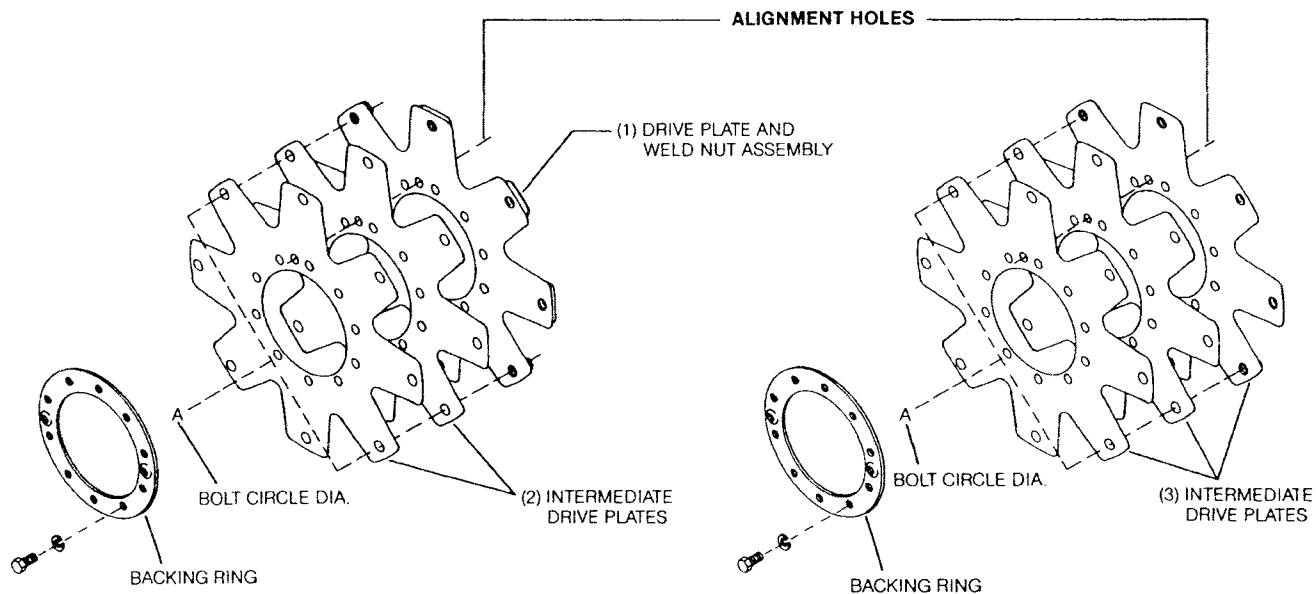

"A" Dimension (Bolt Circle Diameter)

11.380" [288,900 mm] Diameter
Kit No. 802501
13.125" [333,38 mm] Diameter
Kit No. 802424
13.500" [342,90 mm] Diameter
Kit No. 802425

Each Kit will include the following parts:

- 2 Intermediate Drive Plates.
- 1 Drive Plate and Weld Nut Assembly.
- 1 Backing Ring.
- 6 Mounting Screws.
- 6 Lock Washers.
- 1 Instruction Sheet.

"A" Dimension (Bolt Circle Diameter)

11.380" [288,900 mm] Diameter
Kit No. 802543
13.125" [333,38 mm] Diameter
Kit No. 802426
13.500" [342,90 mm] Diameter
Kit No. 802427

Kit will include the following parts:

- 3 Intermediate Drive Plates.
- 1 Backing Ring.
- 6 Mounting Screws.
- 6 Lock Washers.
- 1 Instruction Sheet.

TO FACILITATE ASSEMBLY, ALIGN SMALL HOLES IN DRIVE PLATES — SEE ILLUSTRATION ABOVE — ALIGNMENT HOLES.

Position drive plate and weld nut assembly on torque converter assembly with weld nuts toward converter. Align intermediate drive plates and backing ring with holes in torque converter assembly. **NOTE:** Two dimples 180° apart in backing ring must be out (toward engine flywheel). Install capscrews and washers. Tighten 26 to 29 ft. lbs. torque [35 - 39 N.m].

TRANSMISSION TO ENGINE INSTALLATION PROCEDURE

1. Remove all burrs from flywheel mounting face and nose pilot bore. Clean drive plate surface with solvent.
2. Check engine flywheel & housing for conformance to standard SAE No. 3 per SAE J927 and J1033 tolerance specifications for pilot bore size, pilot bore runout and mounting face flatness. Measure and record engine crankshaft end play.
3. Install two 2.50 [63,500 mm] long transmission to flywheel housing guide studs in the engine flywheel housing as shown. Rotate the engine flywheel to align a drive plate mounting screw hole with the flywheel housing access hole.
- *4. Install a 4.00 [101,60 mm] long drive plate locating stud .3750 - 24 fine thread in a drive plate nut. Align the locating stud in the drive plate with the flywheel drive plate mounting screw hole positioned in step No. 3.
5. Rotate the transmission torque converter to align the locating stud in the drive plate with the flywheel drive plate mounting screw hole positioned in step No. 3. Locate transmission on flywheel housing.

Aligning drive plate to flywheel and transmission to flywheel housing guide studs, install transmission to flywheel housing screws. Tighten screws to specified torque. Remove transmission to engine guide studs. Install remaining screws and tighten to specified torque.

- *6. Remove drive plate locating stud.
7. Install drive plate attaching screw and washer. Snug screw but **do not tighten**. Some engine flywheel housings have a hole located on the flywheel housing circumference in line with the drive plate screw access hole. A screwdriver or pry bar used to hold the drive plate against the flywheel will facilitate installation of the drive plate screws. Rotate the engine flywheel and install the remaining seven (7) flywheel to drive plate attaching screws. Snug screws but do not tighten. After all eight (8) screws are installed torque each one 26 to 29 lbf·ft torque [35 - 39 N·m]. This will require tightening each screw and rotating the engine flywheel until the full amount of eight (8) screws have been tightened to specified torque.
8. Measure engine crankshaft end play after transmission has been completely installed on engine flywheel. This value must be within .001 [0,025 mm] of the end play recorded in step No. 2.

*Does not apply to units having 3 intermediate drive plates. See Fig. 4.

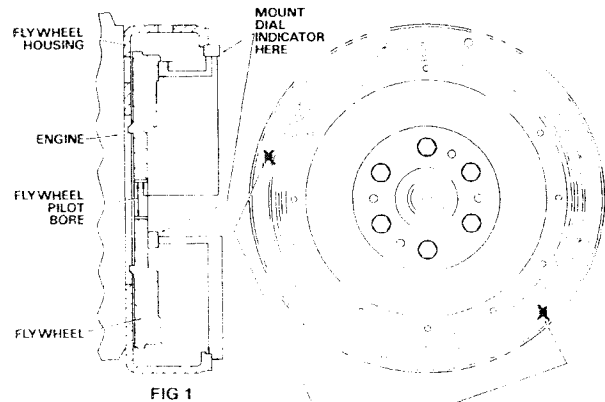


FIG 1

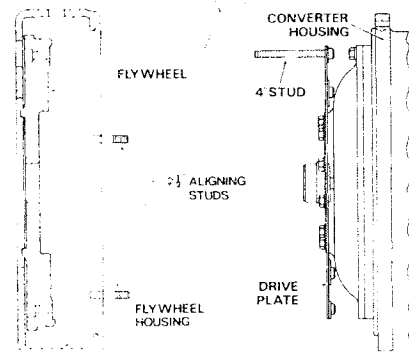


FIG 2

SPECIAL STUD, WASHER AND SELF LOCK NUT FURNISHED BY ENGINE MANUFACTURER.

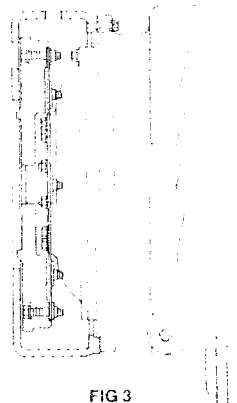


FIG 3

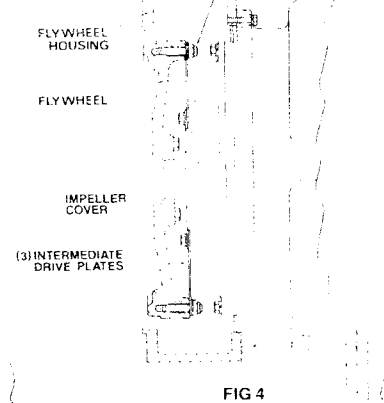


FIG 4

SPECIFICATIONS AND SERVICE DATA—POWER SHIFT TRANSMISSION AND TORQUE CONVERTER

TRANSMISSION OUT PRESSURE	With transmission outlet oil temperature, 180° -200°F. [82,3°-93,3°C] and transmission in NEUTRAL . Operating specifications: 25 P.S.I. [173 kPa] minimum pressure at 2000 R.P.M. engine speed AND a maximum of 140 P.S.I. [965 kPa] outlet pressure with engine operating at no-load governed speed.
CONTROLS	Speed Selection — Electric.
CLUTCH TYPE	Multiple discs, hydraulically actuated, spring released, automatic wear compensation, and no adjustment. All clutches oil cooled and lubricated.
CLUTCH INNER DISC	Friction.
CLUTCH OUTER DISC	Steel.

OIL FILTRATION Full flow oil filter safety by-pass, also strainer screen in sump at bottom of transmission case.

**CLUTCH
PRESSURE** 185 P.S.I. [1275,5 kPa] minimum — With parking brake set (**see note**), oil temperature 180° - 200° F. [82,2° - 93,3° C], engine at idle (400 to 600 R.P.M.), shift thru direction and speed clutches. All clutch pressure must be equal within 5 P.S.I., [34,5 kPa]. If clutch pressure varies in any one clutch more than 5 P.S.I., [34,5 kPa] repair clutch.

Normal operating pressure 240-280 P.S.I. [1654,8 - 1930,5 kPa] at 2000 R.P.M.

NOTE: Never use service brakes while making clutch pressure checks. Units having brake actuated declutching in forward and/or reverse will not give a true reading.

ALWAYS USE PARKING BRAKE WHEN MAKING CLUTCH PRESSURE CHECKS.

LUBRICATION


TYPE OF OIL	See Lube Chart.
CAPACITY	Consult Operator's Manual on applicable machine model for system capacity. Torque Converter, Transmission, and allied hydraulic system must be considered as a whole to determine capacity.
CHECK PERIOD	Check oil level DAILY with engine running at 500 - 600 R.P.M. and oil at 180° to 200° F. [82,2°-93,3°C]. Maintain oil level to FULL port.
**NORMAL DRAIN PERIOD	Every 1000 hours, change oil filter Every 1000 hours, drain and refill system as follows: Drain with oil at 150° to 200°. [65,6°-93,3° C]. (a) Drain transmission. (b) Oil filter, remove and discard. Install new oil filter. (c) Refill transmission to LOW port. (d) Run engine at 500-600 R.P.M. to prime converter and lines. (e) Recheck level with engine running at 500 - 600 R.P.M. and add oil to bring level to LOW port. When oil temperature is hot (180° - 200° F.) [82,2°- 93,3° C] make final oil level check. BRING OIL LEVEL TO FULL PORT.

NOTE:

It is recommended that oil filter be changed after 50 and 100 hours of operation on new and rebuilt or repaired units.

RECOMMENDED LUBRICANTS FOR CLARK-HURTH POWER SHIFTED TRANSMISSION AND TORQUE CONVERTERS

Prevailing Ambient Temperature

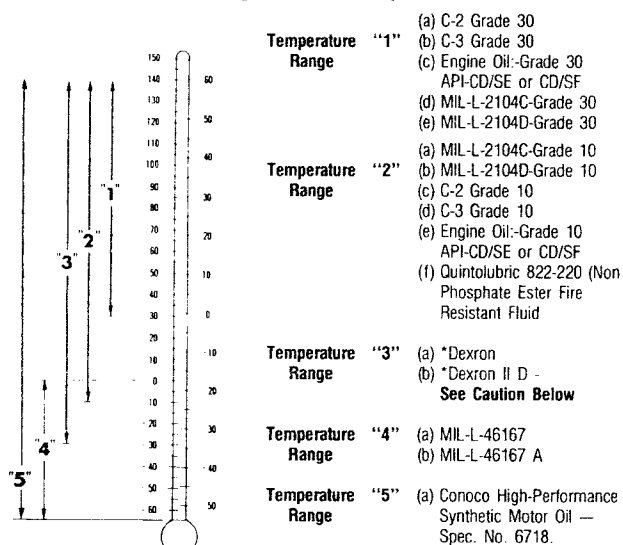

*Dexron is a registered trademark of General Motors Corporation.

PREFERRED OIL VISCOSITY: Select highest oil viscosity compatible with prevailing ambient temperatures and oil application chart.

Temperature ranges "2" and "3" may be used to lower ambient temperatures when sump preheaters are used.

Temperature range "4" should be used only in ambient temperature range shown.

MODULATED SHIFT TRANSMISSIONS: T12000, 18000, 24000, 28000, & 32000 series transmissions with modulated shift use only C-3 or temperature range 3 items (a) & (b) *Dexron or *Dexron II D. **SEE CAUTION BELOW.** 3000, 4000, 5000, 6000, 8000, 16000 & 34000 series transmission with modulated shift use only C-3 or temperature range 3 item (a) only *Dexron. Do **NOT** use *Dexron II D. **SEE CAUTION BELOW.**

CAUTION: *Dexron II D is not compatible with graphitic clutch plate friction material **UNLESS IT MEETS THE APPROVED C-3 SPECIFICATIONS.** *Dexron II D cannot be used in the 3000, 4000, 5000, 6000, 8000, 16000, or 34000 series power shift transmissions, or the HR28000 & HR32000 series having converter lock-up, or the C270 series converter having lock-up **UNLESS IT MEETS THE APPROVED C-3 SPECIFICATIONS.**

Any deviation from this chart must have written approval from the application department of the Clark-Hurth Components Engineering and Marketing Department.

****Normal drain periods and oil filter change intervals are for average environmental and duty-cycle conditions. Severe or sustained high operating temperatures or very dusty atmospheric conditions will cause accelerated deterioration and contamination. For extreme conditions judgment must be used to determine the required change intervals.**

SERVICING MACHINE AFTER TRANSMISSION OVERHAUL

The transmission, torque converter, and its allied hydraulic system are important links in the driveline between the engine and the wheels. The proper operation of either unit depends greatly on the condition and operation of the other; therefore, whenever repair or overhaul of one unit is performed, the balance of the system must be considered before the job can be considered complete.

After the overhauled or repaired transmission has been installed in the machine, the oil cooler, and connecting hydraulic system must be thoroughly cleaned. This can be accomplished in several manners and a degree of judgment must be exercised as to the method employed.

The following are considered the minimum steps to be taken:

1. Drain entire system thoroughly.
2. Disconnect and clean all hydraulic lines. Where feasible, hydraulic lines should be removed from machine for cleaning.
3. Replace oil filter elements, cleaning out filter cases thoroughly.

4. The oil cooler must be thoroughly cleaned. The cooler should be "back flushed" with oil and compressed air until all foreign material has been removed. Flushing in direction of normal oil flow will not adequately clean the cooler. If necessary, cooler assembly should be removed from machine for cleaning, using oil, compressed air, and steam cleaner for that purpose. **DO NOT** use flushing compounds for cleaning purposes.

5. Reassemble all components and use only type oil recommended for lubrication section. Fill transmission through filler opening until fluid comes up to **FULL** port on transmission.

Remove **UPPER** check plug, fill until oil runs from **UPPER** oil hole. Replace filler and level plug.

Run engine two minutes at 500-600 R.P.M. to prime torque converter and hydraulic lines. Recheck level of fluid in transmission with engine running at idle (500-600 R.P.M.).

Add quantity necessary to bring fluid level to run freely from **UPPER** oil level check plug hole. Install oil level plug. Recheck with hot oil (180-200° F.) [82, 2-93, 3° C].

6. Recheck all drain plugs, lines, connections, etc., for leaks and tighten where necessary.

EXTERNAL PLUMBING AND PRESSURE CHECK POINTS

PORT "J" — "TO COOLER" TEMPERATURE

PORT IS TO BE USED FOR "OIL TO COOLER" TEMPERATURE PICK-UP. GAUGE IS TO BE LOCATED IN THE OPERATOR COMPARTMENT. SEE OIL TEMPERATURE GAUGE SPECIFICATION.

PORT "D" — "TO COOLER" PRESSURE

1. PRESSURE MUST BE MEASURED DURING NORMAL VEHICLE TEST PROCEDURE.

TEST CONDITIONS:

1. "TO COOLER" OIL TEMPERATURE 180-220°F [82-104°C]
2. TRANSMISSION IN NEUTRAL

OPERATING SPECIFICATIONS:

1. 25 psi [173 kPa] MIN PRESSURE AT 2000 RPM ENGINE SPEED AND MAXIMUM OF 140psi [965 kPa] OUTLET PRESSURE AT NO LOAD GOVEREND SPEED

PORT "A" — CLUTCH PRESSURE

IT IS RECOMMENDED THAT CLUTCH PRESSURE BE MONITORED BY A GAUGE LOCATED IN THE OPERATOR COMPARTMENT. NORMAL OPERATING PRESSURE 240-280 PSI [1655-1930 kPa] at 2000 RPM.

185 P.S.I. [1275,5 kPa] minimum - With parking brake set (See Note), oil temperature 180°-200° F. [82,2°-93,3°C], engine at idle (400 - 600 R.P.M.), shift thru direction and speed clutches. All clutch pressure must be equal within 5 P.S.I. [34,5 kPa]. If clutch pressure varies in any one clutch more than 5 P.S.I. [34,5 kPa] repair clutch.

PORT "C" and "M" — BACKUP WARNING

THIS PORT IS PROVIDED FOR INSTALLATION OF BACK-UP PRESSURE SWITCH FOR WARNING LIGHT OR HORN.

OIL TEMPERATURE GAUGE SPECIFICATIONS:

1. NORMAL OPERATING TEMPERATURE: 180-250°F [82-121°C]
2. RED LINED TEMPERATURE: 250°F [121°F]

PORT M (45)
FORWARD CLUTCH PRESSURE

PORT C (46)
REVERSE CLUTCH PRESSURE


PORT T
FULL OIL LEVEL

PORT S
ADD OIL LEVEL

NOTE: Never use service brakes while making clutch pressure checks. Units having brake actuated declutching in forward and/or reverse will not give a true reading.

ALWAYS USE PARKING BRAKE WHEN MAKING CLUTCH PRESSURE CHECKS.

REAR VIEW

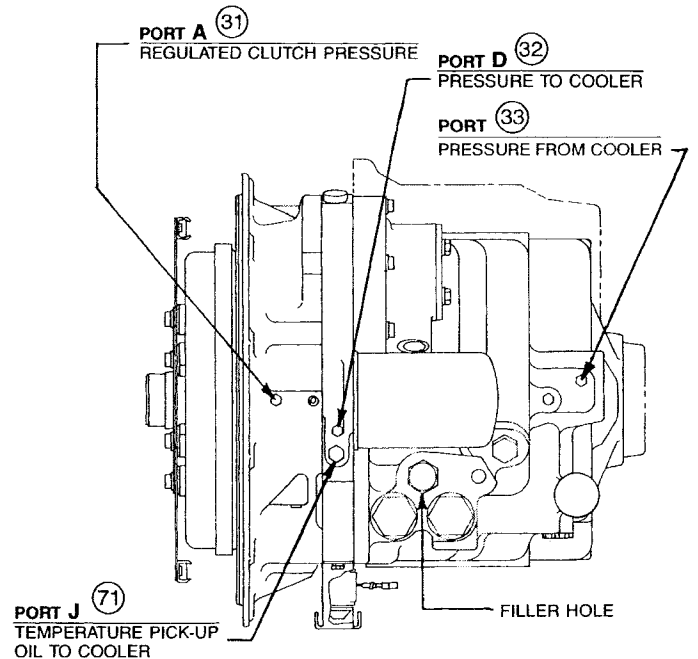

3, 4 & 6 Speed

PORT K (41)

CHECK PORT - CLUTCH
PRESSURE

3 SPEED: 1ST

4 SPEED: 1ST

6 SPEED: FWD 1ST, 2ND, REV 1ST.

PORT E (42)

CHECK PORT - CLUTCH
PRESSURE


3 SPEED: 2ND

4 SPEED: 2ND

6 SPEED: FWD 3RD, 4TH, REV 2ND.

PORT L

OIL FROM COOLER

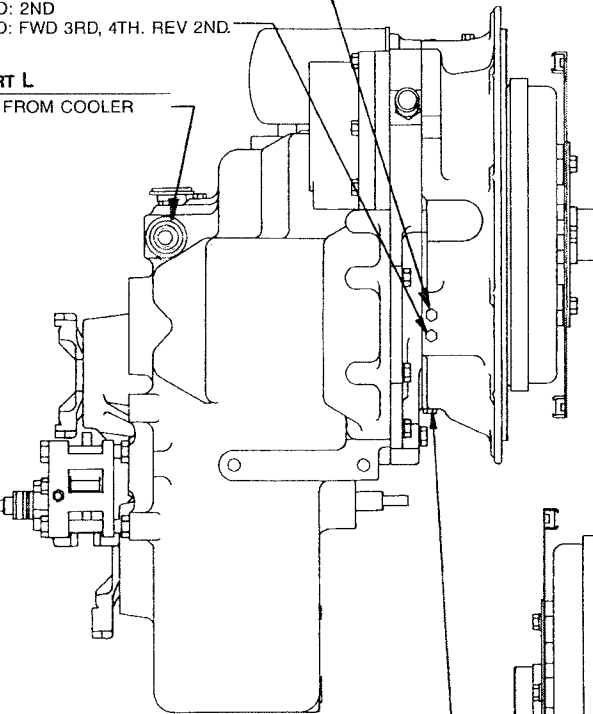

RIGHT SIDE VIEW

PORT F (43)

CHECK PORT - CLUTCH
PRESSURE

3 SPEED: 3RD

4 SPEED: 3RD


6 SPEED: FWD 5TH, 6TH, REV 3RD.

PORT G (44)

CHECK PORT - CLUTCH
PRESSURE

4 SPEED: FWD 4TH

6 SPEED: FWD HI

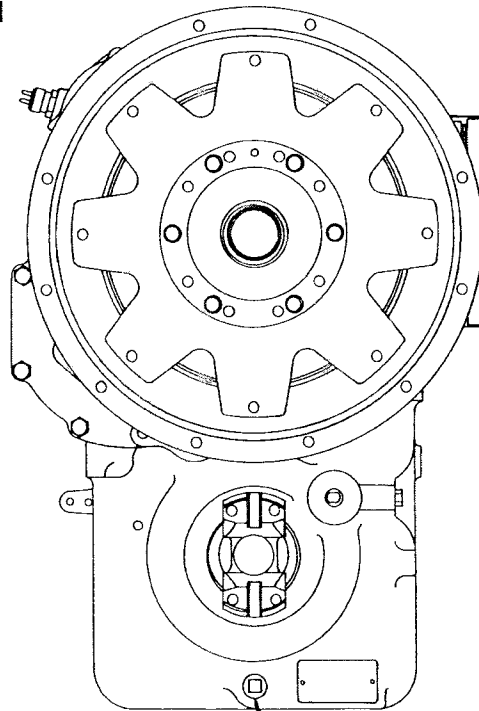

FRONT VIEW

PORT N

MAGNETIC DRAIN PLUG


PRESSURE CHECK PORT (31)
REGULATED CLUTCH PRESSURE

PORT M (45)

CHECK PORT - FORWARD
CLUTCH PRESSURE

PORT C (46)

CHECK PORT - REVERSE
CLUTCH PRESSURE

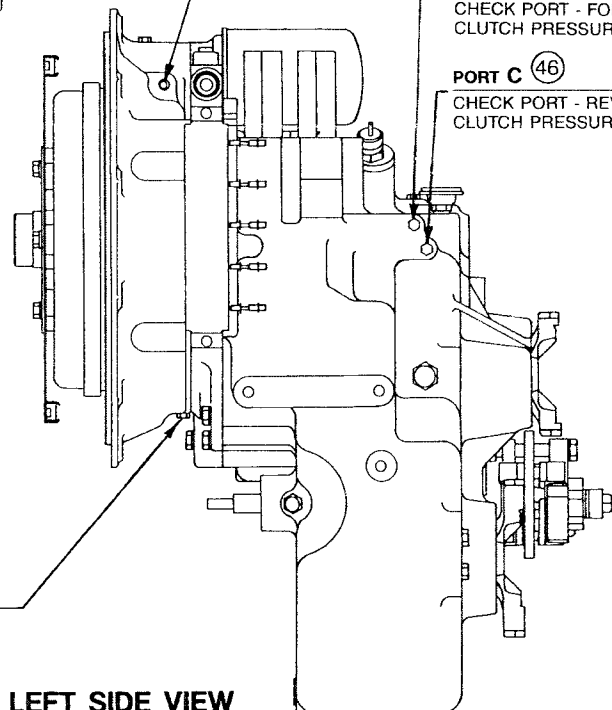

LEFT SIDE VIEW

See Pages 106 through 109 for Hydraulic Diagram.

CLEANING AND INSPECTION

CLEANING

Clean all parts thoroughly using solvent type cleaning fluid. It is recommended that parts be immersed in cleaning fluid and moved up and down slowly until all old lubricant and foreign material is dissolved and parts are thoroughly cleaned.

CAUTION: Care should be exercised to avoid skin rashes, fire hazards, and inhalation of vapors when using solvent type cleaners.

Bearings

Remove bearings from cleaning fluid and strike flat against a block of wood to dislodge solidified particles of lubricant. Immerse again in cleaning fluid to flush out particles. Repeat above operation until bearings are thoroughly clean. Dry bearings using moisture-free compressed air. Be careful to direct air stream across bearing to avoid spinning. Do not spin bearings when drying. Bearings may be rotated slowly by hand to facilitate drying process.

Housings

Clean interior and exterior of housings, bearing caps, etc., thoroughly. Cast parts may be cleaned in hot solution tanks with mild alkali solutions providing these parts do not have ground or polished surfaces. Parts should remain in solution long enough to be thoroughly cleaned and heated. This will aid the evaporation of the cleaning solution and rinse water. Parts cleaned in solution tanks must be thoroughly rinsed with clean water to remove all traces of alkali. Cast parts may also be cleaned with steam cleaner.

CAUTION: Care should be exercised to avoid inhalation of vapors and skin rashes when using alkali cleaners.

All parts cleaned must be thoroughly dried immediately by using moisture-free compressed air or soft, lintless absorbent wiping rags free of abrasive materials such as metal filings, contaminated oil, or lapping compound.

INSPECTION

The importance of careful and thorough inspection of all parts cannot be overstressed. Replacement of all parts showing indication of wear or stress will eliminate costly and avoidable failures at a later date.

Bearings

Carefully inspect all rollers: cages and cups for wear, chipping, or nicks to determine fitness of bearings for further use. Do not replace a bearing cone or cup individually without replacing the mating cup or cone at the same time. After inspection, dip bearings in Automatic Transmission Fluid and wrap in clean lintless cloth or paper to protect them until installed.

Oil Seals, Gaskets, Etc.

Replacement of spring load oil seals, "O" rings, metal sealing rings, gaskets, and snap rings is more economical when unit is disassembled than premature overhaul to replace these parts at a future time. Further loss of lubricant through a worn seal may result in failure of other more expensive parts of the assembly. Sealing members should be handled carefully, particularly when being installed. Cutting, scratching, or curling under of lip of seal seriously impairs its efficiency. Apply a thin coat of Permatex No. 2 on the outer diameter of the oil seal to assure an oil tight fit into the retainer. When assembling new metal type sealing rings, same should be lubricated with coat of chassis grease to stabilize rings in their grooves for ease of assembly of mating members. Lubricate all "O" rings and seals with recommended type Automatic Transmission Fluid before assembly.

Gears and Shafts

If magna-flux process is available, use process to check parts. Examine teeth on all gears carefully for wear, pitting, chipping, nicks, cracks, or scores. If gear teeth show spots where case hardening is worn through or cracked, replace with new gear. Small nicks may be removed with suitable hone. Inspect shafts and quills to make certain they are not sprung, bent, or splines twisted, and that shafts are true.


Housing, Covers, etc.

Inspect housings, covers, and bearing caps to be certain they are thoroughly clean and that mating surfaces, bearing bores, etc., are free from nicks or burrs. Check all parts carefully for evidence of cracks or condition which would cause subsequent oil leaks or failures.

**T12000
CALIPER BRAKE ASSEMBLY**

INSTRUCTIONS FOR LINING REPLACEMENT AND ADJUSTMENT OF PARKING BRAKE ASSEMBLY

1. Loosen two adjustment locking nuts (4 & 5) enough to slide each torque plate (16 & 18) away from disc far enough to provide clearance to remove old carrier and lining assemblies and install new ones. (It may be necessary to remove one or both nuts).
2. Collapse lining retraction spring (21) and remove from brake head assembly.
3. Slide torque plates (16 & 18) away from disc, move carrier and lining assemblies (17) out of pockets, and remove from the brake head assembly from the side.
4. Install new carrier and lining assemblies (17) in each torque plate (16 & 18).
5. Install lining retention spring (21) into brake head assembly. Be sure spring's "feet" are positioned properly in holes in both lining carrier assemblies (17).
6. Tighten inner adjusting nut (5) until firm contact is made with the disc by the linings. Torque to (100 lbs-in) 11 Nm make certain lever is in proper operating position for application.
7. Back off inner adjusting nut 4 (5) to 5 flats and check that disc is free to move (total clearance 0,8 - 1,1 mm (0.031 - 0.043)).
8. Tighten outer locking nut (4) against inner adjusting nut to lock adjustment bolt in place. Torque to (45 to 55 lb-ft.) 61 - 75 Nm.

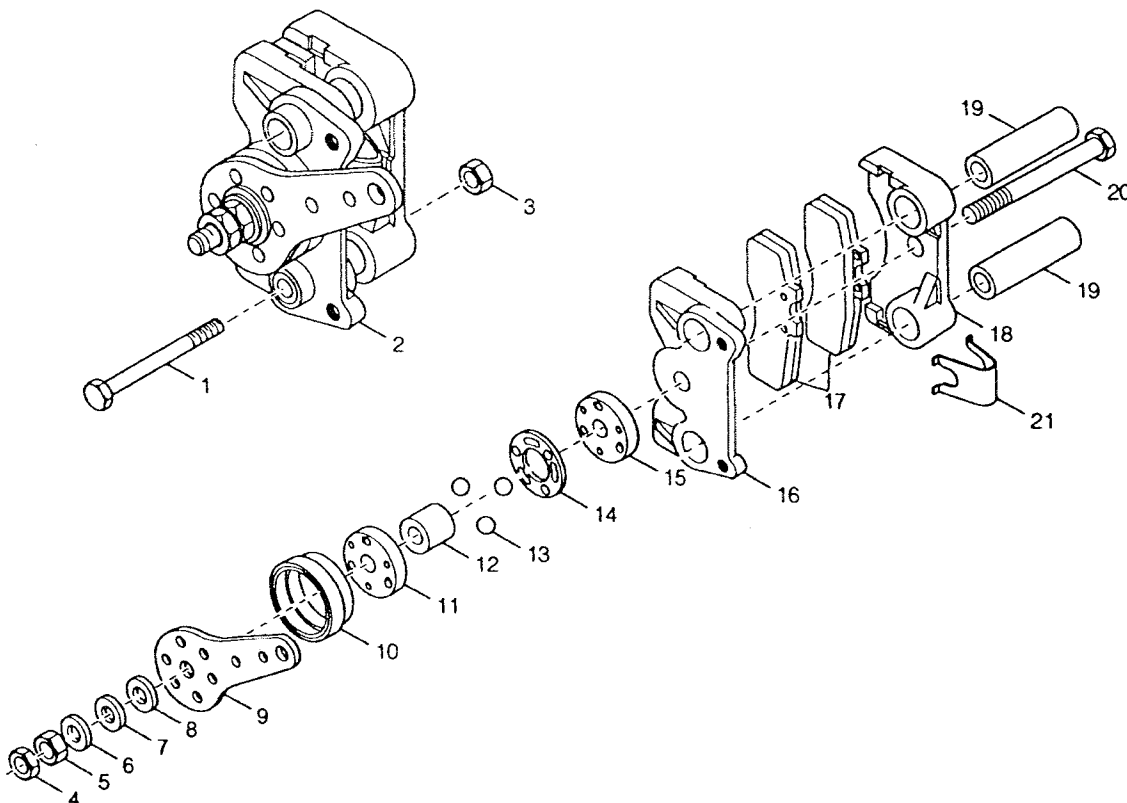

TROUBLESHOOTING GUIDE FOR THE T12000 TRANSMISSION

The following information is presented as an aid to isolating and determining the specific problem area in a transmission that is not functioning correctly.

When troubleshooting a "transmission" problem, it should be kept in mind that the transmission is only the central unit of a group of related powertrain components. Proper operation of the transmission depends on the condition and correct functioning of the other components of the group. Therefore, to properly diagnose

a suspected problem in the transmission, it is necessary to consider the transmission fluid, charging pump, torque converter, transmission assembly, oil cooler, filter, connecting lines, and controls, including the engine, as a complete system.

By analyzing the principles of operation together with the information in this section, it should be possible to identify and correct any malfunction which may occur in the system.

T12000 TRANSMISSION

T12000 (powershift with torque converter transmission troubles fall into two general categories: mechanical problems and hydraulic problems).

In addition to the mechanical components, all of which must be in the proper condition and functioning correctly, the correct functioning of the hydraulic circuit

is most important. Transmission fluid is the "life blood" of the transmission. It must be supplied in an adequate quantity and delivered to the system at the correct pressures to ensure converter operation, to engage and hold the clutches from slipping, and to cool and lubricate the working components.

TROUBLESHOOTING PROCEDURES

Stall Test: Use a stall test to identify transmission, converter, or engine problems.

Transmission Pressure Checks: Transmission problems can be isolated by the use of pressure tests. When the stall test indicates slipping clutches, then measure clutch pack pressure to determine if the slippage is due to low pressure or clutch plate friction material failure. In addition, converter charging pressure and transmission lubrication pressure may also be measured.

Mechanical Checks: Prior to checking any part of the system for hydraulic function (pressure testing), the following mechanical checks should be made:

There are only two mechanical linkages available on the transmission.

1. Mechanical inching from brake pedal to inching valve on transmission.
2. Linkage from axle disconnect to disconnect actuator.

Check the parking brake and inching pedal for correct adjustment and travel. Be sure the pedal moves freely and returns fully.

Be sure all lever linkage is properly connected and adjusted in each segment and at all connecting points.

The controls are actuated electrically. Check the wiring and electrical components.

Be sure that all components of the cooling system are in good condition and operating correctly. The

radiator must be clean to maintain the proper cooling and operating temperatures for the engine and transmission. Air clean the radiator, if necessary.

The engine must be operating correctly. Be sure that it is correctly tuned and adjusted to the correct idle and maximum no-load governed speed specifications.

Hydraulic Check: Also, before checking the transmission clutches, torque converter, charging pump, and hydraulic circuit for pressure and rate of oil flow, it is important to make the following transmission fluid check:

Check oil level in the transmission. The transmission fluid must be at the correct (full level). All clutches and the converter and its fluid circuit lines must be fully charged (filled) at all times. See NOTE below.

NOTE: The transmission fluid must be at operating temperature of [82-93° C] 180-200° F to obtain correct fluid level and pressure readings. DO NOT ATTEMPT TO MAKE THESE CHANGES WITH COLD OIL.

To raise the oil temperature to this specification it is necessary to either operate (work) the vehicle or run the engine with converter at "stall."

CAUTION: Be careful that the vehicle does not move unexpectedly when operating the engine and converter at stall R.P.M.

CONVERTER STALL PROCEDURE

1. Put the vehicle against a solid barrier, such as a wall, and/or apply the parking brake and block the wheels.
2. Put the directional control lever in FORWARD (or REVERSE, as applicable).
3. Put the speed control lever in 3rd (3 speed) (HIGH) or 6th (6 speed).
With the engine running, slowly increase engine

speed to approximately one-half throttle and hold until transmission (converter outlet) oil temperature reaches the operating range.

CAUTION: Do not operate the converter at stall condition longer than 30 seconds at one time, shift to neutral for 15 seconds and repeat the procedure until desired temperature is reached. Excessive temperature ([120° C] 250° F maximum) will cause damage to transmission clutches, fluid, converter, and seals.

TROUBLESHOOTING GUIDE

Refer to the following troubleshooting guide for the diagnosis of typical transmission troubles.

LOW CLUTCH PRESSURE

CAUSE	REMEDY
1. Low oil level.	1. Fill to proper level.
2. Clutch pressure regulating valve stuck open.	2. Clean valve spool and housing.
3. Faulty charging pump.	3. Replace pump.
4. Broken or worn clutch shaft or piston sealing rings.	4. Replace sealing rings.
5. Clutch piston bleed valve stuck open.	5. Clean bleed valves thoroughly.

LOW CHARGING PUMP OUTPUT

1. Low oil level.	1. Fill to proper level.
2. Suction screen plugged.	2. Clean suction pump.
3. Defective charging pump.	3. Replace pump.

OVERHEATING

1. Worn oil sealing rings.	1. Remove, disassemble, and rebuild converter assembly.
2. Worn charging pump.	2. Replace.
3. Low oil level.	3. Fill to proper level.
4. Dirty oil cooler.	4. Clean cooler.
5. Restriction in cooler lines.	5. Change cooler lines.

NOISY CONVERTER

1. Worn charging pump.	1. Replace.
2. Worn or damaged bearings.	2. A complete disassembly will be necessary to determine what bearing is faulty.

LACK OF POWER


1. Low engine R.P.M. at converter stall.	1. Tune engine check governor.
2. See "Overheating" and make same checks.	2. Make corrections as explained in "Overheating."

CLARK-HURTH WILL NOT SUPPLY ITEMS
INDICATED WITH *

OPERATING VOLTAGE: 9VDC - 15VDC FOR 12VDC SOLENOIDS,
OR: 18VDC - 28VDC FOR 24 VDC SOLENOIDS
: 9VDC - 28VDC FOR DELAY BOX AT 25°C
OPERATING TEMPERATURES: -20°C/+70°C

CAB CONTROL	
CAB CONTROL POSITION	CONTACTS CLOSED BETWEEN WIRES
F3	1-6 / 1-8 / 10-11
F2	1-5 / 1-6 / 1-8 / 10-11
F1	1-4 / 1-5 / 1-6 / 1-8 / 10-11
N	2-3 / 1-4 / 1-5
R1	1-4 / 1-5 / 1-7 / 1-8 / 10-11
R2	1-5 / 1-7 / 1-8 / 10-11
R3	1-7 / 1-8 / 10-11
CONTACT 10-11 OPENS IN ALL INTERMEDIATE POSITIONS	



WIRE NO.	COLOR CODE	WIRE NO.	COLOR CODE
1	WHITE	6	BLUE
2	BLACK	7	BROWN
3	RED	8	GRAY
4	YELLOW	10	VIOLET
5	GREEN	11	PINK

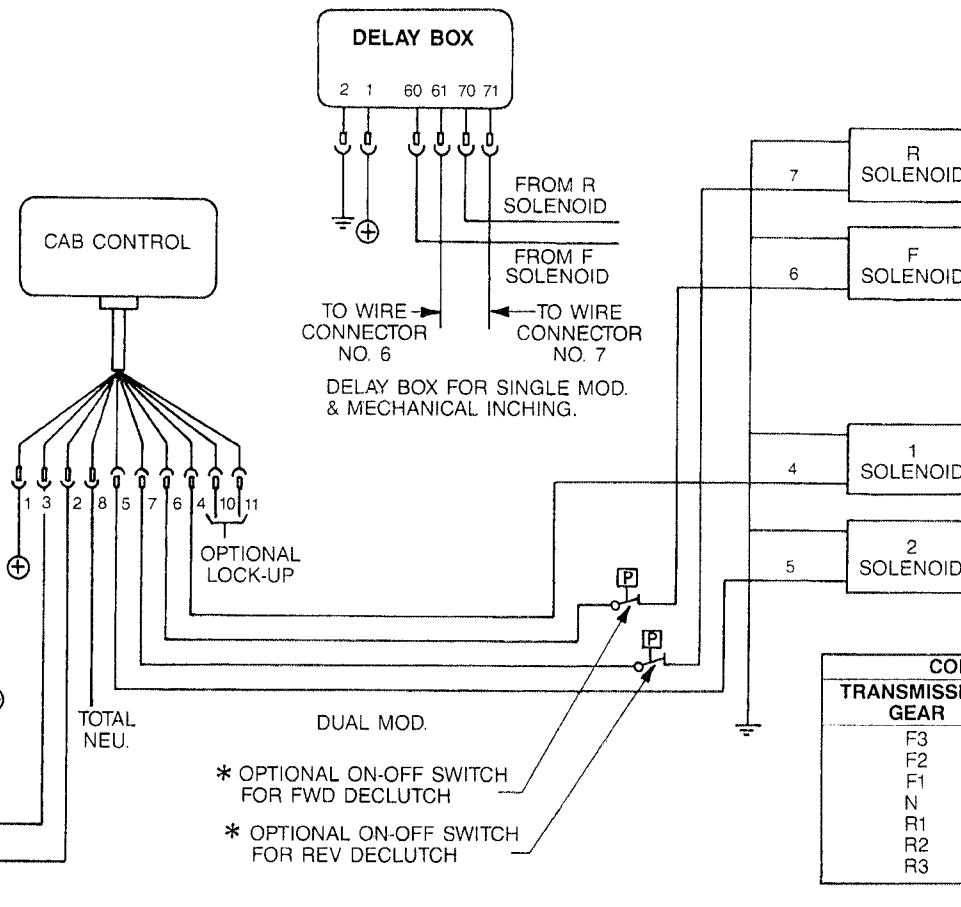


ELECTRIC SOLENOID CONTROL WIRING DIAGRAM
3 SPEED

OPERATING VOLTAGE: 9VDC - 15 VDC FOR 12VDC SOLENOIDS
OR: 18VDC - 28VDC FOR 24VDC SOLENOIDS
: 9VDC - 28VDC FOR DELAY BOX AT 25°C
OPERATING TEMPERATURES: -20°C/+70°C


WIRE NO.	COLOR CODE	WIRE NO.	COLOR CODE
1	WHITE	6	BLUE
2	BLACK	7	BROWN
3	RED	10	VIOLET
4	YELLOW	11	PINK
5	GREEN	13	LIGHT BROWN

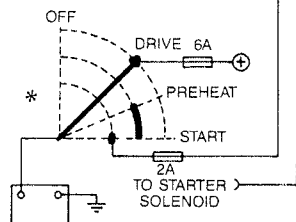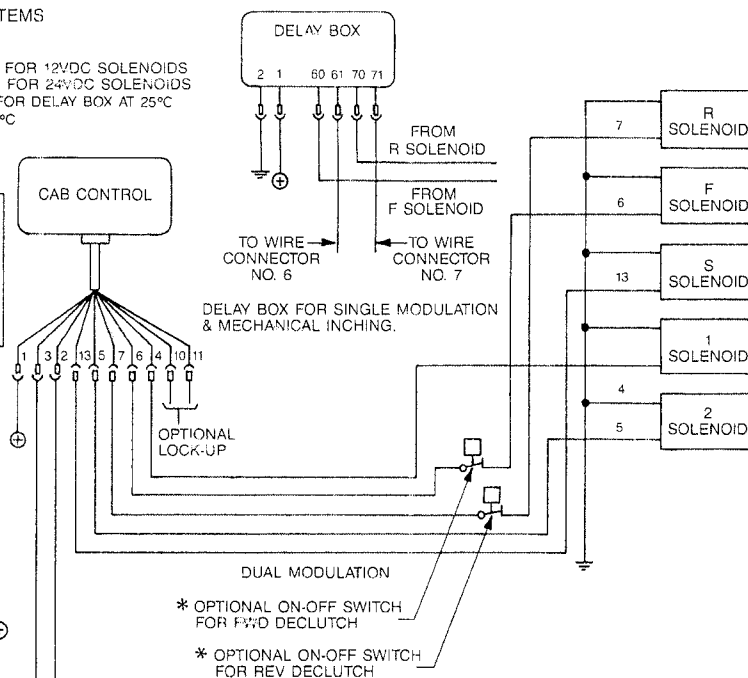

MAXIMUM ALLOWED CURRENT PER OUTPUT 2A

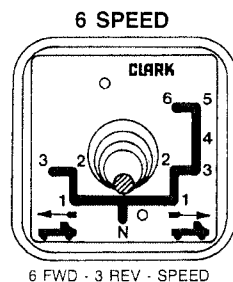

6 SPEED CLUTCHES ENGAGED	
FORWARD (FWD)	REVERSE (REV)
1st - FWD - 1st	1st - REV - 1st
2nd - FWD H1 - 1st	2nd - REV - 2nd
3rd - FWD - 2nd	3rd - REV - 3rd
4th - FWD H1 - 2nd	
5th - FWD - 3rd	
6th - FWD H1 - 3rd	

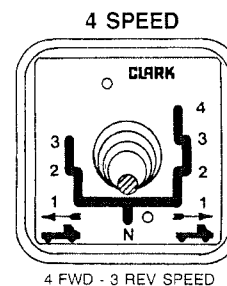

4 SPEED CLUTCHES ENGAGED	
FORWARD (FWD)	REVERSE (REV)
1st - FWD - 1st	1st - REV - 1st
2nd - FWD - 2nd	2nd - REV - 2nd
3rd - FWD - 3rd	3rd - REV - 3rd
4th - 4th - 3rd	

CAB CONTROL	
CAB CONTROL POSITION	CONTACTS CLOSED BETWEEN WIRES
F4	1-6 / 1-13 / 10-11
F3	1-6 / 10-11
F2	1-5 / 1-6 / 10-11
F1	1-4 / 1-5 / 1-6 / 10-11
N	2-3 / 1-4 / 1-5
R1	1-4 / 1-5 / 1-7 / 10-11
R2	1-5 / 1-7 / 10-11
R3	1-7 / 10-11

CONTROL VALVE	
TRANSMISSION GEAR	ACTIVATED SOLENOIDS
F4	F / S
F3	F
F2	F / 2
F1	F / 1 / 2
N	1 / 2
R1	R / 1 / 2
R2	R / 2
R3	R

CONTACT 10-11 OPENS IN ALL
INTERMEDIATE POSITIONS

CAB CONTROL	
CAB CONTROL POSITION	CONTACTS CLOSED BETWEEN WIRES
F6	1-6 / 1-13 / 10-11
F5	1-6 / 10-11
F4	1-6 / 1-5 / 1-13 / 10-11
F3	1-6 / 1-5 / 10-11
F2	1-6 / 1-5 / 1-4 / 1-13 / 10-11
F1	1-6 / 1-5 / 1-4 / 10-11
N	2-3 / 1-4 / 1-5
R1	1-7 / 1-5 / 1-4 / 10-11
R2	1-7 / 1-5 / 10-11
R3	1-7 / 10-11

CONTROL VALVE	
TRANSMISSION GEAR	ACTIVATED SOLENOIDS
F6	F / S
F5	F
F4	F / 2 / S
F3	F / 2
F2	F / 1 / 2 / S
F1	F / 1 / 2
N	1 / 2
R1	R / 1 / 2
R2	R / 2
R3	R

ELECTRIC SOLENOID CONTROL WIRING DIAGRAM 4 AND 6 SPEED

1
 2
 3
 4
 5
 6
 7
 8
 9
 10
 11
 12
 13
 14
 15
 16
 17
 18
 19
 20
 21
 22
 23
 24
 25
 26
 27
 28
 29
 30
 31
 32
 33
 34
 35
 36
 37
 38
 39
 40
 41
 42
 43
 44
 45
 46
 47
 48
 49
 50
 51
 52
 53
 54
 55
 56
 57
 58
 59
 60
 61
 62
 63
 64
 65
 66
 67
 68
 69
 70
 71
 72
 73
 74
 75
 76
 77
 78
 79
 80
 81
 82
 83
 84
 85
 86
 87
 88
 89
 90
 91
 92
 93
 94
 95
 96
 97
 98
 99
 100
 101
 102
 103
 104
 105
 106
 107
 108
 109
 110
 111
 112
 113
 114
 115
 116
 117
 118
 119
 120
 121
 122
 123
 124
 125
 126
 127
 128
 129
 130
 131
 132
 133
 134
 135
 136
 137
 138
 139
 140
 141
 142
 143
 144
 145
 146
 147
 148
 149
 150
 151
 152
 153
 154
 155
 156
 157
 158
 159
 160
 161
 162
 163
 164
 165
 166
 167
 168
 169
 170
 171
 172
 173
 174
 175
 176
 177
 178
 179
 180
 181
 182
 183
 184
 185
 186
 187
 188
 189
 190
 191
 192
 193
 194
 195
 196
 197
 198
 199
 200
 201
 202
 203
 204
 205
 206
 207
 208
 209
 210
 211
 212
 213
 214
 215
 216
 217
 218
 219
 220
 221
 222
 223
 224
 225
 226
 227
 228
 229
 230
 231
 232
 233
 234
 235
 236
 237
 238
 239
 240
 241
 242
 243
 244
 245
 246
 247
 248
 249
 250
 251
 252
 253
 254
 255
 256
 257
 258
 259
 260
 261
 262
 263
 264
 265
 266
 267
 268
 269
 270
 271
 272
 273
 274
 275
 276
 277
 278
 279
 280
 281
 282
 283
 284
 285
 286
 287
 288
 289
 290
 291
 292
 293
 294
 295
 296
 297
 298
 299
 300
 301
 302
 303
 304
 305
 306
 307
 308
 309
 310
 311
 312
 313
 314
 315
 316
 317
 318
 319
 320
 321
 322
 323
 324
 325
 326
 327
 328
 329
 330
 331
 332
 333
 334
 335
 336
 337
 338
 339
 340
 341
 342
 343
 344
 345
 346
 347
 348
 349
 350
 351
 352
 353
 354
 355
 356
 357
 358
 359
 360
 361
 362
 363
 364
 365
 366
 367
 368
 369
 370
 371
 372
 373
 374
 375
 376
 377
 378
 379
 380
 381
 382
 383
 384
 385
 386
 387
 388
 389
 390
 391
 392
 393
 394
 395
 396
 397
 398
 399
 400
 401
 402
 403
 404
 405
 406
 407
 408
 409
 410
 411
 412
 413
 414
 415
 416
 417
 418
 419
 420
 421
 422
 423
 424
 425
 426
 427
 428
 429
 430
 431
 432
 433
 434
 435
 436
 437
 438
 439
 440
 441
 442
 443
 444
 445
 446
 447
 448
 449
 450
 451
 452
 453
 454
 455
 456
 457
 458
 459
 460
 461
 462
 463
 464
 465
 466
 467
 468
 469
 470
 471
 472
 473
 474
 475
 476
 477
 478
 479
 480
 481
 482
 483
 484
 485
 486
 487
 488
 489
 490
 491
 492
 493
 494
 495
 496
 497
 498
 499
 500
 501
 502
 503
 504
 505
 506
 507
 508
 509
 510
 511
 512
 513
 514
 515
 516
 517
 518
 519
 520
 521
 522
 523
 524
 525

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

[illegible]

T-12000 3 SPEED HYDRAULIC DIAGRAM WITH DUAL MODULATION

See Pages 96 and 97 for Port Location.

CONNECTION POINTS AND MEASURE POINTS
CORRESPOND WITH PORTS WITH SAME NUMBER
ON THE EXTERNAL PLUMBING AND PRESSURE

CLARK-HURTH WILL NOT SUPPLY ITEMS
INDICATED WITH *

HOSE LINE OPERATING REQUIREMENT

PRESSURE LINES - SUITABLE FOR OPERATION
FROM AMBIENT TO 250° F [121° C] CONTINUOUS
OPERATING TEMPERATURE. MUST WITHSTAND 300
psi [2065 kPa] CONTINUOUS PRESSURE, WITH 600
psi [4137 kPa] INTERMITTENT SURGES. REFERENCE
SAE NO. J517,100R1 HYDRAULIC HOSE
SPECIFICATION

ALL HOSE LINES USED MUST CONFORM TO SAE
SPEC NO. J1019 TESTS AND PROCEDURES FOR
HIGH TEMPERATURE TRANSMISSION OIL HOSE

ALL HOSE LINES AND FITTINGS .75 [19.0] ID UNLESS
NOTED

OIL SPECIFICATION

SEE SERVICE MANUAL FOR LUBRICATION
SPECIFICATIONS

PORT 71- "CONV. OUT" TEMPERATURE

GAUGE IS TO BE LOCATED IN THE OPERATOR
COMPARTMENT

OIL TEMPERATURE GAUGE SPECIFICATIONS:

NORMAL OPERATING TEMPERATURE:

180-250° F [82-121° C]

RED LINE TEMPERATURE:

250° F [121° C]

MAXIMUM OPERATING TEMPERATURE:

300° F [149° C]

PORT 32 - "TO COOLER" PRESSURE

PRESSURE MUST BE MEASURED DURING NORMAL
VEHICLE "PRODUCTION LINE" TEST. "TO COOLER"
PRESSURE EQUALS THE TOTAL PRESSURE DROP
OF THE HEAT EXCHANGER, HEAT EXCHANGER
LINES AND BACK PRESSURE OF THE
TRANSMISSION LUBRICATION SYSTEM

TEST CONDITIONS:

1. "TO COOLER" OIL TEMPERATURE

180-220° F [82-104° C]


2. TRANSMISSION IN NEUTRAL

OPERATING SPECIFICATIONS:


25 psi [173 kPa] MIN PRESSURE AT 2000 RPM

ENGINE SPEED AND MAX OF 140psi [965 kPa]



OUTLET PRESSURE AT NO LOAD GOVERNOR SPEED

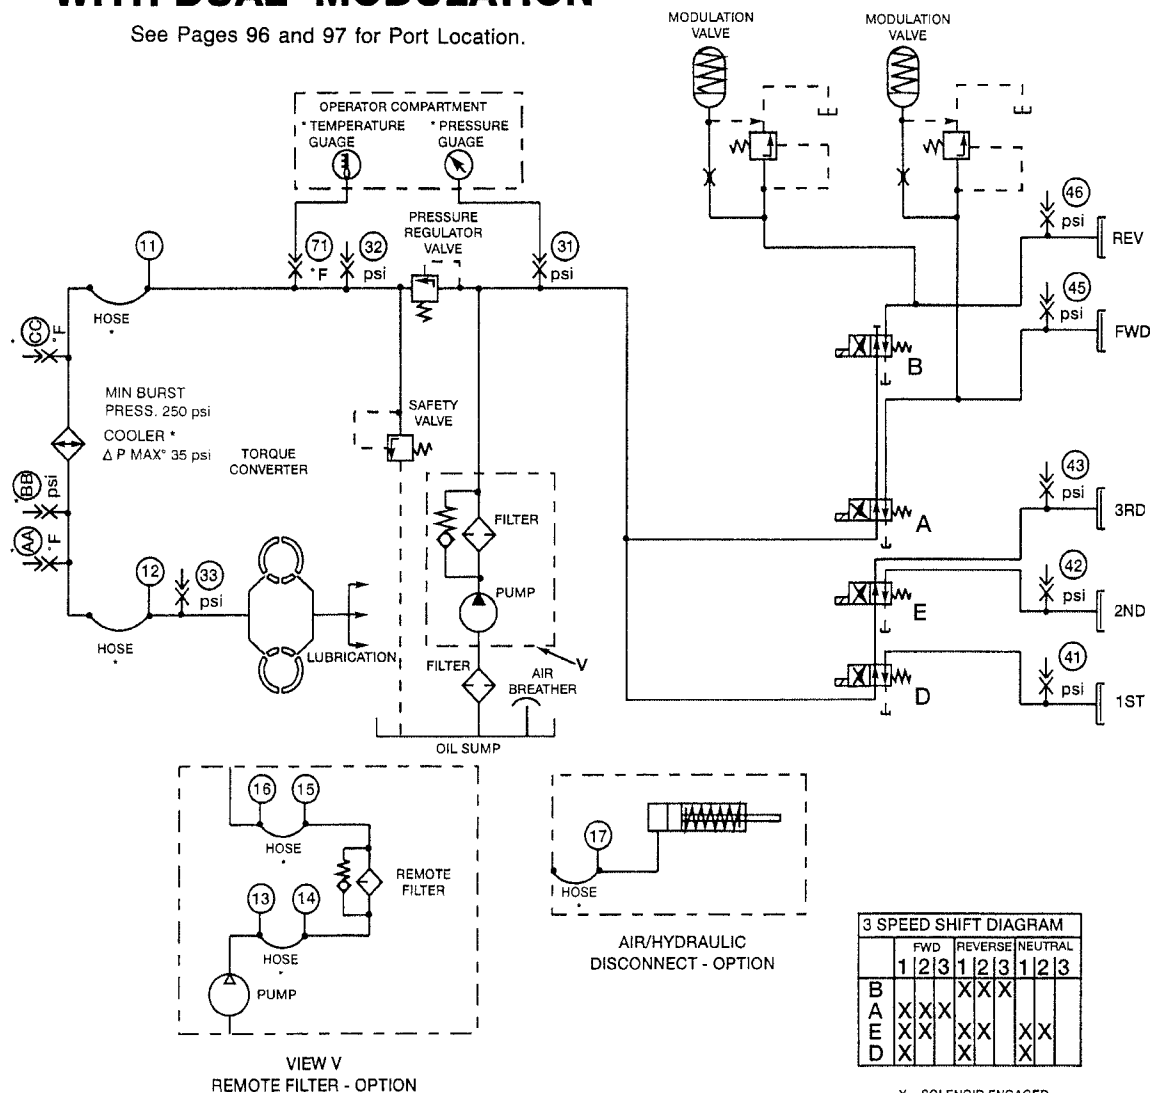


T-12000 3 SPEED HYDRAULIC DIAGRAM WITH MODULATION AND INCHING

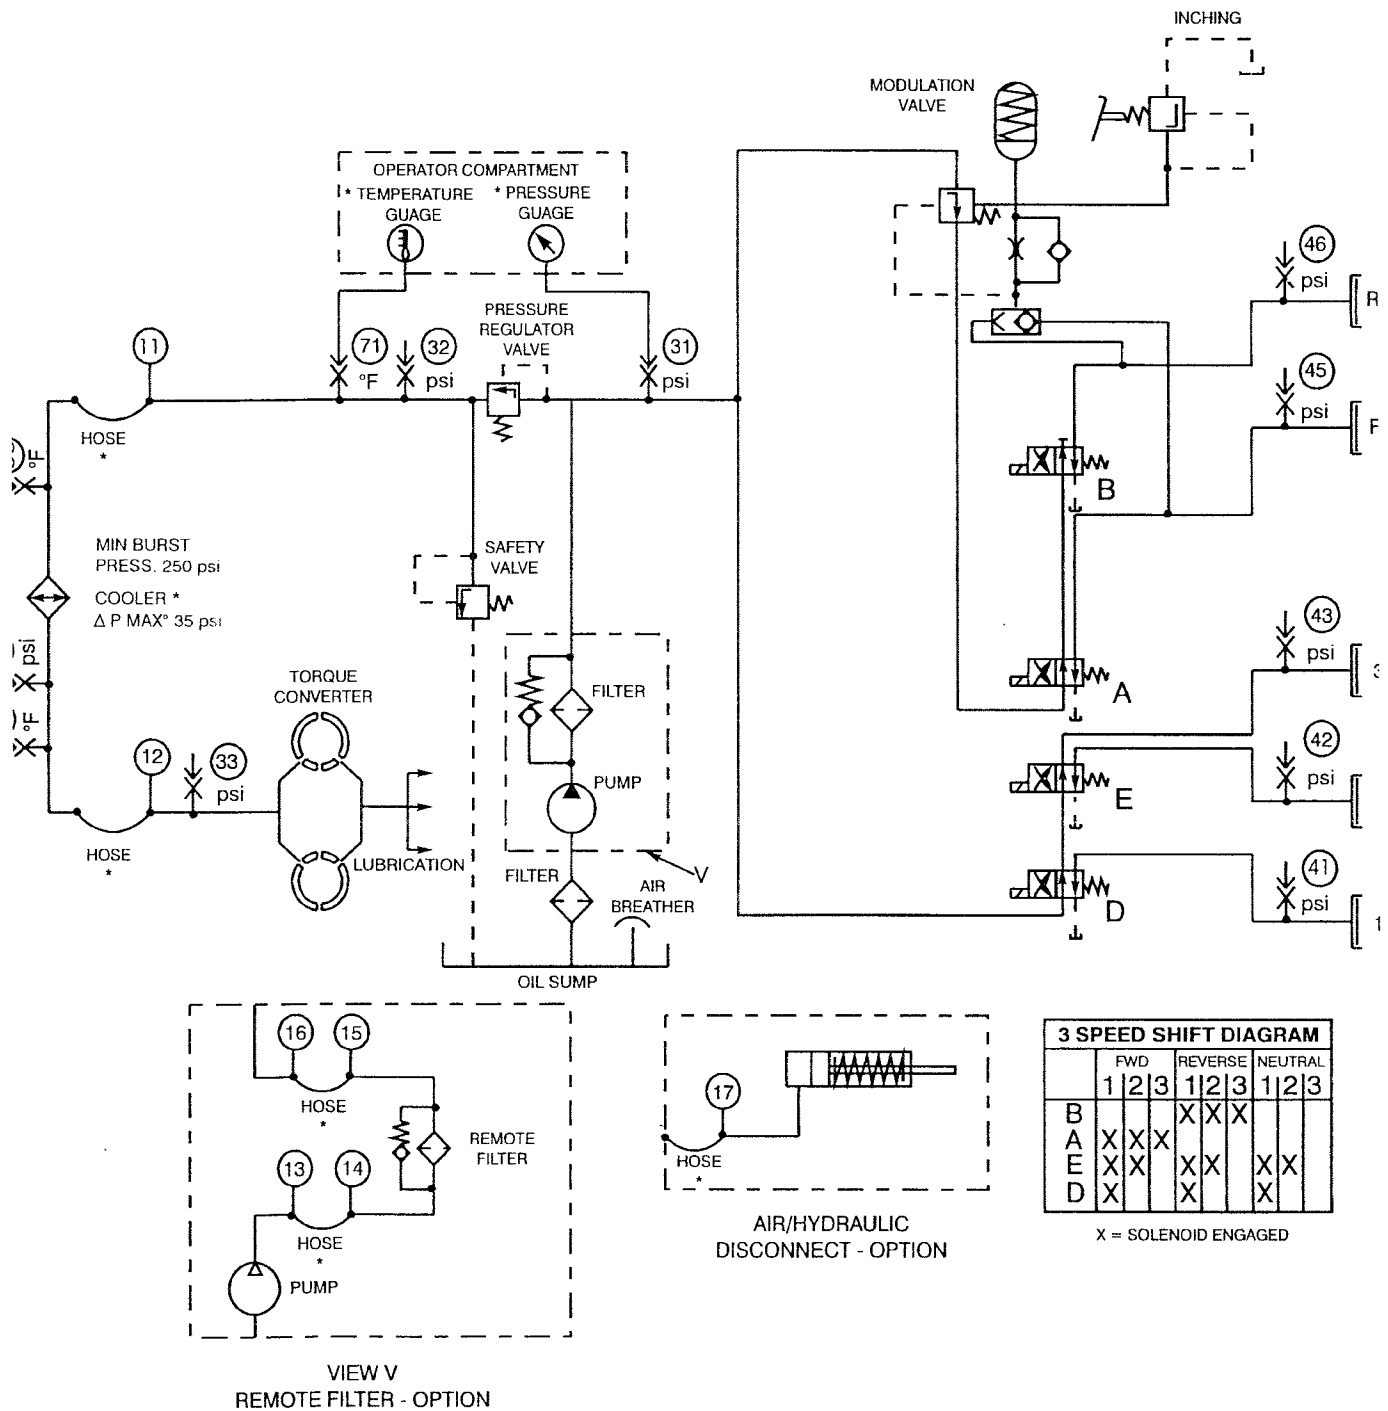

T-12000 4&6 SPEED HYDRAULIC DIAGRAM WITH DUAL MODULATION

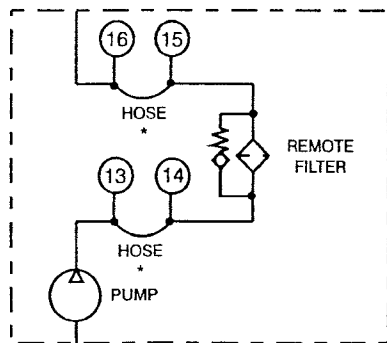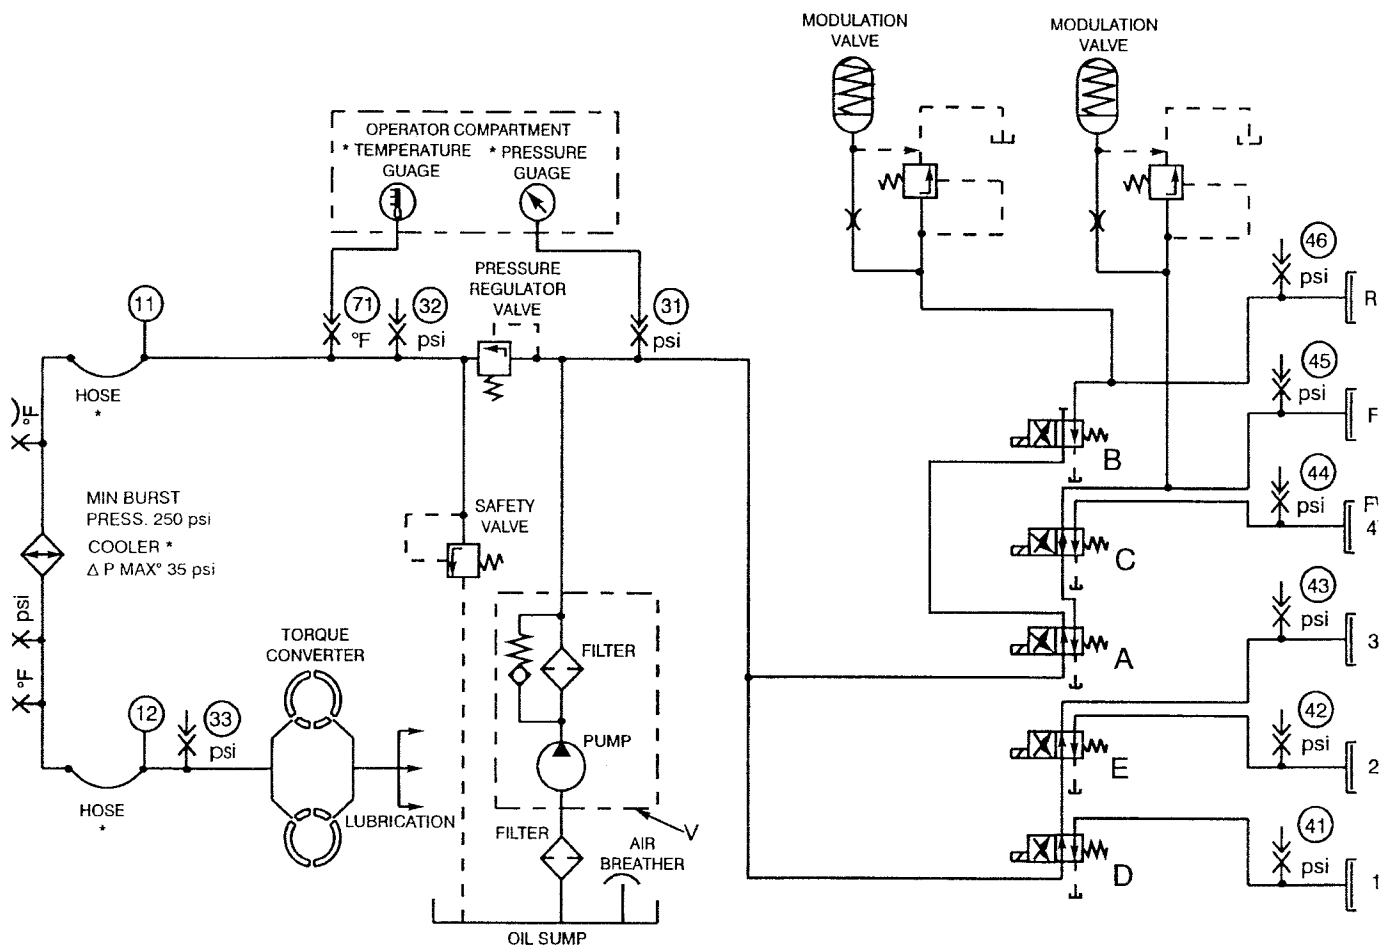

VIEW V
REMOTE FILTER - OPTION

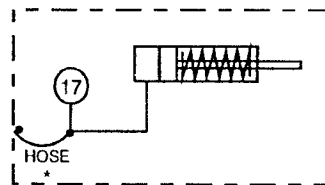

AIR/HYDRAULIC
DISCONNECT - OPTION



3 SPEED SHIFT DIAGRAM									
	FORWARD				REVERSE			NEUTRAL	
	1	2	3	4	1	2	3	1	2
B					X	X	X		
C									
A	X	X	X	X					
E	X	X	X		X	X		X	X
D	X				X			X	

X = SOLENOID ENGAGED


6 SPEED SHIFT DIAGRAM												
	FORWARD						REVERSE			NEUTRAL		
	1	2	3	4	5	6	1	2	3	1	2	3
B							X	X	X			
C												
A	X	X	X	X	X	X						
E	X	X	X	X	X		X			X	X	
D	X	X	X							X		

X = SOLENOID ENGAGED

T-12000 4&6 SPEED HYDRAULIC DIAGRAM WITH MODULATION AND INCHING

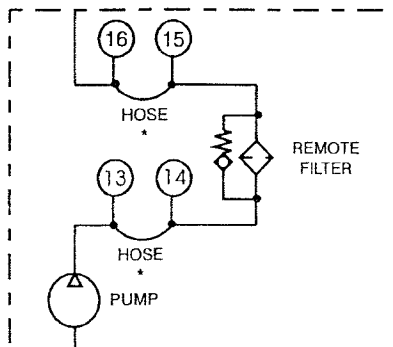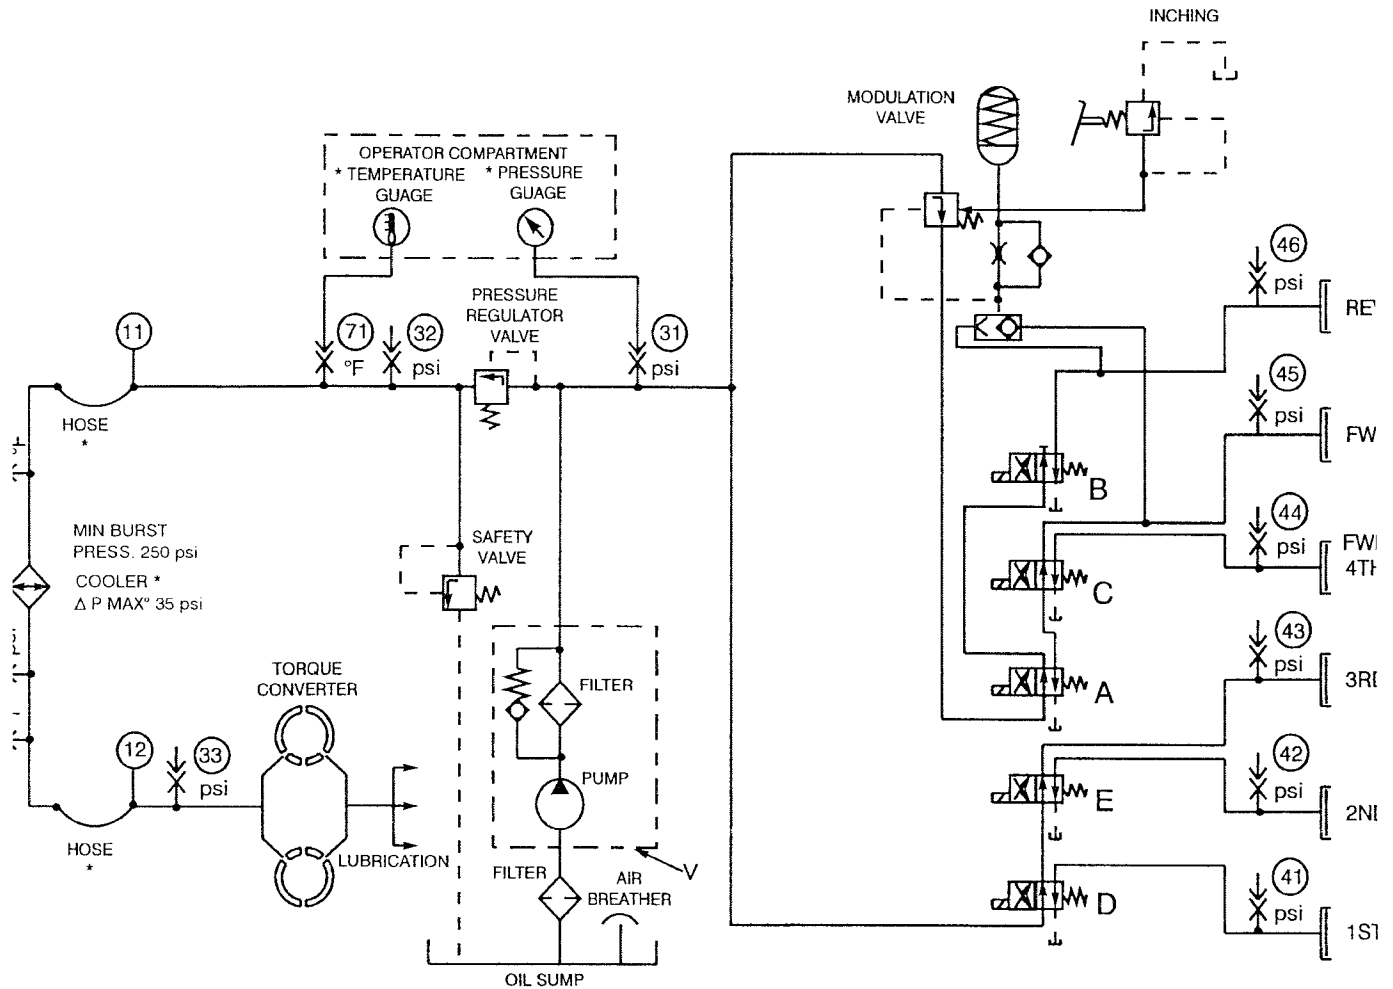

VIEW V
REMOTE FILTER - OPTION

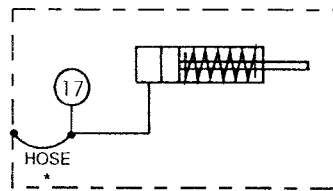

AIR/HYDRAULIC
DISCONNECT - OPTION

4 SPEED SHIFT DIAGRAM									
	FORWARD				REVERSE			NEUTRAL	
	1	2	3	4	1	2	3	1	2
B					X	X	X		
C									
A	X	X	X	X					
E	X	X	X		X	X		X	X
D	X				X			X	

X = SOLENOID ENGAGED

6 SPEED SHIFT DIAGRAM											
	FORWARD						REVERSE			NEUTRAL	
	1	2	3	4	5	6	1	2	3	1	2
B							X	X	X		
C			X	X	X	X					
A	X	X	X	X	X	X					
E	X	X	X	X			X	X		X	X
D	X	X					X			X	

X = SOLENOID ENGAGED

[illegible]

APPLICATION POLICY

Capability ratings, features and specifications vary depending upon the model and type of service. Applications approvals must be obtained from Spicer Off-Highway Products Division. We reserve the right to change or modify our product specifications, configurations, or dimensions at any time without notice.



SPICER OFF-HIGHWAY PRODUCTS DIVISION

1293 Glenway Drive
Statesville, NC 28625
Tel: 704.878.5801 Fax: 704.878.5860